



# **E22-xxxT30D User Manual**

**AT command 30dBm LoRa wireless module**



## Contents

Disclaimer and Copyright Notice .....	4
1. Product Overview .....	5
1.1 Product introduction .....	5
1.2 Features .....	5
1.3 Application scenarios .....	6
2. Specifications .....	6
2.1 RF parameters .....	6
2.2 Electrical parameters .....	7
2.2.1 E22-230/400/900T30D electrical parameters .....	7
2.2.2 E22-230/400/900T30S electrical parameters .....	7
2.3 Hardware parameters .....	8
2.3.1 E22-230/400/900T30D hardware parameters .....	8
2.3.2 E22-230/400/900T30S hardware parameters .....	8
3. Mechanical dimensions and pin definitions .....	10
3.1 E22-230/400/900T30D mechanical dimensions and pin definitions .....	10
4. Recommended Connection Diagram .....	13
5. Function Description .....	14
5.1 Fixed point Transmission .....	14
5.2 Broadcast transmission .....	14
5.3 Broadcasting Address .....	14
5.4 Listening Address .....	15
5.5 Module Reset .....	15
5.6 Detailed explanation of AUX .....	15
5.6.1 Indication of Serial port data output .....	15
5.6.2 Indication of Wireless transmission .....	15
5.6.3 The module is being configured .....	16
5.6.4 Notes for AUX .....	16
6. Working Mode .....	17
6.1 Precautions for mode switching .....	17
6.2 Normal mode (Mode 0) .....	18
6.3 WOR mode (Mode 1) .....	18
6.4 Configuration mode (Mode 2) .....	18
6.5 Deep sleep mode (Mode 3) .....	18
7. Register Read and Write Control .....	19
7.1 Command format .....	19
7.2 E22-400/900T30D, E22-400/900T30S register description .....	20
7.3 E22-230T30D, E22-230T30S register description .....	23
7.4 Factory default parameters .....	26
8. AT command .....	26
8.1 AT command list .....	26
8.2 AT parameter analysis .....	28
8.3 Notes for upgrading firmware via serial port .....	29
9. Repeater networking mode .....	29

10. Configuration instructions on computer .....	31
11. Hardware Design .....	31
12. Frequently Asked Questions .....	32
12.1 Transmission distance is short .....	32
12.2 Modules are easily damaged .....	33
12.3 BER(Bit Error Rate) is high .....	33
13. Welding Operation Guidance .....	33
13.1 Reflow soldering temperature .....	33
13.2 Reflow soldering curve .....	34
14. Related Models .....	34
15. Antenna Guide .....	35
15.1 Antenna recommendations .....	35
16. Batch Packaging Methods .....	36
16.1 E22-230/400/900T30D batch packaging method .....	36
16.2 E22-230/400/900T30S batch packaging method .....	37
Revise history .....	37
About Us .....	37

## Disclaimer and Copyright Notice

The information in this document, including the URL address for reference, is subject to change without notice. The document is provided "as is" without any guarantee responsibility, including any guarantee for marketability, suitability for a specific purpose, or non-infringement, and any guarantee for any proposal, specification or sample mentioned elsewhere. This document does not bear any responsibility, including the responsibility for infringement of any patent rights caused by the use of the information in this document. This document does not grant any license for the use of intellectual property rights in estoppel or other ways, whether express or implied.

The test data obtained in the article are all obtained by the Ebyte laboratory, and the actual results may vary slightly.

We hereby declared that all brand names, trademarks and registered trademarks mentioned in this document are the property of their respective owners.

The final interpretation right belongs to Chengdu Ebyte Electronic Technology Co., Ltd.

### Notice :

Due to product version upgrades or other reasons, the contents of this manual may be changed. Ebyte Electronic Technology Co., Ltd. reserves the right to modify the contents of this manual without any hint or notice. This manual is only used as a guide. Chengdu Ebyte Electronic Technology Co., Ltd. makes every effort to provide accurate information in this manual. However, we does not guarantee that the contents of the manual are completely free of errors. All statements, information and suggestions in this manual do not constitute any express or implied guarantee.

# 1. Product Overview

## 1.1 Product introduction

E22-xxxT30x is a new generation of LoRa wireless data transmission module, this series (UART) module is based on SEMTECH high-performance RF chip and developed. Its transmit power is: 22dBm and has a variety of transmission methods. The working frequency bands are respectively 230MHz, 400MHz and 900MHz. LoRa spread spectrum technology, TTL level output, compatible with 3.3V IO port voltage.

E22-xxxT30x adopts a new generation of LoRa spread spectrum technology. lower power consumption and smaller size; supporting air wake-up, wireless Configuration, carrier monitoring, automatic repeater, communication key and other functions; supporting sub-packet length setting and customized development service is available. The six modules in the picture below have the same power but different frequency bands.



Figure 1: E22-230T30S



Figure 2: E22-400T30S



Figure 3: E22-900T30S



Figure 4: E22-230T30D

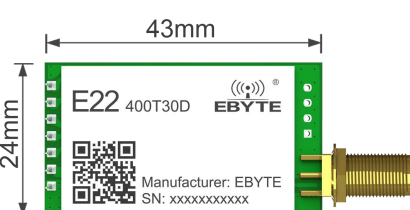


Figure 5: E22-400T30D



Figure 6: E22-900T30D

## 1.2 Features

- Adopting a new generation of LoRa spread spectrum modulation technology, it brings longer communication distance and stronger anti-interference ability;
- Supporting serial port upgrade of firmware , making it more convenient to update firmware;
- Supporting AT commands, making it more convenient to use;
- Supporting automatic repeater networking, multi-level repeaters are suitable for ultra-long-distance communications, and multiple networks can run simultaneously in the same area;
- Supporting users to set their own communication keys, which cannot be read, greatly improving the confidentiality of user data;
- Supporting LBT function, which monitors the channel environment noise before sending, which can greatly improve the communication success rate of the module in harsh environments;
- Supporting RSSI signal strength indication function for evaluating signal quality, improving communication networks, and ranging;
- Supporting wireless parameter configuration, sends command data packets wirelessly, and remotely configures or reads

wireless module parameters;

- Supporting air wake-up, an ultra-low power consumption function, suitable for battery-powered applications;
- Supporting fixed-point transmission, broadcast transmission, and channel monitoring;
- Supporting deep sleep. In this mode, the power consumption of the whole machine is about 2 uA;
- Under ideal conditions, the communication distance can reach 10 km;
- The parameters are saved when power is turned off, and the module will work according to the set parameters after powering on again;
- Efficient watchdog design, once an exception occurs, the module will automatically restart and continue to work according to the previous parameter settings;
- E22-400T30D, E22-900T30D, E22-400T30S and E22-900T30S support data transmission rates of 2.4K~62.5Kbps ;
- E22-230T30D and E22-230T30S support data transmission rates of 2.4K~15.6Kbps ;
- Supports 2.7~5.5V power supply, and any power supply greater than 5 V can ensure the best performance;
- Industrial grade standard design, supports long-term use at -40~+85°C;
- The maximum module power can reach 1 W ( 30dBm), and the transmission is farther and more stable.

## 1.3 Application scenarios

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors, etc.;
- Wireless alarm security system ;
- Building automation solutions;
- Wireless industrial grade remote control;
- Healthcare products;
- Advanced Meter Infrastructure (AMI) .

## 2. Specifications

### 2.1 RF parameters

RF parameters	unit	model			Remark
		E22-230T30D E22-230T30S	E22-400T30D E22-400T30S	E22-900T30D E22-900T30S	
Maximum transmit power	dBm	30.0±1	30.0±1	30.0±1	-
Receive sensitivity	dBm	-138	-147	-147	Air data rate is 2.4 kbps
reference distance	M	10K	10K	10K	Test condition: clear and open area, antenna gain: 5dBi, antenna placement height: 2.5m, air data rate: 2.4kbps
Working frequency	MHz	220.125~ 236.125MHz	410.125~ 493.125MHz	850.125~ 930.125MHz	Support ISM frequency band

Air speed	bps	2.4K~15.6K	2.4K~62.5K	2.4K~62.5K	Support ISM frequency band
blocking power	dBm	10	10	10	Controlled by programming
Launch length	Btyle	240	240	240	Less chance of burning when used at close range

## 2.2 Electrical parameters

### 2.2.1 E22-230/400/900T30D electrical parameters

Electrical parameters		unit	model			Remark
			E22-230T30D	E22-400T30D	E22-900T30D	
Operating Voltage		V	2.7~5.5	2.7~5.5	2.7~5.5	$\geq 5\text{ V}$ can guarantee the output power , exceeding 5.5 V will permanently burn the module .
Communication level		V	3.3V	3.3V	3.3V	There is risk of burning out by using 5V TTL
Power consumption	Transmitting current	mA	530	515	525	Instantaneous power consumption@30dBm
	Receiving current	mA	14	14	14	
	Sleep current	uA	2	2	2	Software shutdown
temperature	Operating temperature	°C	-40~+85			Industrial grade design
	Storage temperature	°C	-40~+85			Industrial grade design

### 2.2.2 E22-230/400/900T30S electrical parameters

Electrical parameters		unit	model			Remark
			E22-230T30S	E22-400T30S	E22-900T30S	
Operating Voltage		V	2.7~5.5	2.7~5.5	2.7~5.5	$\geq 5\text{ V}$ can guarantee the output power , exceeding 5.5 V will permanently burn the module .
Communication level		V	3.3V	3.3V	3.3V	There is risk of burning out by using 5V TTL
Power consumption	Transmitting current	mA	610	610	610	Instantaneous power consumption@30dBm
	Receiving	m	14	14	14	

	current	A				
	Sleep current	uA	2	2	2	Software shutdown
temperature	Operating temperature	°C	-40~+85			Industrial grade design
	Storage temperature	°C	-40~+85			Industrial grade design

## 2.3 Hardware parameters

### 2.3.1 E22-230/400/900T30D hardware parameters

Hardware parameters	model			Remark
	E22-230T30D	E22-400T30D	E22-900T30D	
Crystal frequency	32MHz			Industrial grade high-precision crystal oscillator
Modulation	LoRa			New generation LoRa modulation technology
Communication Interface	UART serial port			TTL level
Launch length	240Byte			Subpackage 32/64/128/240 bytes can be set to be sent through commands
Packaging method	Direct plug- in			-
cache capacity	1000Byte			-
Antenna interface	SMA-K			Equivalent impedance is about 50 Ω
size	24*43mm			±0.1mm
Product Weight	11g			±0.2g

### 2.3.2 E22-230/400/900T30S hardware parameters


Hardware parameters	model			Remark
	E22-230T30S	E22-400T30S	E22-900T30S	
Crystal frequency	32MHz			Industrial grade high-precision crystal oscillator
Modulation	LoRa			New generation LoRa modulation technology
Interface mode	1.27mm stamp hole			



Communication Interface	UART serial port	TTL level
Launch length	240Byte	Subpackage 32/64/128/240 bytes can be set to be sent through commands
Packaging method	SMD type	-
cache capacity	1000Byte	-
Antenna interface	IPEX/stamp hole	Equivalent impedance is about 50 $\Omega$
size	40.5*25mm	$\pm 0.1$ mm
Product Weight	5.8g	$\pm 0.05$ g

### 3. Mechanical dimensions and pin definitions


#### 3.1 E22-230/400/900T30D mechanical dimensions and pin definitions

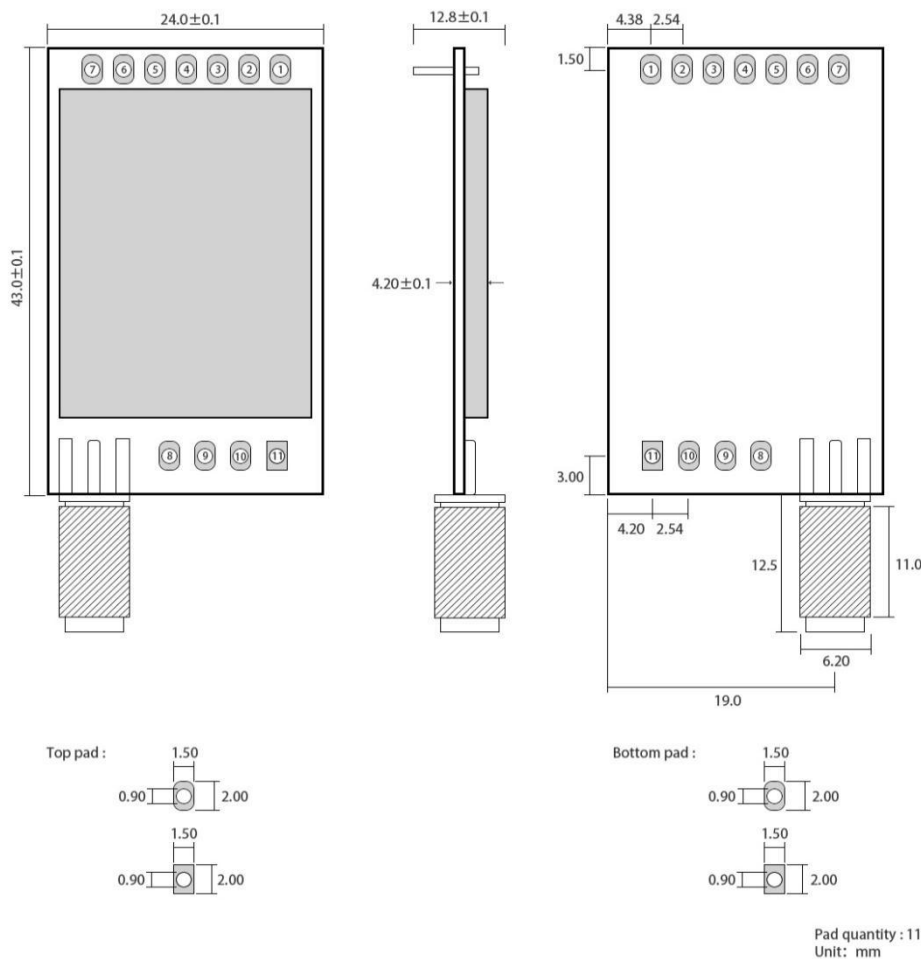

Pin number	Pin name	Pin direction	Pin usage
1	M0	Input (very weak pull-up)	Work with M1 to decide 4 working modes of the module (cannot be left floating; can be grounded if not used).
2	M1	Input (very weak pull-up)	Work with M0 to decide 4 working modes of the module (cannot be left floating; can be grounded if not used).
3	RXD	Input	TTL serial port input, connected to the external TXD output pin; Can be configured as open-drain or pull-up input, see parameter settings for details.
4	TXD	Output	TTL serial port output, connected to the external RXD input pin; Can be configured as open-drain or push-pull output, see parameter settings for details.
5	AUX	Output	Used to indicate the working status of the module; For user to wakes up the external MCU and it outputs low level during power-on self-check initialization; It can be configured as an open-drain output or push-pull output, see parameter

			settings for details. (can be left floating)
6	VCC	Input	Module power supply positive reference, voltage range: 3.3 ~ 5.5VDC
7	GND	Input	Module ground wire
8	Fixing hole	-	Fixing hole
9	Fixing hole	-	Fixing hole
10	Fixing hole	-	Fixing hole
11	Fixing hole	-	Fixing hole


### 3.2 E22-230/400/900T30S mechanical dimensions and pin definitions

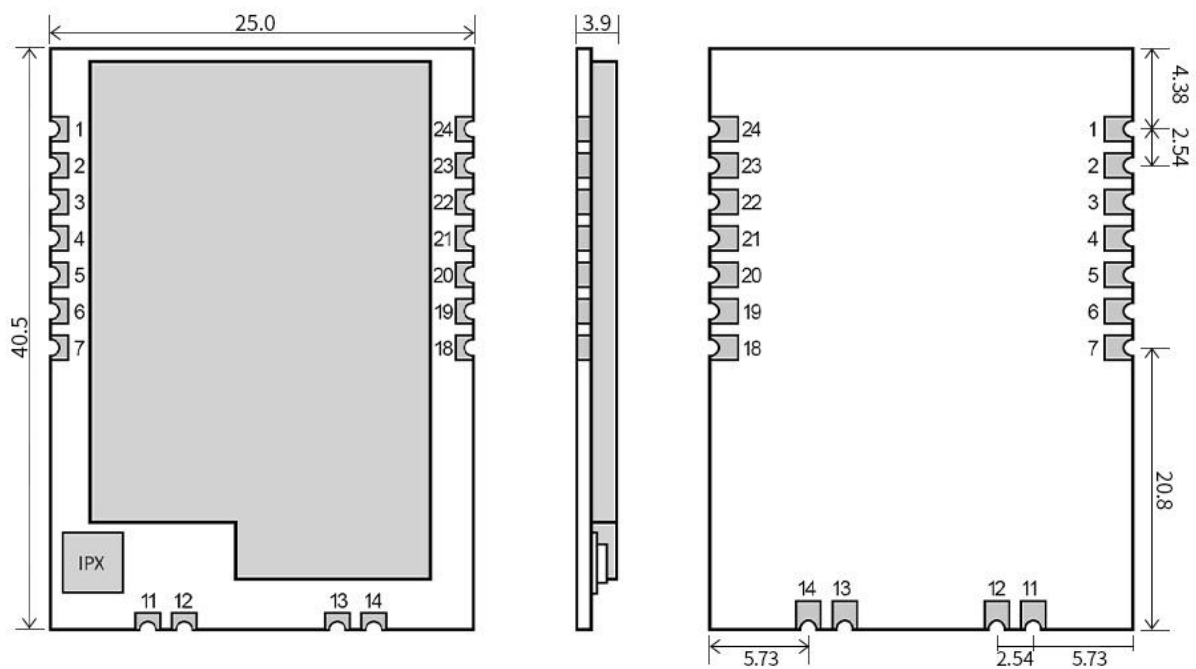

Pin number	Pin name	Pin direction	Pin usage
1	GND	Input	Module ground wire
2	VCC	Input	Module power supply positive reference, voltage range: 3.3~5.5VDC
3	AUX	Output	Used to indicate the working status of the module;

			For user to wakes up the external MCU and it outputs low level during power-on self-check initialization; (can be left floating)
4	TxD	Output	TTL Serial port output, connected to the external RXD input pin;
5	RXD	Input	TTL Serial port input, connected to the external TXD output pin;
6	M1	Input (very weak pull-up)	Work with M0 to decide 4 working modes of the module (cannot be left floating; can be grounded if not used).
7	M0	Input (very weak pull-up)	Work with M1 to decide 4 working modes of the module (cannot be left floating; can be grounded if not used).
11	ANT	Output	Antenna interface (high frequency signal output, 50ohm characteristic impedance)
12	GND	-	Fixed ground wire
13	GND	-	Fixed ground wire
14	GND	-	Fixed ground wire
18	NC	-	SWCLK
19	NC	-	SWDIO
20	NC	-	P2.4 as 485_EN
twenty one	NC	-	Internally connected to 3.3V as download power supply;
twenty two	RESET	Input	Reset pin when program is loaded (floating, user does not need to connect)
twenty three	GND	Input	Ground pin when program is loaded (floating, user does not need to connect)
twenty four	NC	-	Empty pin


## 4. Recommended Connection Diagram

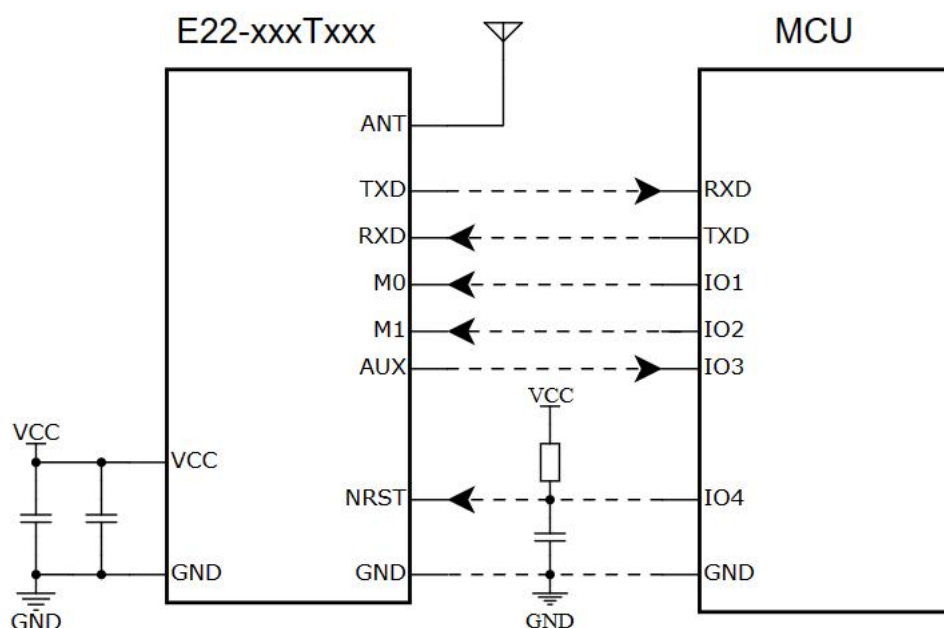


serial number	Brief connection instructions between the module and the microcontroller (the above figure takes the STM8L microcontroller as an example)
1	The wireless serial port module is TTL level, please connect it to a TTL level MCU.
2	Some 5V microcontrollers may need to add 4 to 10K pull-up resistors to the TXD and AUX pins of the module.

## 5. Function Description

### 5.1 Fixed point Transmission

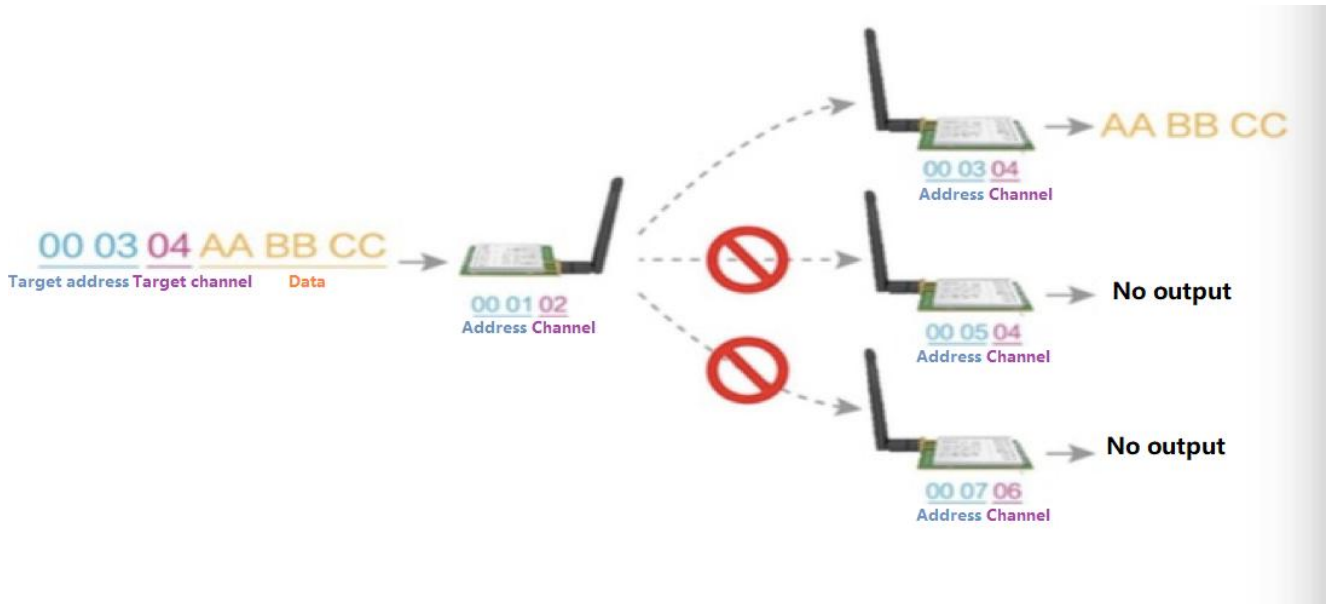

### 5.2 Broadcast transmission

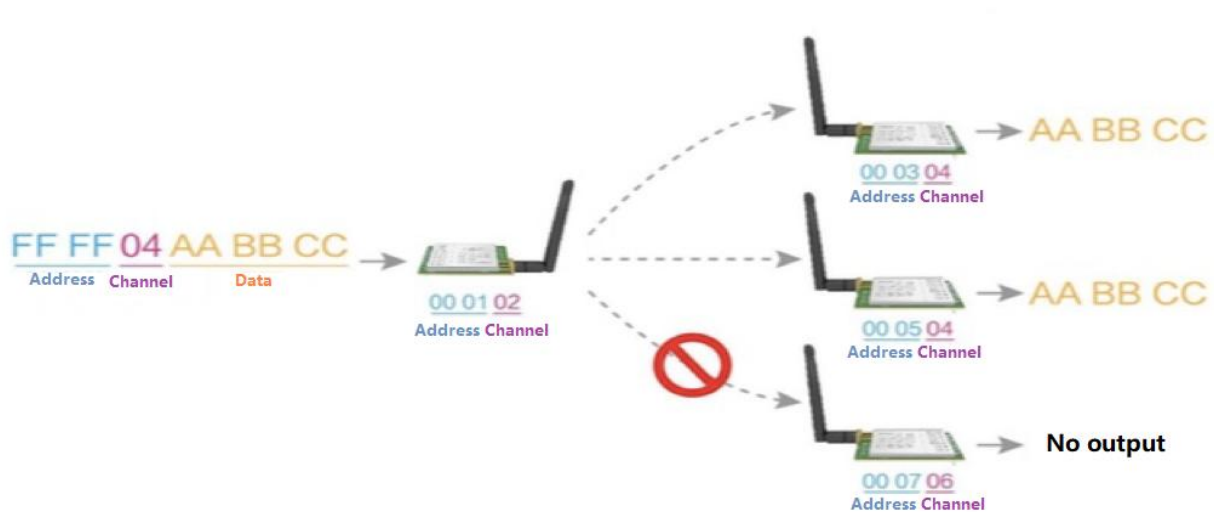

### 5.3 Broadcasting Address

- For Example: Set the address of module A to 0xFFFF and the channel to 0x04.
- When module A is used as a transmitter (same mode, transparent transmission mode), all receiving modules under the 0x04 channel can receive data to achieve the purpose of broadcasting.

## 5.4 Listening Address

- For example: Set the address of module A as 0xFFFF, and the channel as 0x04;
- When module A is the receiver, it can receive the data sent from all modules under channel 0x04, the purpose of listening is realized.

## 5.5 Module Reset


- After the module is powered on, AUX will immediately output low level, perform hardware self-check, and set the working mode according to user parameters;
- During this process, AUX keeps low level, and AUX outputs high level after completion, and starts to work normally according to the working mode formed by M1 and M0; Therefore, the user needs to wait for the rising edge of AUX as the starting point for the module to work normally.

## 5.6 Detailed explanation of AUX

- AUX Pin can be used as indication for wireless TX &RX buffer and self-check.
- It can indicate whether there is data not transmitted via wireless way, or whether the received data has not been sent through UART, or whether the module is still in the process of self-check initialization.

### 5.6.1 Indication of Serial port data output

- Used to wake up the external MCU from sleep;

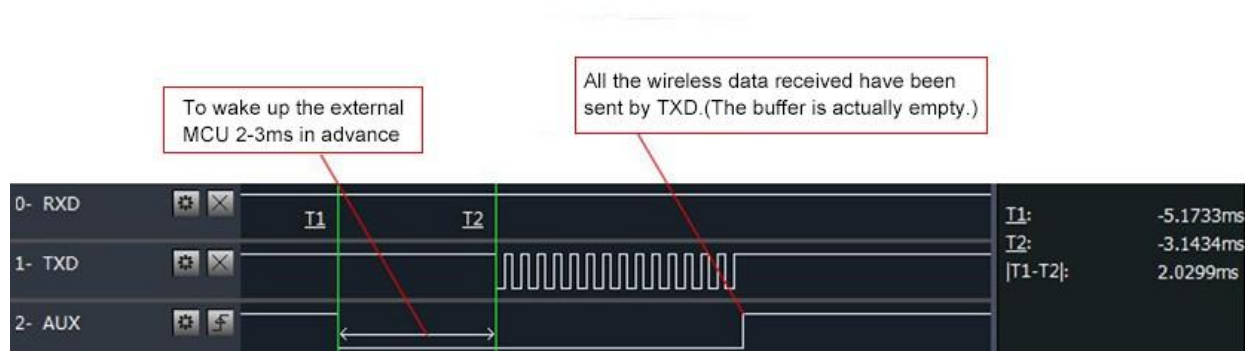


Timing Sequence Diagram of AUX when TXD pin transmits

### 5.6.2 Indication of Wireless transmission

- Buffer empty: the data in the 1000-byte buffer in the module is written to the wireless chip (automatically sub-packaging);  
When AUX=1, if user continuously sends data less than 1000 bytes, it won't overflow;  
When AUX=0, the buffer is not empty: It means data in the module's internal 1000-byte buffer has not been written to the wireless chip and has not been transmitted. At this time, the module may be waiting for the end of user input data (subject to

timeout), or the module is going on with wireless sub-package transmission.


**[Note]:** When AUX=1, it does not mean that all serial port data of the module has been transmitted through wireless; It may be the case that the last data packet is being transmitted.

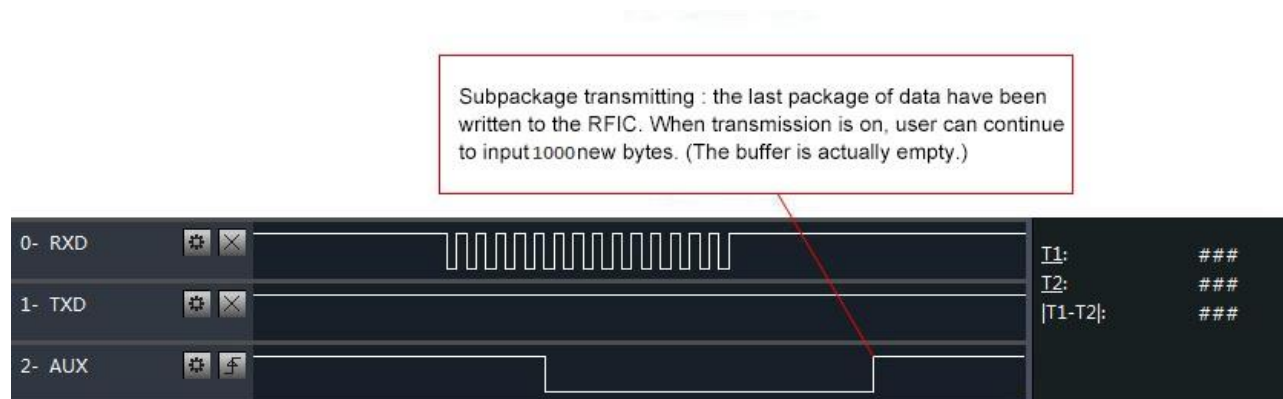

**Timing Sequence Diagram of AUX when RXD pin receives**

### 5.6.3 The module is being configured

- Only when resetting and exiting sleep mode;

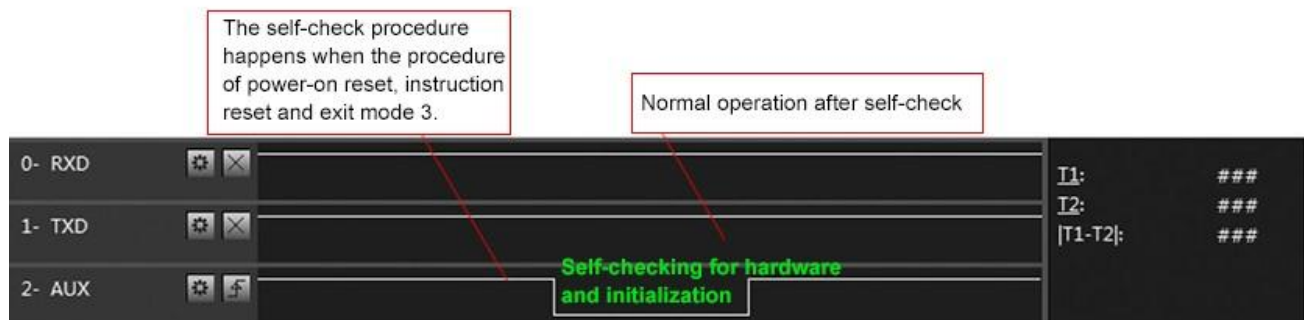

**Timing Sequence Diagram of AUX when self-check**

### 5.6.4 Notes for AUX

No.	Notes for AUX
1	For function 1 (5.6.1) & function 2 (5.6.2) mentioned above, the priority should be given to the one with low level output, which means as long as any output low level condition is met, AUX will output low level; Only when none of the output low level condition is met, AUX will outputs high level.
2	When AUX outputs low level, it means the module is busy & it won't conduct working mode checking. Within 1ms since AUX outputs high level, the module working mode switch will be completed.
3	After switching to new working mode, module will not work in the new mode immediately until AUX rising edge lasts for 2ms. If AUX is always at high level, then the mode switch will take effect immediately;
4	When the user switches to other working modes from mode 3 (sleep mode) or it is still in reset process, the module will reset user parameters, during which AUX outputs low level.
5	Due to the characteristics of the LoRa modulation method, the information transmission delay is much longer than FSK. To avoid communication abnormalities caused by data accumulation and data loss, customer is suggested not to transmit large amounts of data at low air data rate.



## 6. Working Mode

The module has four working modes, which are set by pins M1 and M0; details are shown in the following table:

Mode (0-3)	M1	M0	Mode introduction	Remark
0 Transmission Mode	0	0	UART and wireless channel are open, transparent transmission is on	Support over-the-air configuration via special command
1 WOR Mode	0	1	Can be set as WOR Transmitter or WOR Receiver	Support wake up over the air
2 Configuration Mode	1	0	Users can access the registers through the serial port to control the working status of the module	
3 Deep Sleep Mode	1	1	Module goes to sleep	

### 6.1 Precautions for mode switching

No.	Remark
1	<ul style="list-style-type: none"> <li>Users can combine high and low levels with M1 and M0 to determine the module's working mode. Two GPIOs of the MCU can be used to control mode switching;</li> <li>After changing M1 and M0: If the module is idle, after 1ms, it can start working according to the new mode;</li> <li>If there is serial port data of the module not been transmitted through the wireless, the new working mode can be switched after the transmission is completed;</li> <li>If the module receives the wireless data and transmits the data through the serial port, it needs to finish transmission before switching to the new working mode;</li> <li>Therefore, mode switching can only be valid when AUX output is 1, otherwise it will delay switching</li> </ul>
2	<ul style="list-style-type: none"> <li>For example, users continuously inputs a large amount of data and simultaneously performs mode switching. At this time, the switching mode operation is invalid; the module will process all the user data before performing the new mode detection;</li> <li>Therefore, the general recommendation is to detect the output state of the AUX pin and switch mode after 2ms when AUX outputs high level.</li> </ul>
3	<ul style="list-style-type: none"> <li>When the module is switched to sleep mode from other modes, if there is data not been processed yet, the module will process these data (including receiving and sending) before entering sleep mode. This feature can be used for fast sleep to save power;</li> <li>For example, the transmitter module works in mode 0, the user transmits the serial port data "12345". At the time, user does need to wait for the AUX pin to be idle (high level), user can directly switch the module to sleep mode and make user's main MCU immediately sleep, then the module will automatically transmit the user data through the wireless, and will enters sleep mode within 1ms automatically; This will saves MCU's working time and reduces its power consumption.</li> </ul>
4	<ul style="list-style-type: none"> <li>Similarly, any mode switching can use this feature. After the module processes the event in the current mode, it will automatically enter the new mode within 1ms; This saves the user's work of querying AUX and it achieves the purpose of fast switching;</li> <li>For example, switching from the transmit mode to the receive mode; the user MCU can also enter sleep before the mode switch, and use the external interrupt function to acquire the AUX change, thereby performing mode switching.</li> </ul>
5	<ul style="list-style-type: none"> <li>This operation mode is very flexible and efficient. It is designed according to the user's MCU's operation convenience, and it can reduce the workload of the entire system as much as possible, improving system efficiency, and reducing power consumption as well..</li> </ul>

## 6.2 Normal mode (Mode 0)

Type	When M0 = 0, M1 = 0, module works in Mode 0
Transmitting	Users can input data through the serial port and the module will start wireless transmission.
Receiving	The module wireless receiving function is turned on, and after receiving the wireless data, it will be output through the serial port TXD pin.

## 6.3 WOR mode (Mode 1)

Type	When M0 = 1, M1 = 0, module works in Mode 1
Transmitting	When defined as the transmitter, the wake-up code for a certain period of time will be automatically added before transmitting
Receiving	Data can be received normally, and the receiving function is equivalent to that in mode 0

## 6.4 Configuration mode (Mode 2)

type	When M0 = 0, M1 = 1, the module works in mode 2
Transmitting	Wireless transmission is turned off and it will be automatically turned on during wireless configuration.
Receiving	Wireless reception is turned off and it will be automatically turned on during wireless configuration.
Configuration	Users can access registers to configure module's working status

## 6.5 Deep sleep mode (Mode 3)

Type	When M0 = 1, M1 = 1, module works in Mode 3
Transmitting	Unable to transmit wireless data.
Receiving	Unable to receive wireless data.
Note	When entering other modes from sleep mode, the module will reconfigure parameters. During the configuration process, AUX stays in low level; After completion of configuration, AUX will output a high level, so user is recommended to detect the rising edge of AUX.

## 7. Register Read and Write Control

### 7.1 Command format

In configuration mode (mode 2: M0 = 0, M1 = 1), the list of supported commands are as follows (**when setting, only 9600, 8N1 format is supported**):

No.	Command format	Detailed description
1	Set register	Command: C0+starting address+length+parameters Response: C1+starting address+length+parameters  E.g 1: Configure Channel to be 0x09 command  starting address  length  parameter Send:      C0                  05          01          09 Return:   C1                  05          01          09  E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K). Send: C0 00 04 12 34 00 62 Return: C1 00 04 12 34 00 62
2	Read register	Command: C1+starting address+ length Response: C1+starting address+length+parameters  E.g 1:  Read channel command  starting address  length  parameter Send:      C1                  05          01 Return:   C1                  05          01          09  E.g 2: Read module address, network address, serial port and air data rate. Send: C1 00 04 Return: C1 00 04 12 34 00 62
3	Set temporary register	Command: C2+starting address+length+parameters Response: C1+starting address+length+parameters  E.g 1: Configure Channel to be 0x09 command  starting address  length  parameter Send:      C2                  05          01          09 Return:   C1                  05          01          09  E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K). Send: C2 00 04 12 34 00 62 Return: C1 00 04 12 34 00 62
4	Wireless configuration	Command: CF CF + normal command Respond:  CF CF + normal respond  E.g 1: Configure Channel to be 0x09 by wireless configuration Command head  command  starting address  length  parameter Send:      CF CF          C0          05          01          09 Return:   CF CF          C1          05          01          09  E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K) by wireless configuration. Send: CF CF C0 00 04 12 34 00 62 Return: CF CF C1 00 04 12 34 00 62

5	wrong format	Format error response FF FF FF
---	--------------	-----------------------------------

## 7.2 E22-400/900T30D, E22-400/900T30S register description

No.	Read or Write	Name	Description				Remark	
00H	Read/ Write	ADDH	ADDH (default 0)				High byte and low byte in the module address; Note: When the module address is FFFF, it can be used as the broadcast and listening address, that is: the module will not perform address filtering.	
01H	Read/ Write	ADDL	ADDL (default 0)					
02H	Read/ Write	NETID	NETID (default 0)				Network address, used to distinguish the network. When two or more modules need to communicate with each other, their network address should be the same.	
03H	Read/ Write	REG0	7	6	5	UART Serial port rate （bps）		For the two modules communicating with each other, their serial port baud rate can be different, and their serial parity bit can also be different.  When transmitting large packets continuously, users need to consider the data blocking and possible data loss caused by the same baud rate.  It is generally recommended that both communication parties have the same baud rate.
			0	0	0	Serial port baud rate 1200		
			0	0	1	Serial port baud rate 2400		
			0	1	0	Serial port baud rate 4800		
			0	1	1	Serial port baud rate 9600（default）		
			1	0	0	Serial port baud rate 19200		
			1	0	1	Serial port baud rate 38400		
			1	1	0	Serial port baud rate 57600		
			1	1	1	Serial port baud rate 115200		
			4	3	Serial port parity bit		The communication parties can have different serial parity bit.	
			0	0	8N1（default）			
			0	1	8O1			
			1	0	8E1			
			1	1	8N1（equal to 00）			
			2	1	0	Wireless air data rate （bps）		The communication parties must have the same air data rate.  The higher the air data rate is, the smaller the delay in response, and the shorter the transmission distance is.
			0	0	0	Air data rate 2.4K		
			0	0	1	Air data rate 2.4K		
			0	1	0	Air data rate 2.4k（default）		
			0	1	1	Air data rate 4.8k		
			1	0	0	Air data rate 9.6k		
1	0	1	Air data rate 19.2k					
1	1	0	Air data rate 38.4k					
1	1	1	Air data rate 62.5k					
04H	Read/ Write	REG1	7	6	Sub packet setting		When the data sent is smaller than the sub packet length, the serial output of the receiving end is an uninterrupted continuous output.	
			0	0	240 bytes（default）			

			0	1	128 bytes	When the data sent is larger than the sub packet length, the serial port in receiving end willsub packet the data and then output them.	
			1	0	64 bytes		
			1	1	32 bytes		
			5	RSSI environmental noise enable			RSSI enable command (Sub packet setting, transmit power as default parameters, configuration mode): C0 04 01 20;
			0	Disabled (default)			
			1	Enable			After enabling, the command C0 C1 C2 C3 can be sent in the normal mode(mode 0) or WOR transmission mode (transmitter in mode 1) to read the register; Register 0x00: current environmental noise RSSI; Register 0x01: RSSI at Last Data Received (Current channel noise is: dBm = -(256 - RSSI)); Command format: C0 C1 C2 C3+start address+read length; Return: C1 + address + read length + read valid value; For example: Send: C0 C1 C2 C3 00 01 Return: C1 00 01 RSSI (the address can only start from 00)
			4	3	Reserve		
			2	Software mode switching			<b>If you use Ebyte's host computer configuration software, this bit will be turned off automatically.</b> If you don't want to use the M0 M1 pins to switch working modes, you can enable this function, and use specific serial port commands to switch modes.  Format: C0 C1 C2 C3 02 + working mode Send C0 C1 C2 C3 02 00 to switch to transparent transmission mode Send C0 C1 C2 C3 02 01 to switch to WOR mode Send C0 C1 C2 C3 02 02 to switch to configuration mode Send C0 C1 C2 C3 02 03 to switch to sleep mode Return: C1 C2 C3 02 + working mode Note: After enabling this function, WOR mode and sleep mode only support 9600 baud rate.
			0	Disabled (default)			
			1	Enable			
			1	0	Transmitting power		There is a non-linear relationship between power and current. At the maximum power, the power supply efficiency is the highest ;  Current does not decrease proportionally with lower power.
			0	0	30dBm (default)		
			0	1	27dBm		
			1	0	24dBm		
			1	1	21dBm		
05H	Read/ Write	REG2	Channel Control (CH ) 0-83 respectively represent a total of 84 channels ( applicable to the 400Mhz frequency band ) 0-80 respectively represent a total of 81 channels ( applicable to the 900Mhz frequency band )			Actual frequency = 410.125MHz + CH * 1MHz Actual frequency = 850.125MHz + CH * 1MHz	

06H	Read/ Write	REG3	7	Enable RSSI bytes			After enabled, when the module receives the wireless data, it will follow an RSSI strength byte after output via the serial port TXD
			0	Disabled (default)			
			1	Enable			
			6	Transmission mode			During fixed-point transmission, the module will identify the first three bytes of serial port data as: address high + address low + channel, and use them as wireless transmission targets.
			0	Transparent transmission (default)			
			1	Fixed point transmission			
			5	Repeater function			After the repeater function is enabled, if the target address is not the module itself, the module will start a forwarding ; In order to prevent data from being transmitted back, it is recommended to use it in conjunction with fixed-point mode ; that is, the destination address and source address are different.
			0	Disable repeater functionality (default)			
			1	Enable repeater function			
			4	LBT Enable			When enabled, wireless data will be monitored before transmission, which can avoid interference to a certain extent, but may cause data delays;  The maximum dwell time of LBT is 2 seconds. The wireless data will be transmitted forcibly after 2 seconds.
			0	Disabled (default)			
			1	Enable			
			3	WOR mode transmission control			Below operation is valid for Mode 1 only;
			0	WOR receiver （default） Working in WOR listening mode, the listening period is shown below (WOR period), which can save a lot of power consumption.			In WOR receiving mode (as WOR receiver), the delay time after wake-up can be modified. The default time is 0;  1. To modify the delay time after wake-up, WOR receiver needs to send the command C0 09 02 03 E8 in the configuration mode (C0 is writing command, 09 is the starting address of the register, 02 is the length, 03 E8 is the set delay, the maximum delay FFFF is 65535ms, if the delay is set to 0, the wake-up delay is turn off.)
			1	WOR transmitter The module receiving and transmitting functions are turned on, and a wake-up code of a period of time is added when transmitting data.			
			2	1	0	WOR cycle time	2. Data can be sent within the delay.
			0	0	0	500ms	Below description is valid for Mode 1 only;  Cycle time T = (1 + WOR) * 500ms, max.4000ms, min.500ms;
			0	0	1	1000ms	
			0	1	0	1500ms	
			0	1	1	2000ms	The longer the cycle time T (WOR listening interval period), the lower the average power consumption, but the greater the data delay.
			1	0	0	2500ms	
			1	0	1	3000ms	
			1	1	0	3500ms	Both the transmitter and the receiver must be set as the same cycle time T (very important).
			1	1	1	4000ms	
07H	Write	CRYPT_H	High byte of Key （default 0）				Write only, read returns 0;
08H	Write	CRYPT_L	Low byte of Key （default 0）				Used for encryption to avoid interception of wireless data in the air by similar modules;  The module will internally use these two bytes as a calculation factor to do a transform encryption processing for the wireless signal over the air.
80H ~ 86H	Read	PID	Product information 7 bytes				Product information 7 bytes

### 7.3 E22-230T30D, E22-230T30S register description

No.	Read or Write	Name	Description				Remark
00H	Read/ Write	ADDH	ADDH (default 0)				High byte and low byte in the module address; Note: When the module address is FFFF, it can be used as the broadcast and listening address, that is: the module will not perform address filtering.
01H	Read/ Write	ADDL	ADDL (default 0)				
02H	Read/ Write	NETID	NETID (default 0)				Network address, used to distinguish the network. When two or more modules need to communicate with each other, their network address should be the same.
03H	Read/ Write	REG0	7	6	5	UART Serial port rate（bps）	For the two modules communicating with each other, their serial port baud rate can be different, and their serial parity bit can also be different.  When transmitting large packets continuously, users need to consider the data blocking and possible data loss caused by the same baud rate.  It is generally recommended that both communication parties have the same baud rate.
			0	0	0	Serial port baud rate 1200	
			0	0	1	Serial port baud rate 2400	
			0	1	0	Serial port baud rate 4800	
			0	1	1	Serial port baud rate 9600（default）	
			1	0	0	Serial port baud rate 19200	
			1	0	1	Serial port baud rate 38400	
			1	1	0	Serial port baud rate 57600	
			1	1	1	Serial port baud rate 115200	
			4	3	Serial port parity bit		The communication parties can have different serial parity bit.
			0	0	8N1（default）		
			0	1	8O1		
			1	0	8E1		
			1	1	8N1（equal to 00）		
			2	1	0	Wireless air data rate（bps）	The communication parties must have the same air data rate.  The higher the air data rate is, the smaller the delay in response, and the shorter the transmission distance is.
			0	0	0	Air data rate 2.4k	
			0	0	1	Air data rate 2.4k	
			0	1	0	Air data rate 2.4k	
			0	1	1	Air data rate 2.4k（default）	
			1	0	0	Air data rate 4.8k	
			1	0	1	Air data rate 9.6k	
			1	1	0	Air data rate 15.6k	
			1	1	1	Air data rate 15.6k	
04H	Read/ Write	REG1	7	6	Sub packet setting		When the data sent is smaller than the sub packet length, the serial output of the receiving end is an uninterrupted continuous output.
			0	0	240 bytes（default）		
			0	1	128 bytes		
			1	0	64 bytes		When the data sent is larger than the sub packet length, the serial port in receiving end will sub packet the data and then output them.
			1	1	32 bytes		
			5	RSSI environmental noise enable			

			0	Disabled (default)		transmit power as default parameters, configuration mode): C0 04 01 20;  After enabling, the command C0 C1 C2 C3 can be sent in the normal mode(mode 0) or WOR transmission mode (trasmitter in mode 1) to read the register; Register 0x00: current environmental noise RSSI; Register 0X01: RSSI at Last Data Received (Current channel noise is: dBm = -(256 - RSSI)); Command format: C0 C1 C2 C3+start address+read length; Return: C1 + address + read length + read valid value; For example: Send: C0 C1 C2 C3 00 01 Return: C1 00 01 RSSI (the address can only start from 00)		
			1	Enable				
			4	3	Reserve			
			2	Software mode switching		<b>If you use Ebyte's host computer configuration software, this bit will be turned off automatically.</b> If you don't want to use the M0 M1 pins to switch working modes, you can enable this function, and use specific serial port commands to switch modes.  Format: C0 C1 C2 C3 02 + working mode Send C0 C1 C2 C3 02 00 to switch to transparent transmission mode Send C0 C1 C2 C3 02 01 to switch to WOR mode Send C0 C1 C2 C3 02 02 to switch to configuration mode Send C0 C1 C2 C3 02 03 to switch to sleep mode Return: C1 C2 C3 02 + working mode Note: After enabling this function, WOR mode and sleep mode only support 9600 baud rate.		
			0	Disabled (default)				
			1	Enable				
			1	0	Transmitting power			
			0	0	30dBm (default)			
			0	1	27dBm			
			1	0	24dBm			
			1	1	21dBm			
							There is a non-linear relationship between power and current. At the maximum power, the power supply efficiency is the highest ;  Current does not decrease in proportion to the decrease in power.	
			05H	Read/ Write	REG2	Channel Control (CH) 0-64 respectively represent a total of 65 channels		Actual frequency =220.125MHz + CH *0.25MHz
			06H	Read/ Write	REG3	7	Enable RSSI bytes	
0	Disabled (default)							
1	Enable							
6	Transmission mode					During fixed-point transmission, the module will identify the first three bytes of serial port data as: address high + address low + channel, and use them as wireless transmission targets.		
0	Transparent transmission (default)							
1	Fixed point transmission					After the repeater function is enabled, if the target address is not the module itself, the module will start a forwarding ;		
5	Repeater function							
0	Disable repeater functionality (default)							



			1	Enable repeater function			In order to prevent data from being transmitted back, it is recommended to use it in conjunction with fixed-point mode ; that is, the destination address and source address are different.	
			4	LBT enable			When enabled, wireless data will be monitored before transmission, which can avoid interference to a certain extent, but may cause data delays;	
			0	Disabled (default)				
			1	Enable			The maximum dwell time of LBT is 2 seconds. The wireless data will be transmitted forcibly after 2 seconds.	
			3	WOR mode transmission control			Below operation is valid for Mode 1 only;	
			0	WOR receiver （default） Working in WOR listening mode, the listening period is shown below (WOR period), which can save a lot of power consumption.			In WOR receiving mode (as WOR receiver), the delay time after wake-up can be modified. The default time is 0;  1. To modify the delay time after wake-up, WOR receiver needs to send the command C0 09 02 03 E8 in the configuration mode (C0 is writing command, 09 is the starting address of the register, 02 is the length, 03 E8 is the set delay, the maximum delay FFFF is 65535ms, if the delay is set to 0, the wake-up delay is turn off.)	
			1	WOR transmitter The module receiving and transmitting functions are turned on, and a wake-up code of a period of time is added when transmitting data.				
			2	1	0	WOR cycle time		2. Data can be sent within the delay.
			0	0	0	500ms		Below description is valid for Mode 1 only;  Cycle time T = (1 + WOR) * 500ms, max.4000ms, min.500ms;
			0	0	1	1000ms		
			0	1	0	1500ms		The longer the cycle time T (WOR listening interval period), the lower the average power consumption, but the greater the data delay.
			0	1	1	2000ms		
			1	0	0	2500ms		Both the transmitter and the receiver must be set as the same cycle time T (very important).
			1	0	1	3000ms		
			1	1	0	3500ms		
						1	1	1
07H	Write	CRYPT_H	High byte of Key （default 0）				Write only, read returns 0;  Used for encryption to avoid interception of wireless data in the air by similar modules;	
08H	Write	CRYPT_L	Low byte of Key （default 0）				The module will internally use these two bytes as a calculation factor to do a transform encryption processing for the wireless signal over the air.	
80H ~ 86H	Read	PID	Product information 7 bytes				Product information 7 bytes	

## 7.4 Factory default parameters

model	<b>E22-230T 30D, E22-230T 30S factory default parameter values: C0 00 09 00 00 00 6 3 00 28 03 00 00</b> <b>E22-400T30D, E22-400T30S factory default parameter values: C0 00 09 00 00 00 62 00 17 03 00 00</b> <b>E22-900T30D, E22-900T30S factory default parameter values: C0 00 09 00 00 00 62 00 12 03 00 00</b>						
Model No	Frequency	Address	Channel	Air data rate	Baud rate	Parity format	Transmit Power
E22-230T30D	230.125MHz	0x0000	0x28	2.4kbps	9600	8N1	30dbm
E22-400T30D	433.125MHz	0x0000	0x17	2.4kbps	9600	8N1	30dbm
E22-900T30D	868.125MHz	0x0000	0x12	2.4kbps	9600	8N1	30dbm
E22-230T30S	230.125MHz	0x0000	0x28	2.4kbps	9600	8N1	30dbm
E22-400T30S	433.125MHz	0x0000	0x17	2.4kbps	9600	8N1	30dbm
E22-900T30S	868.125MHz	0x0000	0x12	2.4kbps	9600	8N1	30dbm

## 8. AT command

- Parameter configuration or query using AT commands needs to be done in configuration mode;
- AT commands are used in configuration mode. AT commands are divided into three categories: command commands, setting commands and query commands;
- Users can query the AT command set supported by the module through "AT+HELP=?". The baud rate used by the AT command is 9600 8N1;
- When the input parameters exceed the range, they will be restricted. Please do not let the parameters exceed the range to avoid unknown situations.

### 8.1 AT command list

Command Commands	Description	Example	Example description
AT+IAP (use with caution, please see <a href="#">8.3 Precautions for Serial Port Firmware Upgrade in this article for details</a> )	Enter IAP upgrade mode	AT+IAP	Enter IAP upgrade mode
AT+RESET	Device restart	AT+RESET	Device restart
AT+DEFAULT	Restore configuration parameters to default	AT+DEFAULT	Restore configuration parameters to default

	and the device restarts		and the device restarts
--	-------------------------	--	-------------------------

Setting Commands	Description	Example	Example description
AT+UART=baud,parity	Set baud rate and parity	AT+UART=3,0	Set the baud rate to 9600, 8N1
AT+RATE=rate	Set air data rate	AT+RATE=7	Set air data rate to 62.5K/15.6K
AT+PACKET=packet	Set packet length	AT+PACKET=0	Set the packet size to 240 bytes
AT+WOR=role	Set WOR role	AT+WOR=0	Set to WOR reception
AT+POWER=power	Set transmit power	AT+POWER=0	Set the transmit power to 22dBm
AT+TRANS=mode	Set transmission mode	AT+TRANS=1	Set to fixed point transmission mode
AT+ROUTER=router	Set repeater mode	AT+ROUTER=1	Set to repeater mode
AT+LBT=lbt	Set Listen Before Talk function switch	AT+LBT=1	Setting is enabled, please refer to Section 7.2 LBT Enable for details.
AT+ERSSI=erssi	Set the environmental noise RSSI switch	AT+ERSSI=1	The setting is enabled. For details, please refer to Section 7.2 RSSI environmental Noise Function.
AT+DRSSI=data_rssi	Set the receive data RSSI switch	AT+DRSSI=1	Receive data RSSI function is turned on
AT+ADDR=addr	Set module address	AT+ADDR=1234	Set the module address to 1234
AT+CHANNEL=channel	Set module working channel	AT+CHANNEL=23	Set frequency to 433.125M
AT+NETID=netid	Set network ID	AT+NETID=2	Set network ID to 2
AT+KEY=key	Set module key	AT+KEY=1234	Set the module key to 1234
AT+DELAY=delay	Set WOR delay sleep time	AT+DELAY=1000	Set the WOR delay sleep time to 1000ms
AT+SWITCH=switch	Setting software mode switch	AT+SWITCH=1	Enable settings in configuration mode to allow software switching
AT+MODE=mode	Switch working mode	AT+MODE=0	Switch to transparent transmission mode
Setting Commands	Description	Example	Example description

Query Commands	Description	Return example	Example description
AT+HELP=?	Query AT command table		Return to AT command list
AT+DEVTYPE=?	Query module model	DEVTYPE=E22-400T30S/D	Return module model
AT+FWCODE=?	Query firmware code	FWCODE=7432-0-10	Return firmware version
AT+UART=?	Query baud rate and checksum	AT+UART=3,0	Return baud rate 9600, 8N1
AT+RATE=?	Query air speed	AT+RATE=7	Return air rate is 62.5K/15.6K
AT+PACKET=?	Query packet length	AT+PACKET=0	The returned packet is 240 bytes

AT+WOR=?	Query WOR roles and cycles	AT+WOR=0	Return as WOR receiver
AT+POWER=?	Query transmit power	AT+POWER=0	The return transmit power is 22dBm
AT+TRANS=?	Query sending mode	AT+TRANS=1	Return to fixed point mode
AT+ROUTER=?	Query relay mode	AT+ROUTER=1	Return to relay mode
AT+LBT=?	Query the Listen Before Talk function switch	AT+LBT=1	Return LBT switch status
AT+ERSSI=?	Query the environmental noise RSSI switch	AT+ERSSI=1	Return to environmental noise switch status
AT+DRSSI=?	Query RSSI output	AT+DRSSI=1	Return channel RSSI function is enabled
AT+ADDR=?	Query module address	AT+ADDR=1234	The return module address is 1234
AT+CHANNEL=?	Query module working channel	AT+CHANNEL=23	The return frequency is 433.125M
AT+NETID=?	Query network ID	AT+NETID=2	Return network ID is 2
AT+KEY=?	Query module key	Reading is not supported (security considerations)	Return ERR
AT+DELAY=?	Query WOR delayed sleep time	AT+DELAY=1000	Return to WOR delayed sleep time is 1000ms
AT+SWITCH=?	Query software switching mode switch	AT+SWITCH=0	Software switching mode is off
AT+MODE=?	Query the current working mode (can be queried in all modes)	AT+MODE=0	Returns the current transparent transmission mode

## 8.2 AT parameter analysis

When the serial port receives the correct command, the serial port will return "command=OK", otherwise it will return "=ERR"

Command parameters	Parameter meaning			
Baud ( serial port baud rate )	0:1200 4:19200	1:2400 5:38400	2:4800 6 : 57600	3:9600 7:115200
Parity ( serial port parity bit )	0:8N1	1:8O1	2:8E1	3:8N1
Rate (over-the-air data rate) Applicable to 400MHz frequency band and 900MHz frequency band	0:2.4K 4:9.6K	1:2.4K 5:19.2K	2:2.4K 6:38.4K	3:4.8K 7:62.5K
Rate (over-the-air data rate) Applicable to 230MHz frequency band	0:2.4K 4:4.8K	1:2.4K 5: 9.6K	2:2.4K 6:15.6K	3:2.4K 7:15.6K
Packet (packet length)	0: 240	1: 128	2:64	3:32
Role (WOR role)	0: Receiving      1: Transmitting			
Period (WOR period)	0:500ms	1:1000ms	2:1500ms	3:2000ms

	4:2500ms 5:3000ms 6:3500ms 7:4000ms
Power (transmit power)	0: 30dBm 1: 27dBm 2: 24dBm 3: 21dBm
Mode (transmission mode)	0: transparent 1: fixed point
Router (repeater mode)	0: Close 1: Open
LBT(listen before talk)	0: Close 1: Open
Erssi (environment RSSI)	0: Close 1: Open
Data_rssi (data RSSI)	0: Close 1: Open
Addr (module address)	Module address 0~65535 (decimal)
400MHz Channel (module channel)	Module channel 0~83 (decimal)
900MHz Channel (module channel)	Module channel 0~80 (decimal)
230MHz Channel (module channel)	Module channel 0~64 (decimal)
Netid (Network ID)	Module network 0~255 (decimal)
Key	Module key 0~65535 (decimal)
Delay (WOR delayed sleep)	Delayed sleep 0~65535 (decimal)
Mode(working mode)	0: Transparent transmission mode 1: WOR mode 2: Configuration mode

### 8.3 Notes for upgrading firmware via serial port

If the customer needs to upgrade the firmware, they need to find the corresponding BIN file provided by the official, and then use the officially provided host computer to upgrade the firmware. Generally, when users do not need to upgrade the firmware, please do not use the **"AT+IAP" command**.

The pins necessary for the upgrade must be lead out (M1, M0, AUX, TXD, RXD, VCC, GND), and then send the "AT+IAP" command in the configuration mode to enter the upgrade mode. **If you need to exit the IAP upgrade mode, you need to keep Power on and wait 60 seconds, the program will automatically exit, otherwise it will enter the upgrade mode indefinitely even if it is restarted.**

After entering the upgrade mode, the baud rate will automatically switch to 115200 until it automatically exits, during which there will be log output.

## 9. Repeater networking mode

No.	Repeater mode description
1	User need to set the repeater function in configuration mode. After setting, switch module to the normal mode. Then the repeater starts working.
2	In the repeater mode, ADDH/ADDL is no longer used as the module address, it is used as a NETID to pair and forwarding. If the repeater receive the data from a network, then it will forward the data to the other network. The network ID of the repeater itself is invalid in this case. (See below examples)
3	The repeater module cannot transmit and receive data, and cannot perform low-power operation.
4	When module enters the other modes from mode 3 (sleep mode) or during the reset process, it will reset the user parameters. During this period, AUX outputs low level.

Repeater networking rules:

1. Forwarding rules: the repeater can forward data in both directions between two NETIDs.
2. In repeater mode, ADDH\ADDL is no longer used as the module address. It is used as a NETID to pair and forwarding.

As shown in the figure:

### ① Primary repeater

“Node 1” NETID is 08.

“Node 2” NETID is 33.

ADDH\ADDL of Repeater 1 are 08, 33 respectively.

So the data sent by node 1 (08) can be forwarded to node 2 (33)

Meanwhile, node 1 and node 2 have the same address, so the data transmitted by node 1 can be received by node 2.

### ② Secondary repeater

ADDH\ADDL of Repeater 2 are 33, 05 respectively.

Therefore, Repeater 2 can forward the data of Repeater 1 to the network NETID: 05.


Thus node 3 and node 4 can receive the data from node . Node 4 outputs data normally, but no ourput from Node3 because Node 3 has a different address from Node 1.

### ③ Two-way repeater

As shown in below:

The data sent by Node 1 can be received by Node 2 and Node 4;

The data sent by by Node 2 and Node 4 can also be received by Node 1.

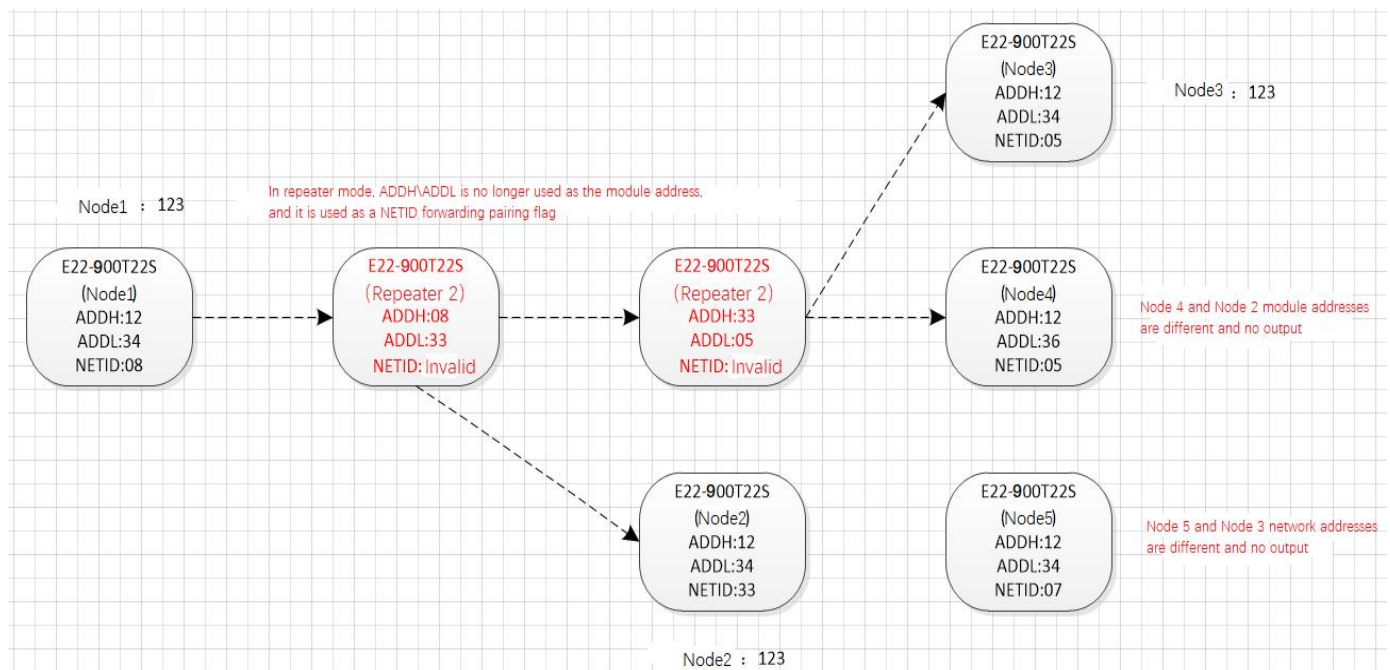

repeater mode example diagram

## 10. Configuration instructions on computer

- The following figure is the display interface of E22-900T30D configuration on computer. User can switch to the command mode through M0, M1, and quickly configure and read the parameters on computer.



- In the configuration software on computer, the module address, frequency channel, network ID, and key are all in decimal display mode; The range of values of each parameter is:

Network address: 0~65535

Frequency channel: 0~80

Network ID: 0~255

Key: 0~65535

- When user configures the repeater mode using the host computer, one point much be paid attention to: In the configuration software, each parameter is in decimal, so the module address and network ID need to be converted when set it.
- For example, in the configure software, if the network ID of Transmitter A is input 02, and the network ID of Receiver B is input 10, then the module address of Repeater R should be set as 522. (The address of Repeater R is 0X020A in hex, and it need to be converted to decimal. )

## 11. Hardware Design

- It is recommended to use a DC regulated power supply to power the module. The power supply ripple coefficient should be as small as possible, and the module must be reliably grounded;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;

- Please check the power supply to ensure that it is within the recommended power supply voltage. If it exceeds the maximum value, it will cause permanent damage to the module;
- Please check the stability of the power supply. The voltage cannot fluctuate greatly and frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% margin, so that the whole machine can work stably for a long time;
- The module should be kept as far away as possible from power supplies, transformers, high-frequency wiring and other parts with high electromagnetic interference;
- High-frequency digital wiring, high-frequency analog wiring, and power wiring must avoid the bottom of the module. If it is really necessary to pass under the module, assume that the module is welded on the Top Layer, and ground copper is laid on the Top Layer of the module contact part (all copper is laid and Good grounding), must be close to the digital part of the module and routed on the Bottom Layer ;
- Assuming that the module is welded or placed on the Top Layer, it is also wrong to route traces randomly on the Bottom Layer or other layers, which will affect the module's spurious and receiving sensitivity to varying degrees ;
- Assuming that there are devices with large electromagnetic interference around the module, which will also greatly affect the performance of the module, it is recommended to stay away from the module according to the intensity of the interference. If the situation allows, appropriate isolation and shielding can be done;
- Assuming that there are traces with large electromagnetic interference around the module (high-frequency digital, high-frequency analog, power traces), it will also greatly affect the performance of the module. It is recommended to stay away from the module according to the intensity of the interference. If the situation allows, you can make appropriate adjustments. isolation and shielding;
- If the communication line uses 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage) ;
- Try to stay away from some TTL protocols whose physical layer is also 2.4GHz, such as USB3.0;
- The antenna installation structure has a great impact on module performance. Make sure the antenna is exposed and preferably vertically upward;
- When the module is installed inside the case, you can use a high-quality antenna extension cable to extend the antenna to the outside of the case;
- The antenna must not be installed inside a metal shell, as this will greatly reduce the transmission distance.

## 12. Frequently Asked Questions

### 12.1 Transmission distance is short

- When there are straight-line communication obstacles, the communication distance will be correspondingly attenuated ;
- Temperature, humidity, and co-channel interference will cause the communication packet loss rate to increase ;
- The ground absorbs and reflects radio waves, and the test effect is poor when close to the ground ;
- Seawater has a strong ability to absorb radio waves, so the seaside test results are poor ;
- If there are metal objects near the antenna, or if it is placed in a metal case, the signal attenuation will be very serious ;
- The power register setting is wrong and the air rate is set too high (the higher the air rate, the closer the distance) ;
- The low voltage of the power supply at room temperature is lower than the recommended value. The lower the voltage, the



smaller the power generated ;

- There is a poor match between the antenna and the module or there is a problem with the quality of the antenna itself.

## 12.2 Modules are easily damaged

- Please check the power supply to ensure that it is within the recommended power supply voltage. If it exceeds the maximum value, it will cause permanent damage to the module ;
- Please check the stability of the power supply. The voltage cannot fluctuate greatly and frequently ;
- Please ensure anti-static operation during installation and use, as high-frequency devices are sensitive to static electricity ;
- Please ensure that the humidity during installation and use should not be too high, as some components are humidity-sensitive devices ;
- If there are no special needs, it is not recommended to use it at too high or too low temperature.

## 12.3 BER(Bit Error Rate) is high

- If there is co-channel signal interference nearby, stay away from the interference source or modify the frequency or channel to avoid interference;
- Unsatisfactory power supply may also cause garbled code, so be sure to ensure the reliability of the power supply;
- Poor quality or too long extension cords and feeders can also cause a high bit error rate.


# 13. Welding Operation Guidance

## 13.1 Reflow soldering temperature

Reflow soldering curve characteristics		Lead process assembly	Lead-free process assembly
Preheat /keep warm	Minimum temperature ( $T_{smin}$ )	100°C	150°C
	Maximum temperature ( $T_{smax}$ )	150°C	200°C
	Time ( $T_{smin} \sim T_{smin}$ )	60-120 seconds	60-120 seconds
Temperature rise slope ( $T_L \sim T_P$ )		3°C/second, maximum	3°C/second, maximum
Liquidus temperature ( $T_L$ )		183°C	217°C
Holding time above $T_L$		60~ 90 seconds	60~ 90 seconds
Package peak temperature $T_P$		Users should not exceed the temperature indicated on the product's "Moisture Sensitivity" label.	Users should not exceed the temperature indicated on the product's "Moisture Sensitivity" label.
The time ( $T_P$ ) within 5°C of the specified classification temperature ( $T_c$ ), see the		20 seconds	30 seconds

figure below		
Cooling slope ( $T_p \sim T_L$ )	6°C/second, maximum	6°C/second, maximum
Time from room temperature to peak temperature	6 minutes, maximum	8 minutes, maximum
※ The peak temperature ( $T_p$ ) tolerance definition of the temperature curve is the upper limit of the user		

## 13.2 Reflow soldering curve

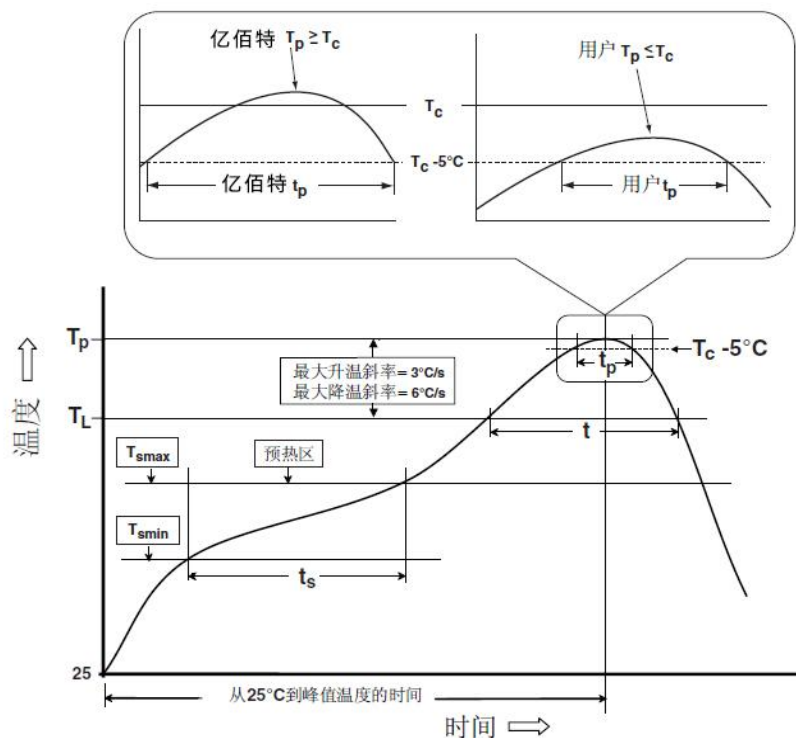

## 14. Related Models

Product number	carrier frequency Hz	Transmit power dBm	Tested distance km	Package form	Product Size mm	Communication Interface
<a href="#">E22-230T22S</a>	230M	22	5	SMD	16*26	TTL
<a href="#">E22-230T30D</a>	230M	30	10	Plug-in	20*40.5	TTL
<a href="#">E22-400T22S</a>	433/470M	22	5	SMD	16*26	TTL
<a href="#">E22-400T30D</a>	433/470M	30	10	Plug-in	20*40.5	TTL
<a href="#">E22-900T22S</a>	868/915M	22	5	SMD	16*26	TTL
<a href="#">E22-900T30D</a>	868/915M	30	10	Plug-in	20*40.5	TTL
<a href="#">E22-400M22S</a>	433/470M	22	7	SMD	14*20	SPI

<a href="#">E22-400M30S</a>	433/470M	30	12	SMD	24*38.5	SPI
<a href="#">E22-900M22S</a>	868/915M	22	7	SMD	14*20	SPI
<a href="#">E22-900M30S</a>	868/915M	30	12	SMD	24*38.5	SPI

## 15. Antenna Guide


### 15.1 Antenna recommendations

Antennas play an important role in the communication process. Often poor-quality antennas will have a great impact on the communication system. Therefore, our company recommends some antennas as antennas that support our wireless modules and have excellent performance and reasonable prices.

Product number	type	frequency band Hz	interface	Gain dBi	high mm	feeder cm	Features
<a href="#">TX433-NP-4310</a>	FPC antenna	433M	welding	2.0	43.8*9.5	-	Embedded FPC antenna
<a href="#">TX433-JZ-5</a>	Rubber antenna	433M	SMA-J	2.0	52	-	Short straight & omnidirectional
<a href="#">TX433-JZG-6</a>	Rubber antenna	433M	SMA-J	2.5	62	-	Short straight & omnidirectional
<a href="#">TX433-JW-5</a>	Rubber antenna	433M	SMA-J	2.0	50	-	Flexible & omnidirectional
<a href="#">TX433-JWG-7</a>	Rubber antenna	433M	SMA-J	2.5	75	-	Flexible & omnidirectional
<a href="#">TX433-JK-11</a>	Rubber antenna	433M	SMA-J	2.5	110	-	Flexible & omnidirectional
<a href="#">TX433-JK-20</a>	Rubber antenna	433M	SMA-J	3.0	210	-	Flexible & omnidirectional
<a href="#">TX433-XPL-100</a>	Sucker antenna	433M	SMA-J	3.5	185	100	Small sucker antenna, cost-effective
<a href="#">TX433-XP-200</a>	Sucker antenna	433M	SMA-J	4.0	190	200	Medium sucker antenna, low power consumption
<a href="#">TX433-XP-300</a>	Sucker antenna	433M	SMA-J	6.0	965	300	Large sucker antenna, high gain
<a href="#">TX490-JZ-5</a>	Rubber antenna	470/490 M	SMA-J	2.0	50	-	Short straight & omnidirectional
<a href="#">TX490-XPL-100</a>	Sucker antenna	470/490 M	SMA-J	3.5	120	100	Small sucker antenna, cost-effective


## 16. Batch Packaging Methods

### 16.1 E22-230/400/900T30D batch packaging method

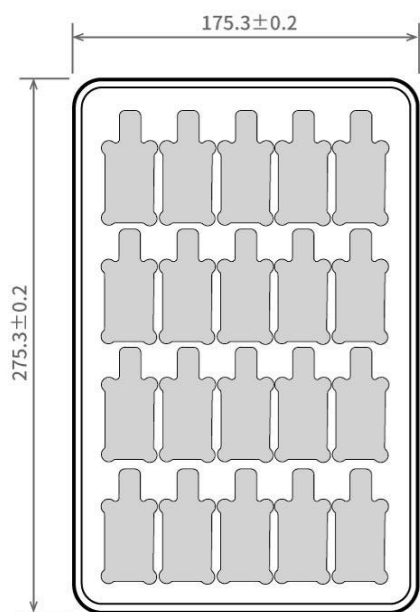

Unit: mm  
Each Layer: 20 pcs  
Each Package: 5 layers

## 16.2 E22-230/400/900T30S batch packaging method

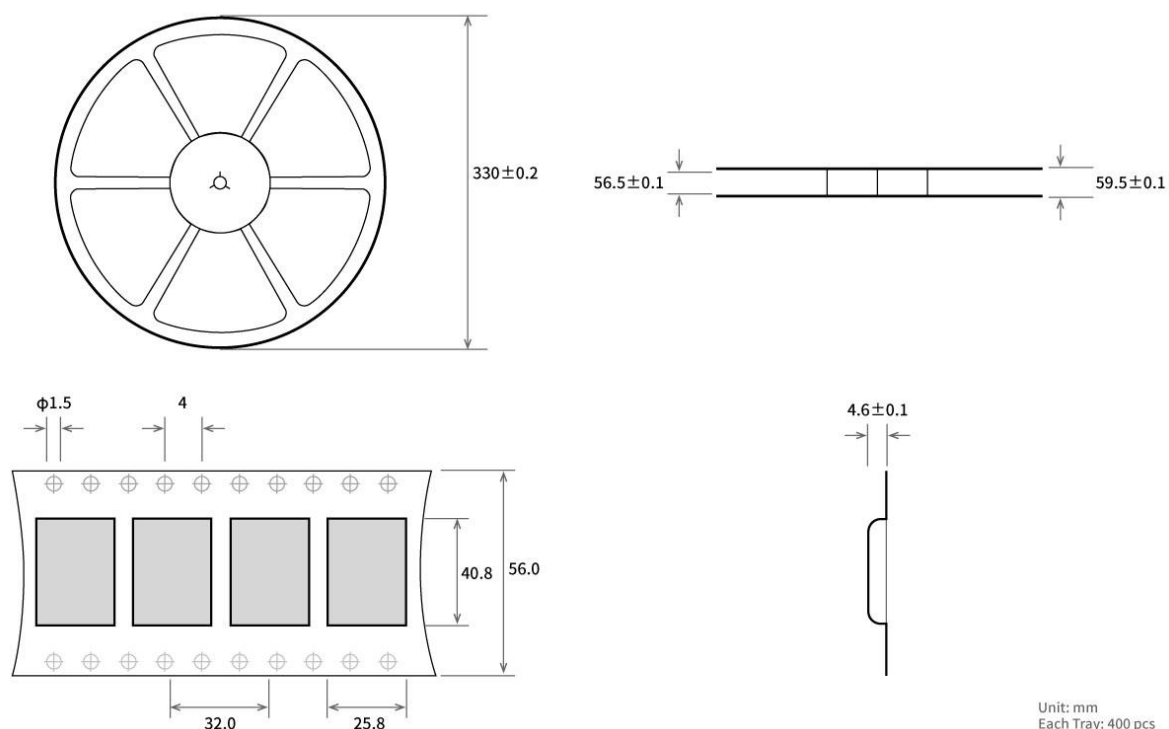

## Revise history

Version	Revision date	Revision Notes	Maintenance man
1.0	2023-10-25	initial version	Hao
1.1	2024-3-20	Content correction	Hao
1.2	2024-3-29	Content correction	Hao

## About Us

Technical support: [support@cdebyte.com](mailto:support@cdebyte.com)

Documents and RF Setting download link: <https://www.cdebyte.com>

Thank you for using Ebyte products! Please contact us with any questions or suggestions: [info@cdebyte.com](mailto:info@cdebyte.com)  
uld Industrial Park, 199# Xiqu Ave, High-tech Zone, Chengdu, 611731, Sichuan, China