

Click here to ask an associate for production status of specific part numbers.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

# MAX86171

### **General Description**

The MAX86171 is an ultra-low-power optical data acquisition system with both transmit and receive channels. On the transmitter side, the MAX86171 has nine LED driver output pins, programmable from three high-current, 8-bit LED drivers. On the receiver side, MAX86171 has two low-noise charge integrating front-ends that each include independent 19.5 bit ADCs and best-in-class ambient light cancellation (ALC) circuits, producing the highest performing integrated optical data acquisition system on the market today.

Due to its low power consumption, compact size, ease and flexibility of use, the MAX86171 is ideal for a wide variety of optical sensing applications such as pulse-oximetry and heart-rate detection.

The MAX86171 operates on a 1.8V main supply voltage and a 3.1V to 5.5V LED driver supply voltage. The device supports both  $I^2C$  and SPI compatible interfaces in a fully autonomous way. The device has a large 256-word built-in FIFO. The MAX86171 is available in a compact 28-bump WLP package.

### **Applications**

- Wearable Devices for Fitness, Wellness, and Medical Applications
- Clinical Accuracy
- Suitable for Wrist, Finger, Ear, and Other Locations
- Optimized Performance to Detect:
  - Optical Heart Rate
  - Heart-Rate Variability
  - Oxygen Saturation (SpO<sub>2</sub>)
  - Body Hydration
  - Muscle and Tissue Oxygen Saturation (SmO<sub>2</sub> and StO<sub>2</sub>)
  - Maximum Oxygen Consumption (VO<sub>2</sub> max)

#### **Benefits and Features**


- Complete Dual-Channel Optical Data Acquisition
   System
- Ultra Low-Power Operation for Wearable Devices
  - Low-Power Operation, Optical Readout Channel < 11μA at 25 fps
  - Exposure Integration Period Ranging from 14.6µs to 117.1µs
  - Low Shutdown Current < 1µA</li>
- Excellent Top-End Dynamic Range > 91dB in White Card Loop-Back Test (Nyquist Sample-to-Sample Variance)
- Extended Dynamic Range up to 110dB (Averaging and Off-Chip Filtering)
- Supports Frame Rates from 1fps to 2.9kfps
- High Resolution 19.5-Bit Charge Integrating ADCs
- Supports Four PD Inputs for Multi-Parameter Measurements
- Supports Nine LED Driver Output Pins Generated from Three 8-Bit LED Current Drivers
- Low Dark Current Noise of < 50pA RMS (Sample to Sample Variance in 117.1µs Integration Time)
- Excellent Ambient Range and Rejection Capability
   > 200µA Ambient Photodiode Current
  - > 70dB Ambient Rejection at 120Hz (Average Mode > 2)
- Miniature 2.78mm x 1.71mm, 7 x 4, 0.35mm Ball Pitch WLP Package
- -40°C to +85°C Operating Temperature Range

Ordering Information appears at end of data sheet.

© 2022 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners.

One Analog Way, Wilmington, MA 01887 U.S.A. | Tel: 781.329.4700 | © 2022 Analog Devices, Inc. All rights reserved.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

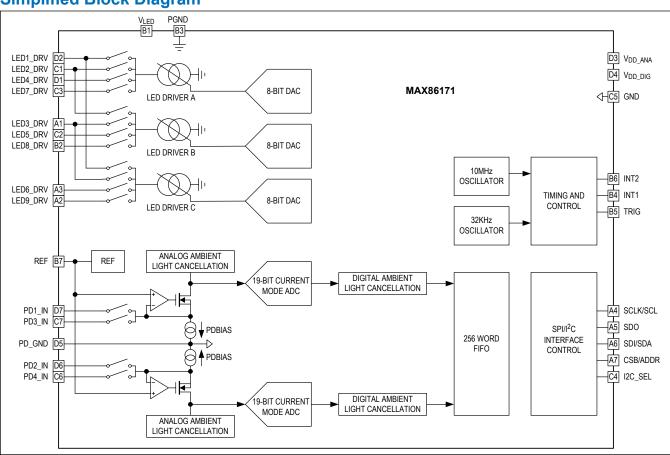

### **Simplified Block Diagram**

### **Absolute Maximum Ratings**

V <sub>DD ANA</sub> , V <sub>DD DIG</sub> to GND	0.3V to +2.2V
V <sub>LED</sub> to PGND	0.3V to +6.0V
PGND to GND	0.3V to +0.3V
PDx_IN to GND	0.3V to +2.2V
PD_GND to GND	0.3V to +0.3V
VREF to GND	0.3V to +2.2V
LEDx_DRV to PGND	0.3V to V <sub>LED</sub> + 0.3V
SDO to GND	0.3V to V <sub>DD</sub> + 0.3V
SDI/SDA, SCLK/SCL, CSB/ADDR, I2C	SEL, INT1, INT2, TRIG
to GND	-0.3V to +6.0V

Output Short-Circuit DurationCo Continuous Input Current Into Any Pin (except LE Pins)	Dx_DRV
Continuous Power Dissipation (WLP) (derate 27.24mW/ +70°C)	°C above
Operating Temperature Range40°C Storage Temperature Range40°C to	to +85°C
Soldering Temperature (reflow)	

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

### **Package Information**

#### 28-BUMP WLP

Package Code	N281A2+1		
Outline Number	<u>21-100259</u>		
Land Pattern Number	Refer to Application Note 1891		
THERMAL RESISTANCE, FOUR-LAYER BOARD			
Junction-to-Ambient (0 <sub>JA</sub> )	58.01°C/W		

For the latest package outline information and land patterns (footprints), go to <u>www.maximintegrated.com/packages</u>. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to <u>www.maximintegrated.com/</u> <u>thermal-tutorial</u>.

#### **Electrical Characteristics**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25^{\circ}C, min/max are from T_A = -40^{\circ}C to +85^{\circ}C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS	
READOUT CHANNEL			·				
ADC Resolution				19.5		Bits	
ADC INI	INU	MEASx_TINT = 117.1µs		±10		LSB	
ADC INL	INL <sub>RX</sub>	MEASx_TINT = 14.6µs		±40			
	DNL <sub>RX</sub>	MEASx_TINT = 117.1µs		±3		LSB	
ADC DNL		MEASx_TINT = 14.6µs		±10			
		MEASx_PPGy_ADC_RGE = 0x0		4.0			
ADC Full-Scale Input Current	I <sub>FS</sub>	MEASx_PPGy_ADC_RGE = 0x1		8.0		μA	
		MEASx_PPGy_ADC_RGE = 0x2		16.0			
		MEASx_PPGy_ADC_RGE = 0x3		32.0		]	

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	COND	ITIONS	MIN	TYP	MAX	UNITS
		MEASx_TINT = 0x0			14.6		
ADC Integration Time	<b>+</b>	MEASx_TINT = 0x1			29.2		]
ADC Integration Time	t <sub>INT</sub>	MEASx_TINT = 0x2		58.6		– µs	
		MEASx_TINT = 0x3			117.1		
Minimum Free-Running Frame Rate					1		FPS
Maximum Free-Running Frame Rate					2978.9		FPS
Internal Frame-Rate Clock	fFRAME_CLK	FR_CLK_SEL = 0, T FR_CLK_SEL = 1, T		-1% -1%	32000 32768	+1% +1%	– Hz
TRIG External Frame- Clock Frequency	ftrig_ext_cl K		<u>A</u> 0000000	31000	02100	34000	Hz
TRIG Pulse-Width	t <sub>TRIG</sub>			1			μs
Internal Power-Up Time					200		μs
Maximum DC Ambient Light Rejection	ALR	ALC_OVF = 1			200		μA
Dynamic Ambient Light Rejection		$I_{EXPOSURE} = 1\mu A, I$ with ± 0.4 $\mu A_{P-P}$ 120	<sub>AMBIENT</sub> = 1µA DC Hz sine wave		80		dB
DC Ambient Light Rejection		I <sub>EXPOSURE</sub> = 1μΑ, Ι 30μΑ	$AMBIENT = 1\mu A and$		0.5		nA
Dark Current Offset	DC_O	ALC = ON, PDx_BIA MEASx_TINT = 117			±1		COUNTS
		MEASx_TINT = 14.6	òµs		212		
Dark Current Input		MEASx_TINT = 29.2µs			150		pA <sub>RMS</sub>
Referred Noise			MEASx_TINT = 58.6µs		106		
		MEASx_TINT = 117	_TINT = 117.1µs		75		
LED DRIVER							
LED Current Resolution					8		Bits
Driver DNL	DNL <sub>TX</sub>	MEASx_LED_RGE =	= 0x3	-1		+1	LSB
Driver INL	INL <sub>TX</sub>	MEASx_LED_RGE =	= 0x3		1		LSB
			MEASx_LED_RGE = 0x0		32		
Full-Scale LED Current		MEASx DRVy PA	MEASx_LED_RGE = 0x1		64		
	ILED	= 0xFF	MEASx_LED_RGE = 0x2		96		– mA
			MEASx_LED_RGE = 0x3	116	128	140	
LED Driver Rise Time		MEASx_DRVy_PA = all range settings	• 0xFF, 10% to 90%,			3	μs
LED Driver Fall Time		MEASx_DRVy_PA = all range settings	• 0xFF, 10% to 90%,			3	μs

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	COND	ITIONS	MIN	TYP	MAX	UNITS
			MEASx_LED_RGE = 0x0		170		
Minimum Output	Max	MEASx_DRVy_PA = 0xFF, <1%	MEASx_LED_RGE = 0x1		260		
Voltage	V <sub>OL</sub>	change in LED current	MEASx_LED_RGE = 0x2		380		mV
			MEASx_LED_RGE = 0x3		500	800	
			MEASx_LED_RGE = 0x0		±10		
LED Driver DC V <sub>LED</sub>		MEASx_DRVy_PA = 0xFF, V <sub>DD</sub> = 1.8V, V <sub>LEDx_DRV</sub> = 1.2V, V <sub>LED</sub> = 3.1V to 5.5V	MEASx_LED_RGE = 0x1		±11		
PSR			MEASx_LED_RGE = 0x2		±12		μA/V
			MEASx_LED_RGE = 0x3	-200		+200	
		MEASx_LED_RGE =	= 0x0	120	148	180	
LED Driver Compliance	ED Driver Compliance		= 0x1	260	287	320	mV
Interrupt Threshold		MEASx_LED_RGE =	= 0x2	395	425	460	
		MEASx_LED_RGE =	= 0x3	530	560	600	
POWER SUPPLY							
Power-Supply Voltage	V <sub>DD</sub>	Verified during PSRF	R Test	1.7	1.8	2.0	V
LED-Supply Voltage	V <sub>LED</sub>	Verified during PSRF	R Test	3.1		5.5	V

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25^{\circ}C, min/max are from T_A = -40^{\circ}C to +85^{\circ}C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	COND	ITIONS	MIN TYP	MAX	UNITS			
		One Meas/Frame, MEASx_TINT = 14.6µs,	FR_CLK_DIV = 64, Frame Rate = 512fps	120	160				
		MEASx_LED_RGE = 128mA, MEASx_DRVy_PA = 0x7F,	FR_CLK_DIV = 512, Frame Rate = 64fps	24					
		FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN = 1	FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN	FR_CLK_DIV = 4096, Frame Rate = 8fps	5				
		Four Meas/Frame, MEASx_TINT = 14.6µs,	FR_CLK_DIV = 64, Frame Rate = 512fps	373	448				
		MEASx_LED_RGE = 128mA, MEASx_DRVy_PA = 0x7F,	FR_CLK_DIV = 512, Frame Rate = 64fps	48.5					
Average V <sub>DD</sub> Supply	verage Voo Supply	FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN = 1	FR_CLK_DIV = 4096, Frame Rate = 8fps	8.2		- μΑ			
Current	עטי	$I_{DD}$ One Meas/Frame, MEASx_TINT = 14.6µs, MEASx_LED_REG = 128mA, MEASx_DRVy_PA = 0x7F, FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN = 0	FR_CLK_DIV = 64, Frame Rate = 512fps	170	210	μ			
			= 128mĀ, MEASx_DRVy_PA	= 128mĀ, MEASx_DRVy_PA	= 128mĀ, MEASx_DRVy_PA	FR_CLK_DIV = 512, Frame Rate = 64fps	28		
			FR_CLK_DIV = 4096, Frame Rate = 8fps	5.5					
		Four Meas/Frame, MEASx_TINT = 14.6µs,	FR_CLK_DIV = 64, Frame Rate = 512fps	532	672				
			MEASx_LED_RGE = 128mA, MEASx_DRVy_PA = 0x7F	FR_CLK_DIV = 512, Frame Rate = 64fps	71				
		= 0x7F, FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN = 0	FR_CLK_DIV = 4096, Frame Rate = 8fps	9.7					

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	COND	ITIONS	MIN	TYP	MAX	UNITS
		One LED/Frame, MEASx_LED_RGE = 128mA,	FR_CLK_DIV = 64, Frame Rate = 512fps		870		
Average V <sub>LED</sub> Supply	I <sub>LED</sub>	MEASx_DRVy_PA = 0x7F, MEASx_TINT = 14.6μs,	FR_CLK_DIV = 512, Frame Rate = 64fps		85		- μA
Current	LED	MEASx_LED_SET LNG = 1, FR_CLK_SEL = 1, PPG1_PWRDN = 0, PPG2_PWRDN = 1	FR_CLK_DIV = 4096, Frame Rate = 8fps		10.6		
V <sub>DD</sub> Current in Shutdown		T <sub>A</sub> = +25°C			0.85	3	μA
V <sub>LED</sub> Current in Shutdown		T <sub>A</sub> = +25°C				0.5	μA
DIGITAL I/O CHARACTE	RISTICS						
Input Voltage Low	V <sub>IL</sub>	I2C_SEL, CSB/ADD SCL, TRIG	R, SDI/SDA, SCLK/			0.4	V
Input Voltage High	VIH	I2C_SEL, CSB/ADD SCL, TRIG	R, SDI/SDA, SCLK/	1.4			V
Input Hysteresis	V <sub>HYS</sub>	I2C_SEL, CSB/ADD SCL, TRIG	R, SDI/SDA, SCLK/		430		mV
Input Capacitance	C <sub>IN</sub>	I2C_SEL, CSB/ADD SCL, TRIG	R, SDI/SDA, SCLK/		10		pF
Input Leakage Current	I <sub>IN</sub>	I2C_SEL, CSB/ADD SCL, TRIG, T <sub>A</sub> = +2 1.8V		-1	+0.01	+1	μA
Output-Low Voltage	V <sub>OL</sub>	SDO, INT1, INT2, SI mode), I <sub>SINK</sub> = 4mA				0.4	V
Output-High Voltage	V <sub>OH</sub>	SDO, INT1, INT2, I <sub>S</sub>	OURCE = 4mA	V <sub>DD</sub> - 0.4			V
Open-Drain Output-Low Voltage	V <sub>OL_OD</sub>	INT1_OCFG = INT2_ = 4mA	_OCFG = 0x0, I <sub>SINK</sub>			0.4	V
SPI TIMING CHARACTEI	RISTICS (Note 4	)					
SCLK Frequency	<b>f</b> SCLK					25	MHz
SCLK Period	t <sub>CP</sub>			40			ns
SCLK Pulse-Width High	tсн			18			ns
SCLK Pulse-Width Low	t <sub>CL</sub>			18			ns
CSB Fall-to-SCLK Rise Setup Time	t <sub>CSS0</sub>	Applies to 1 <sup>st</sup> SCLK CSB goes low	rising edge after	20			ns
CSB Fall-to-SCLK Rise Hold Time	t <sub>CSH0</sub>	Applies to inactive rist 1 <sup>st</sup> rising edge	sing edge preceding	5			ns

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25^{\circ}C, min/max are from T_A = -40^{\circ}C to +85^{\circ}C, unless otherwise noted.) (Notes 1, 2, 3)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Last SCLK Rise to CSB Rise	<sup>t</sup> CSH1	Applies to last SCLK rising edge in a transaction	20			ns
Last SCLK Rise to Next CSB Fall	<sup>t</sup> CSF	Applies to last SCLK rising edge to next CSB falling edge (new transaction)	60			ns
CSB Pulse-Width High	t <sub>CSPW</sub>		40			ns
SDI to SCLK Rise Setup Time	t <sub>DS</sub>		5			ns
SDI to SCLK Rise Hold Time	t <sub>DH</sub>		5			ns
SCLK Fall to SDO Transition	t <sub>DOT</sub>	C <sub>LOAD</sub> = 30pF			15	ns
CSB Fall to SDO Enabled	t <sub>DOE</sub>	C <sub>LOAD</sub> = 0pF	10			ns
CSB Rise to SDO Hi-Z	t <sub>DOZ</sub>	Disable Time			5	ns
I <sup>2</sup> C TIMING CHARACTER	RISTICS (Note 4	)	1			
I <sup>2</sup> C Write Address		ADDR = 0		C8		HEX
		ADDR = 1		CA		
I <sup>2</sup> C Read Address		ADDR = 0		C9		HEX
I-C Reau Audress		ADDR = 1		СВ		
Serial Clock Frequency	f <sub>SCL</sub>		0		400	kHz
Bus Free-Time Between STOP and START Conditions	<sup>t</sup> BUF		1.3			μs
Hold Time START and Repeat START Condition	<sup>t</sup> HD_STA		0.6			μs
SCL Pulse-Width Low	tLOW		1.3			μs
SCL Pulse-Width High	t <sub>HIGH</sub>		0.6			μs
Setup Time for a Repeated START Condition	<sup>t</sup> su_sta		0.6			μs
Data Hold Time	thd_dat		0		900	ns
Data Setup Time	t <sub>SU_DAT</sub>		100			ns
Setup Time for STOP Condition	<sup>t</sup> su_sто		0.6			μs
Pulse-Width of Suppressed Spike	t <sub>SP</sub>		0		50	ns
Bus Capacitance	СВ				400	pF
SDA and SCL Receiving Rise Time	t <sub>R</sub>		20 + 0.1CB		300	ns
SDA and SCL Receiving Fall Time	t <sub>F</sub>		20 + 0.1CB		300	ns

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Electrical Characteristics (continued)**

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, MEASx_PPGy_ADC_RGE = 16\muA, FR_CLK_SEL = 0, FR_CLK_DIV = 32 (F_{FRAME} = 1kfps), MEASx_TINT = 14.6\mus, MEASx_LED_SETLNG = 6\mus, MEASx_LED_RGE = 128mA, C_{PD} = 65pF, T_A = +25^{\circ}C, min/max are from T_A = -40^{\circ}C to T_A = -40^{\circ}C to T_A = -40^{\circ}C$ +85°C, unless otherwise noted.) (Notes 1, 2, 3)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
SDA Transmitting Fall Time	t <sub>TF</sub>		20 + 0.1CB		300	ns

Note 1: All devices are 100% production tested at T<sub>A</sub> = +25°C. Specifications over temperature limits are guaranteed by Maxim Integrated's bench or proprietary automated test equipment (ATE) characterization.

Note 2: Definitions of terms:

Frame = All measurements made during a particular wake-up interval.
 Measurement = Ambient light corrected output.


Note 3: All other register settings assumed to be PORb defaults, unless otherwise noted.

Note 4: For design guidance only. Not production tested.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Typical Operating Characteristics**


(V<sub>DD</sub> = 1.8V, V<sub>LED</sub> = 5.0V, GND = PGND = 0V, T<sub>A</sub> = +25°C, unless otherwise noted.)

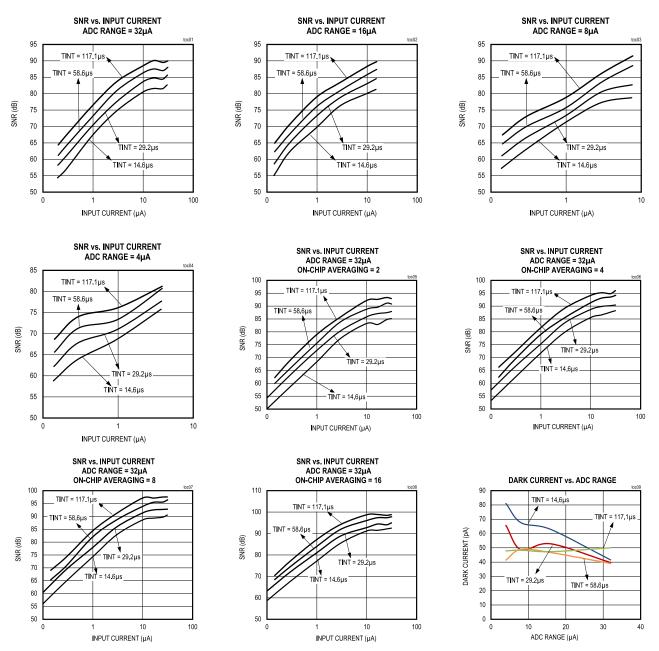

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Typical Operating Characteristics (continued)**

( $V_{DD}$  = 1.8V,  $V_{LED}$  = 5.0V, GND = PGND = 0V,  $T_A$  = +25°C, unless otherwise noted.)

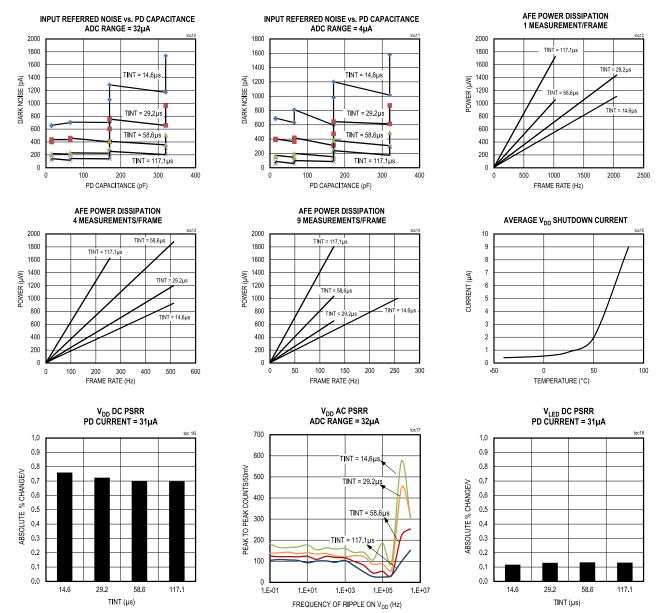

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Typical Operating Characteristics (continued)**

0.0 -0.2

-0.4

-0.6 -0.8

-1.0

-1.2 L 1.E-01

TINT = 14.6µs

1.E+00


INPUT AMBIENT CURRENT (µA)

TINT = 29.2µs

1.E+01

1.E+02

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, GND = PGND = 0V, T_A = +25^{\circ}C, unless otherwise noted.)$ 

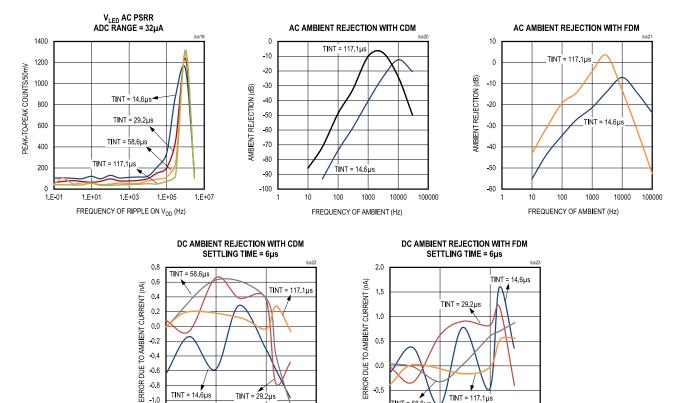

0.5

0.0

-0.5

-1.0

1.E-01

TINT = 58.6us

1.E+00

TINT = 117.1µs

INPUT AMBIENT CURRENT (µA)


1.E+01

1.E+02

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### **Pin Configuration**

#### MAX86171

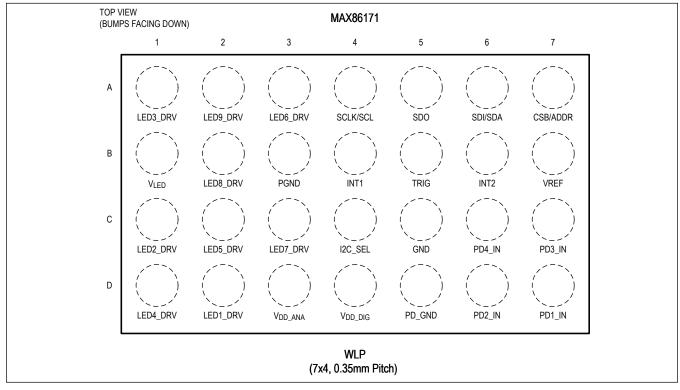

### **Pin Description**

PIN	NAME	FUNCTION
POWER	•	
D3	V <sub>DD_ANA</sub>	Analog Power Supply. Connect to an externally regulated supply. Bypass to GND with a $0.1\mu F$ and $10\mu F$ capacitor as close to the bump as possible.
D4	V <sub>DD_DIG</sub>	Digital Power Supply. Connect to an externally regulated supply. Bypass to GND with a $0.1\mu$ F and $10\mu$ F capacitor as close to the bump as possible.
C5	GND	Main Power Supply Return. Connect to PCB Ground. Refer to the <u>PCB Layout Guidelines Section</u> for more information.
B1	V <sub>LED</sub>	LED Power Supply Input. In a configuration with more than one LED supply, connect $V_{\text{LED}}$ to the highest LED supply voltage. Bypass with a 10 $\mu F$ capacitor to PGND.
В3	PGND	LED Power Return. Connect to PCB Ground. Refer to the <u>PCB Layout Guidelines Section</u> for more information.
CONTROL INT	ERFACE	
A4	SCLK/SCL	SPI Clock/I <sup>2</sup> C Clock
A5	SDO	SPI Data Output. Tie to GND or V <sub>DD</sub> when this pin is not used.
A6	SDI/SDA	SPI Data Input/I <sup>2</sup> C Data
A7	CSB/ADDR	SPI Chip Select Input/I <sup>2</sup> C Device Address Selector.
C4	I2C_SEL	Input to Select I <sup>2</sup> C or SPI Mode. When I2C_SEL is active (high) the interface operates in I <sup>2</sup> C mode. When I2C_SEL is inactive (low) the interface operates in SPI mode.

	NAME	FUNCTION
B5	TRIG	External Clock or Start of Conversion Trigger Input. Tie to GND or V <sub>DD</sub> when this pin is not used.
B6	INT2	Interrupt 2 Output. When not used, this pin can be left unconnected.
B4	INT1	Interrupt 1 Output. When not used, this pin can be left unconnected.
OPTICAL PINS	6	
D7	PD1_IN	Photodiode Cathode Input. PPG1_PDSEL = 0. When not used, this pin can be left unconnected.
D6	PD2_IN	Photodiode Cathode Input. PPG2_PDSEL = 0. When not used, this pin can be left unconnected.
C7	PD3_IN	Photodiode Cathode Input. PPG1_PDSEL = 1. When not used, this pin can be left unconnected.
C6	PD4_IN	Photodiode Cathode Input. PPG2_PDSEL = 1. When not used, this pin can be left unconnected.
D5	PD_GND	Photodiode Anode. Star connect to PCB Ground near the MAX86171. Use the PD_GND node to shield the PDx_IN nodes.
D2	LED1_DRV	LED Output Pin 1. Driven from LED driver A and C. Connect the LED cathode to LED1_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
C1	LED2_DRV	LED Output Pin 2. Driven from LED driver A and B. Connect the LED cathode to LED2_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
A1	LED3_DRV	LED Output Pin 3. Driven from LED driver B and C. Connect the LED cathode to LED3_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
D1	LED4_DRV	LED Output Pin 4. Driven from LED driver A. Connect the LED cathode to LED4_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
C2	LED5_DRV	LED Output Pin 5. Driven from LED driver B. Connect the LED cathode to LED5_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
A3	LED6_DRV	LED Output Pin 6. Driven from LED driver C. Connect the LED cathode to LED6_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
C3	LED7_DRV	LED Output Pin 7. Driven from LED driver A. Connect the LED cathode to LED7_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
B2	LED8_DRV	LED Output Pin 8. Driven from LED driver B. Connect the LED cathode to LED8_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
A2	LED9_DRV	LED Output Pin 9. Driven from LED driver C. Connect the LED cathode to LED9_DRV and its anode to the V <sub>LED</sub> supply. When not used, this pin can be left unconnected.
REFERENCE		•
B7	VREF	Internal Reference Decoupling Point. Bypass with a 1µF capacitor to PCB Ground.

## **Pin Description (continued)**

### **Detailed Description**

The MAX86171 is a complete integrated optical data-acquisition system, ideal for various applications including optical pulse-oximetry and heart-rate detection applications. It is designed for the demanding requirements of mobile and wearable devices and requires minimal external hardware components for integration into a wearable device. It includes high-resolution optical readout signal processing channels with robust ambient light cancellation and high current LED driver DACs to form a complete optical readout signal chain.

The MAX86171 is fully adjustable through software registers and the digital output data is stored in a 256-word FIFO. The FIFO allows the MAX86171 to be connected to a microcontroller or processor on a shared bus, I<sup>2</sup>C, or SPI depending on hardware selection on the I2C\_SEL pin. It operates in fully autonomous mode for low-power battery applications. For wearables with compact optical architectures, refer to MAX86170A and MAX86170B that can support 6/4 LEDs and 4/2 PDs.

The MAX86171 incorporates dual optical readout channels that operate simultaneously. The MAX86171 has three LED drivers. With the built-in MUX and control logic on the chip, the MAX86171 can support up to Nine LEDs and Four PDs. It is well suited for a wide variety of optical sensing applications.

The MAX86171 operates on a 1.8V main supply voltage, with a separate 3.1V to 5.5V LED driver power supply. This device has flexible exposure, timing, and shutdown configurations as well as control of individual blocks so that an optimized measurement can be made at minimum power levels.

#### **Optical Transmitter Overview**

The MAX86171 has three independent precision LED current drivers that are muxed to Nine LED driver pins. Three LED current DACs modulate LED pulses for a variety of optical measurements. The three LED current DACs have an 8-bit dynamic range with four programmable full-scale range settings of 32mA, 64mA, 96mA, and 128mA. The three current drivers, DRVA, DRVB, and DRVC, is connected to four of the LED driver pins through a mux according to <u>Table</u> <u>1</u>. The MEASx Selects registers define how each LED driver is connected for that particular measurement. Thus, the configuration of the LED drivers can be uniquely set for each measurement. Each measurement can drive one, two, or all three LED drivers.

#### Table 1. LED DRIVER AND LED MUX CONFIGURATION

	MEASx_DRVA		MEASx_DRVB	MEASx_DRVC		
Code	LEDx_DRV Pin	Code	LEDx_DRV Pin	Code	LEDx_DRV Pin	
00	LED1_DRV	00	LED2_DRV	00	LED1_DRV	
01	LED2_DRV	01	LED3_DRV	01	LED3_DRV	
10	LED4_DRV	10	LED5_DRV	10	LED6_DRV	
11	LED7_DRV	11	LED8_DRV	11	LED9_DRV	

This configuration of LED driver and LED mux is highly flexible, allowing for any of the Nine LED driver pins to sink up to 128mA. Additionally LED1\_DRV, LED2\_DRV, and LED3\_DRV can combine two LED drivers to get a total of 256mA per pin in a given measurement. <u>Table 2</u> also lists which of the three LED drivers can be connected to which of the Nine LED driver pins.

#### Table 2. LED DRIVERS TO LED\_DRV PIN MAPPING

	LED1_DRV	LED2_DRV	LED3_DRV	LED4_DRV	LED5_DRV	LED6_DRV	LED7_DRV	LED8_DRV	LED9_DRV
LED Driver A	х	х		х			х		
LED Driver B		х	х		х			x	
LED Driver C	х		x			x			x

### Table 2. LED DRIVERS TO LED\_DRV PIN MAPPING (continued)

	LED1_DRV	LED2_DRV	LED3_DRV	LED4_DRV	LED5_DRV	LED6_DRV	LED7_DRV	LED8_DRV	LED9_DRV
Total Possible Driver	2	2	2	1	1	1	1	1	1
Total Possible Max Current (mA)	256	256	256	128	128	128	128	128	128

The three LED current DAC/Mux combinations are low-dropout current sources allowing for low-noise, power-supply independent LED currents to be sourced at the lowest supply voltage possible; thus, minimizing LED power consumption. The four full-scale range settings are provided to allow for a trade-off between LED driver noise, V<sub>LED</sub> power supply rejection, and dropout voltage on the pins. <u>Table 3</u> illustrates this trade-off.

#### Table 3. LED DRIVER FULL-SCALE RANGE TRADE-OFF

FULL-SCALE RANGE (mA)	LED DAC RESOLUTION LED CURRENT FOR 1 LSB (mV)	RECOMMENDED MINIMUM V <sub>LEDx_DRV</sub> (mV)	PEAK LOOP-BACK SNR (dB)
32	0.125	300	84
64	0.250	500	88
96	0.375	700	90
128	0.500	900	91

#### **Optical Receiver Overview**

The optical path in MAX86171 is composed of a front-end photodiode biasing circuit with an analog ambient light cancellation (ALC) sample and hold circuit that nulls the ambient light photodiode current at the input of the ADC. This front-end biasing circuit is followed by a current integrating, continuous-time sigma-delta ADC with a proprietary discrete time filter. This discrete time filter uses multiple dark and exposure optical samples to generate an accurate 20-bit effective exposure output signal with excellent low- and high-frequency ambient light rejection.

This combination of analog circuits and back-end digital filtering helps reduce shifts due to ambient light variations. An exposure signal varies less than 0.5nA, on a homogenous photodiode with ambient light variations from 0µA to over 30µA, or over 95dB of DC rejection, all but eliminating issues in high-intensity outdoor lighting conditions. This level of ambient light cancellation is maintained under indoor lighting conditions with over 70dB of rejection at line (mains) rate, 100Hz and 120Hz. In addition back-end filtering also suppresses the high rate of modulation of newer compact fluorescent and LED lighting as well.

The MAX86171 incorporates dual optical-signal paths and has Four PD input pins. Configured by MEASx\_PPGy\_PDSEL (x = 1...9, y = 1, 2) in each measurement, the on-chip mux switches two of four PDs to these two independent optical signal paths so that two PDs are able to operate simultaneously. Refer to Figure 1.

Each optical signal path supports four full-scale range settings of  $4\mu A$ ,  $8\mu A$ ,  $16\mu A$ , and  $32\mu A$  set in the MEASx\_PPGy\_ADC\_RGE (x = 1 to 9, y = 1, 2) field. Also supported are four options of integration times, which effectively modulate the optical channel bandwidth, allowing for a trade-off between light energy consumed and PPG signal quality. Each optical signal path also incorporates a 2-bit offset DAC for extending the optical dynamic range. This is especially useful under certain conditions that occur when attempting to limit the exposure LED current level (red shift in SpO<sub>2</sub> for example). The optical paths also support multiple photodiode and LED settling times in order to support flexible multiparameter measurements for different types of photodiode/LED wavelength combinations.

Most significantly, each MAX86171 signal path supports up to nine unique combinations of the above configurations to be defined and easily enabled and disabled as needed; the goal is to allow a single optical AFE to support multiple optical measurements in a compact, energy efficient design.

The MAX86171 supports both internally timed frame rates and externally triggered frames. The internally timed frame

### Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

rate uses an on-chip generated 32768Hz/32000Hz clock from a low-power oscillator paired with a programmable divider. Frame rates of 32768/N or 32000/N where N = 11 to 32786 are directly programmable. The on-chip oscillator can also be fine tuned (register 0x15) to support thermal compensation. In addition, the MAX86171 allows for externally defined frame rates with either an external frame trigger input or an external 32768Hz/32000Hz clock input and the on-chip divider.

The MAX86171 operates in a dynamic power-down mode, always powering down between frames; thus, minimizing power consumption. For more details on the power consumption at various frame rates, refer to the <u>Electrical</u> <u>Characteristics</u> table.

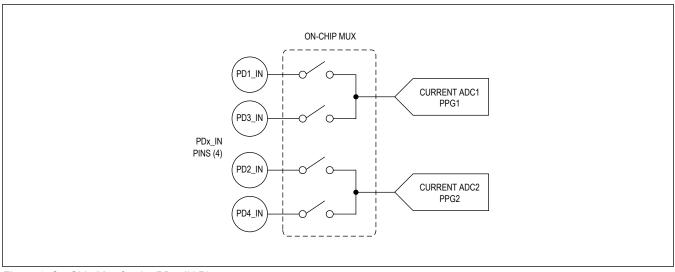


Figure 1. On-Chip Mux for the PDx\_IN Pins

#### **Synchronization Modes**

The MAX86171 supports three modes of frame rate controls. These are internally timed frame rates through an internal oscillator and divider, externally timed frame rates through an external frame trigger input, and externally timed frame rates through an external frame timing clock and the internal frame clock divider.

#### SYNC\_MODE = 0x0 Internal Frame Oscillator and Divider Mode

SYNC\_MODE = 0x0 is the free running mode of operation. In this mode, the MAX86171 uses the internal frame rate oscillator ( $f_{FRAME_CLK}$ ) and the internal user programmable divider ( $FR_CLK_DIV$ ) to set the time between measurement instances or the frame rate. The  $FR_CLK_DIV$  register can be set to any value between 11 and 32768; thus, allowing a large variety of frame rates to be programmed. In addition, the internal oscillator ( $f_{FRAME_CLK}$ ) can be set to one of two primary values, 32000Hz with the  $FR_CLK_SEL$  bit = 0 or 32768Hz with the  $FR_CLK_SEL$  bit = 1. This feature allows additional flexibility in the user-defined frame rate.

The MAX86171 also offers a fine adjust feature (FR\_CLK\_FINE\_TUNE), which can be used in combination with a highly stable crystal-based real-time clock (RTC) oscillator in the host microcontroller to trim out the drift of the on-chip  $f_{FRAME\_CLK}$  oscillator. By counting the time between MAX86171 generated interrupts using the microcontroller based RTC, it is possible to compute the error in the  $f_{FRAME\_CLK}$  oscillator and trim that error to within ±0.2% of the microcontroller based RTC.

#### SYNC\_MODE = 0x1 External Frame Trigger Input Mode

SYNC\_MODE = 0x1 enables the TRIG input pin to be a start for frame sync signal. On either the falling edge (TRIG\_ICFG = 0) or the rising edge (TRIG\_ICFG = 1) of the TRIG input, the MAX86171 begins a measurement frame. This frame includes powering up and then executing each enabled measurement from MEAS1 to MEAS9.

#### SYNC\_MODE = 0x2 External Frame Clock Input

SYNC\_MODE = 0x2 enables the TRIG input to be an external frame clock input. This input clock effectively replaces

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

the MAX86171 internal frame clock (f<sub>FRAME\_CLK</sub>) for the purpose of setting the time between start of frame wake-up periods. The MAX86171 uses the FR\_CLK\_DIV register value to divide this external clock input in order to generate the start of frame wake-up period. However, the stability of frame rate is driven entirely by the external frame clock input.

This mode is useful when the microcontroller can output a 32kHz crystal-based clock. This mode can also be used to lock other sensors together through this same oscillator.

#### Photodiode Biasing

The MAX86171 provides three photodiode biasing options to support a large range of photodiode capacitance. Each photodiode input can have a separate bias setting; thus, allowing for different photodiodes to be accomodated. The PDx\_BIAS values adjust the PDx\_IN bias point impedance to ensure that the Photodiode settles rapidly enough to support the signal timing.

#### Table 4. Recommended PD BIAS Values Based on Photodiode Capacitance

PDx_BIAS[1:0]	PHOTODIODE CAPACITANCE (pF)
00	Х
01	0 to 125
10	125 to 250
11	250 to 500

#### x = Do not use

The PDx\_BIAS value impacts the dark current noise of the MAX86171. The relationship between PDx\_BIAS and noise with increasing Photodiode capacitance is illustrated in TOC10 and TOC11 in the *Typical Operating Characteristics* section. Because of the increased noise with PDx\_BIAS setting, the lowest recommended PDx\_BIAS value should be used for a given Photodiode capacitance.

#### **Measurement Configuration and Timing**

The MAX86171 optical controller is capable of being configured to make a variety of measurements.

The controller can be configured to pulse one, two or three LED drivers sequentially to make measurements at multiple wavelengths as is done in pulse oximetry measurements or simultaneously to drive multiple LEDs as is done with heart rate measurements on the wrist.

Each LED exposure is ambient light compensated. The controller is also configurable to measure the direct ambient level for every exposure. The direct ambient measurement can be used to adjust the LED-drive level to compensate for increased noise levels when high interfering ambient signals are present.

Frame: Frame is a collection of measurements that can have a minimum of 1 measurement and a maximum of 9 measurements.

Frame Rate: This is similar to sampling rate of a system. Frame rate defines how frequently a frame is repeated.

The optical timing diagrams in Figure 2, Figure 3, Figure 4, Figure 5, and Figure 6 illustrate several possible measurement configurations.

#### Measurement Configuration

A measurement is essentially one optical sample from one or more LEDs in a single channel configuration and two optical samples in a dual channel configuration. MAX86171 supports nine individual measurements, each of which can be configured independently. Each measurement can be configured in the MEASx registers. These registers help set up a varied set of parameters as outlined by the list below.

These parameters can be configured on a per measurement basis:

- Connections of each of the three LED Drivers to one of the Nine LEDx\_DRV pins
- Connection of each of two channels to one of two possible PDs on either channel
- LED driver range and drive currents
- LED settling time
- PD settling time

- Number of averages of each measurement
- Ambient rejection scheme (CDM or FDM)
- Decimation filter selection (COI or SINC3)
- ADC integration time
- ADC range for each channel
- DAC offset for each channel

#### One Measurement: CDM, No Averaging

The optical timing diagram in <u>Figure 2</u> represents one measurement with only one LED driver active in central difference method (CDM) mode. No averaging is used.

As seen in Figure 2 only MEASn\_DRVA is pulsing during the exposure time.

This timing mode would be used when heart rate is being measured with a single LED. In this mode, three conversions (CDM1, CDM2, and CDM3) occur. The two ambient samples, CDM1 and CDM3, are used for ambient light cancellation. The exposure sample CDM2 will appear in the FIFO as a single optical-sampled value after ambient cancellation.

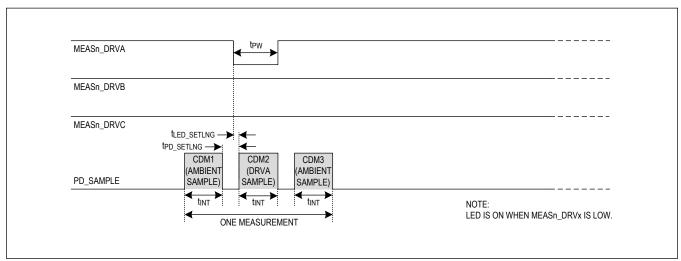


Figure 2. Measurement with CDM

#### **One Measurement with FDM**

The optical timing diagram in <u>Figure 3</u> represents DRVB pulsing with forward difference method (FDM) mode enabled. In this mode, two conversions (FDM1 and FDM2) occur. The ambient sample FDM1 is only used for ambient cancellation. The exposure sample FDM2 appears in the FIFO as a single optical sampled value after ambient cancellation.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

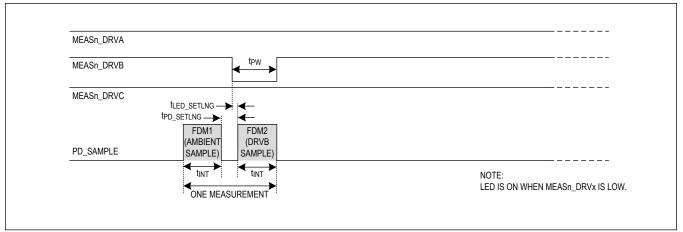


Figure 3. Measurement with FDM

#### Frame

A frame is a combination of measurements as configured by  $MEASx\_EN$  (x = 1 to 9). Each frame contains one to nine measurements depending on the register configuration. The frame rate defines how many frames per second (fps). The frame rate is defined by FR\_CLK\_DIV (register 0x16 and 0x17) or the active edge of TRIG input depending on SYNC MODE[1:0].

Measurements can be enabled in any order. For example, it is valid to enable MEAS1, MEAS2, and MEAS5 while MEAS3 and MEAS4 are skipped. But if a measurement of direct ambient is configured, then this measurement must be configured as the last measurement in the frame.

#### Frame with One Measurement Only

Figure 4 represents the timing diagram for one measurement in each frame. This measurement only has one LED driver pulsing.

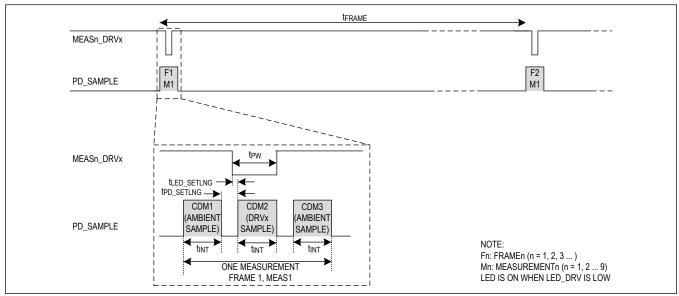


Figure 4. Frame with One Measurement

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

#### Frame with All Nine Measurements Enabled

<u>Figure 5</u> illustrates timing for nine measurements in each frame. MEAS3 is configured as CDM and one of MEAS3\_DRVx (x = A, B, C) is sinking current.

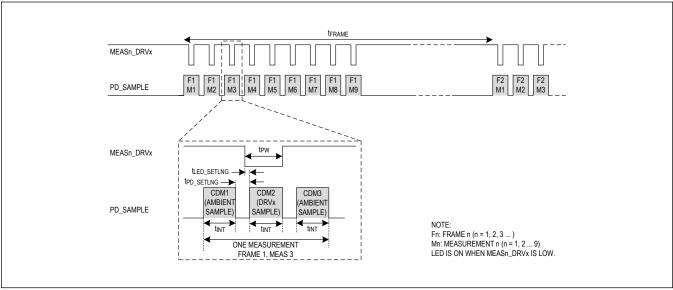


Figure 5. Frame with Nine Measurements

#### Frame with Measurement Averaging

<u>Figure 6</u> illustrates timing for nine measurements in each frame with MEAS3 configured as CDM and on-chip average of 2. The result of MEAS3 measurement in each frame only has one FIFO data pushed into FIFO. This FIFO data is the averaged data of N1 and N2 where N1 = N1CDM2 - (N1CDM1 + N1CMD3) / 2 and N2 = N2CDM2 - (N1CDM3 + N2CDM3) / 2. The averaging factor is configured by MEASn AVER (n = 1 to 9).

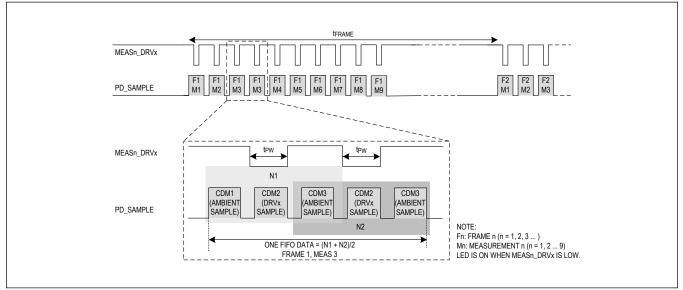


Figure 6. Measurement Averaging

#### **FIFO Description**

The FIFO depth is 256 samples and is designed to support various data types. Each sample width is 3 bytes, which includes a 4-bit tag. The tag embedded in the FIFO\_DATA[23:0] is used to identify the source of each sample data. The description of each tag is shown in Figure 6.

#### Measurement Sequence Control (address 0x0C to address 0x0D)

The data format in the FIFO as well as the sequencing of exposures are controlled by the MEAS1\_EN through MEAS9\_EN bits in the System Configuration 1 and System Configuration 2 registers. There are up to nine measurements available in a frame. The ADC conversion sequence cycles through the enabled measurements shown in <u>Table 5</u>, starting from MEAS1 to MEAS9.

### Table 5. MEASUREMENT SEQUENCE CONTROL REGISTERS

ADDRESS	REGISTER NAME	B7	B6	B5	B4	В3	B2	B1	В0
0x0C	System Configuration 1	MEAS9_ EN							
0x0D	System Configuration 2	MEAS8_ EN	MEAS7_ EN	MEAS6_ EN	MEAS5_ EN	MEAS4_ EN	MEAS3_ EN	MEAS2_ EN	MEAS1_ EN

Each of the nine measurements is configured in the MEAS1 setup to MEAS9 Setup registers (See Register Map for details).

<u>Table 6</u> shows the format of the FIFO data. Optical data, whether ambient corrected LED exposure or direct ambient sampled data, is left justified. Bits F23:F20 of the FIFO word contain the tag that identifies the data. F19:F0 of the FIFO word contain the data which is in 2's complement form. F19 is the sign bit and F18:F0 is the 19 bit sample that was pushed to FIFO after conversion.

#### Table 6. FIFO DATA FORMAT

	FIFO DATA FORMAT (FIFO_DATA[23:16])							
	TAG(TAG[3:0])				ADC VALUE(FIFO_DATA[19:16]			
F23	F22	F21	F20	F19	F18	F17	F16	
Т3	T2	T1	Т0	O19	O18	O17	O16	
	FIFO DATA FORMAT (FIFO_DATA[15:8])							
			ADC V	ALUE (FIFO_DAT/	A[15:8])			
F15	F14	F13	F12	F11	F10	F9	F8	
O15	O14	O13	O12	O11	O10	O9	O8	
			FIFO DAT	A FROMAT (FIFO_	DATA[7:0])			
			ADC	ALUE (FIFO_DAT	`A[7:0]			
F7	F6	F5	F4	F3	F2	F1	F0	
07	O6	O5	04	O3	O2	O1	O0	

There is no separate tag to identify the measurements for the two optical channels, and for the photodiodes selected for each optical channel. They are distinguished by their relative positions in the FIFO, and the Photodiodes selected for a given measurement. When there is a configuration change, the conversions for the current frame is aborted and a new frame starts with the new configuration. But part of the frame corresponding to the old configuration might have already been saved in the FIFO. So it is important to flush the FIFO after any configuration change. Otherwise, data alignment for the two optical channels might be lost. After the FIFO flush, ignore the data until you get Tag 1 (or the first enabled measurement).

When COLLECT\_RAW\_DATA is set to 0, computed data is collected in the FIFO. When COLLECT\_RAW\_DATA is set to 1, raw data for the ambient current and for LED ON current are collected in the FIFO.

Tags 1 to 9 are used when:

1. Computed data (for 2<sup>MEASx\_AVER</sup> pulses) is pushed to the FIFO

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

2. Raw MEASx data is pushed to the FIFO.

Raw Dark data has a separate tag, and is common to all measurements.

When more than one of the ALC\_OVF, EXP\_OVF and picket fence event (see the <u>Picket Fence Detect-and-Replace</u> <u>Function</u> section) are detected the following priority is used for tag selection:

- 1. Picket Fence Tag
- 2. ALC\_OVF Tag
- 3. EXP\_OVF Tag
- 4. MEASx Tag

When COLLECT\_RAW\_DATA is set to 1, Picket Fence Detection is disabled. An attempt to read an empty FIFO returns the INVALID\_DATA tag. The FIFO tags and corresponding data types are explained in <u>Table 7</u>.

#### Table 7. TAGS AND DATA TYPES

TAG[3:0]	DATA TYPE	COMMENTS
0x0	Reserved	
0x1	PPG MEAS1 DATA	Measurement 1 ADC data
0x2	PPG MEAS2 DATA	Measurement 2 ADC data
0x3	PPG MEAS3 DATA	Measurement 3 ADC data
0x4	PPG MEAS4 DATA	Measurement 4 ADC data
0x5	PPG MEAS5 DATA	Measurement 5 ADC data
0x6	PPG MEAS6 DATA	Measurement 6 ADC data
0x7	PPG MEAS7 DATA	Measurement 7 ADC data
0x8	PPG MEAS8 DATA	Measurement 8 ADC data
0x9	PPG MEAS9 DATA	Measurement 9 ADC data
0xA	PPG DARK DATA	Dark data when Raw data is captured in the FIFO
0xB	PPG ALC_OVF DATA	ALC Overflow was detected. Location of data implies which Measurement and for which PD.
0xC	PPG EXP_OVF DATA	Exposure Overflow was detected. Location of data implies which Measurement and for which PD.
0xD	PPG_PF DATA	Picket Fence event was detected. This occurs only if picket fence is enabled in PPGn_PF_MEAS_SEL[3:0] register. Location of data implies which Measurement and for which PD.
0xE	INVALID DATA	This tag indicates that there was an attempt to read an empty FIFO.
0xF	Reserved	

There are seven registers that control how the FIFO is configured and read out. Details of these registers are in Table 8.

#### Table 8. FIFO CONFIGURATION REGISTERS

ADDRESS	REGISTER NAME	B7	B6	B5	B4	В3	B2	B1	В0
0X04	FIFO Write Pointer	FIFO_WR_F	FIFO_WR_PTR[7:0]						
0X05	FIFO Read Pointer	FIFO_RD_P	FIFO_RD_PTR[7:0]						
0X06	FIFO Counter 1	FIFO_DAT A_COUNT [8]	_COUNT OVF_COUNTER[6:0]						
0X07	FIFO Counter 2	FIFO_DATA	FIFO_DATA_COUNT[7:0]						

### Table 8. FIFO CONFIGURATION REGISTERS (continued)

ADDRESS	REGISTER NAME	В7	В6	В5	B4	В3	B2	B1	В0
0X08	FIFO Data Register	FIFO_DATA	[7:0]						
0X09	FIFO Configurati on 1	FIFO_A_FU	LL[7:0]						
0X0A	FIFO Configurati on 2	RAW_DAT A	-		FLUSH_FI FO	FIFO_STA T_CLR	A_FULL_T YPE	FIFO_RO	

#### Write Pointer (address 0x04)

FIFO\_WR\_PTR[7:0] points to the FIFO location where the next data will be written. This pointer advances for each data item pushed on to the FIFO by the internal conversion process. The write pointer is an 8 bit counter and wraps around to count 0x00 on the next data after count 0xFF.

#### Read Pointer (address 0x05)

FIFO\_RD\_PTR[7:0] points to the location from where the next data from the FIFO is read through the serial interface. This advances each time a data item is read from the FIFO. The read pointer can be both read and written to. This allows a data item to be reread from the FIFO if it has not already been overwritten. The read pointer is updated from an 8 bit counter and wraps around to count 0x00 from count 0xFF.

#### Overflow Counter (address 0x06)

OVF\_COUNTER[6:0] logs the number of data items lost if the FIFO is not read in a timely fashion. This counter saturates at count value 0x7F. When a complete data item is popped from the FIFO (when the read pointer advances), the OVF\_COUNTER is reset to zero. This counter is essentially a debug tool. It should be read immediately before reading the FIFO in order to check if an overflow condition has occurred. See FIFO\_RO for more details.

#### FIFO Data Counter (address 0x06 B7 and address 0x07)

FIFO\_DATA\_COUNT[8:0] is a read-only register which holds the number of items available in the FIFO for the host to read. This increments when a new item is pushed to the FIFO, and decrements when the host reads an item from the FIFO.

#### FIFO Data (address 0x08)

FIFO\_DATA[7:0] is a read-only register used to retrieve data from the FIFO. It is important to burst read the data from the FIFO. Each data item is three bytes. So burst reading three bytes at the FIFO\_DATA register through the serial interface advances the FIFO\_RD\_PTR[7:0]. The format and data type of the data stored in the FIFO is determined by the tag associated with the data. Readout from the FIFO follows a progression defined by measurements enabled by MEAS1\_EN to MEAS9\_EN bits in the System Configuration 1 (register 0x0C) and System Configuration 2 (register 0x0D) registers, starting from MEAS1\_EN. As mentioned earlier, the data from the two optical channels for a given measurement share the same tag, but can be distinguished by their relative position in the FIFO. The configuration is best illustrated by a few examples.

Assume it is desired to perform an SpO2 measurement and also monitor the ambient level on the photodiode to adjust the IR and red LED intensity using dual optical channels with photodiodes 1 and 2 selected. To perform this measurement, configure the following registers.

### Table 9. SYSTEM CONFIGURATION

SYSTEM CONFIGURATION					
MEAS1_EN = 1'b1	(IR LED exposure)				
MEAS2_EN = 1'b1	(RED LED exposure)				
MEAS3_EN = 1'b1	(DIRECT AMBIENT exposure)				
MEAS4_EN = 1'b0	(NONE)				

## Table 9. SYSTEM CONFIGURATION (continued)

SYSTEM CONFIGURATION	
MEAS5_EN = 1'b0	(NONE)
MEAS6_EN = 1'b0	(NONE)
MEAS7_EN = 1'b0	(NONE)
MEAS8_EN = 1'b0	(NONE)
MEAS9_EN = 1'b0	(NONE)
MEASUREMENT 1 SETUP (IR LED ON LED DRVA	ON PIN 1)
MEAS1_AMB = 1'b0	(Ambient measurement off)
MEAS1_DRVA= 2'b00	(LED Driver A on pin 1 and Current is non-zero)
MEAS1_DRVB= 2'b00	(Don't Care because Current is 0)
MEAS1_DRVC= 2'b00	(Don't Care because Current is 0)
MEAS1_PPG1_ADC_RGE[1:0]	(PPG1 Gain Range Control)
MEAS1_PPG2_ADC_RGE[1:0]	(PPG2 Gain Range Control)
MEAS1_PPG_TINT[1:0]	(LED Pulse Width Control)LED Pulse Amplitude
MEAS1_DRVA_PA[7:0] = 8'h0F	(LED Driver A Current)
MEAS1_DRVB_PA[7:0] = 8'h00	(LED Driver B Current)
MEAS1_DRVC_PA[7:0] = 8'h00	(LED Driver C Current)
MEAS1_PPG1_PDSEL = 1'b0	(Photodiode 1 selected on Optical Channel 1)
MEAS1_PPG2_PDSEL = 1'b0	(Photodiode 2 selected on Optical Channel 2)
MEASUREMENT 2 SETUP (RED LED ON LED DRV	/B ON PIN 2)
MEAS2_AMB = 1'b0	(Ambient measurement off)
MEAS2_DRVA= 2'b00	(Don't Care because Current is 0)
MEAS2_DRVB= 2'b00	(LED Driver B on pin 2 and Current is non-zero)
MEAS2_DRVC= 2'b00	(Don't Care because Current is 0)
MEAS2_PPG1_ADC_RGE[1:0]	(PPG1 Gain Range Control)
MEAS2_PPG2_ADC_RGE[1:0]	(PPG2 Gain Range Control)
MEAS2_PPG_TINT[1:0]	(LED Pulse Width Control)LED Pulse Amplitude
MEAS2_DRVA_PA[7:0] = 8'h00	(LED Driver A Current)
MEAS2_DRVB_PA[7:0] = 8'h0A	(LED Driver B Current)
MEAS2_DRVC_PA[7:0] = 8'h00	(LED Driver C Current)
MEAS2_PPG1_PDSEL = 1'b0	(Photodiode 1 selected on Optical Channel 1)
MEAS2_PPG2_PDSEL = 1'b0	(Photodiode 2 selected on Optical Channel 2)
MEASUREMENT 3 SETUP (AMBIENT MEASUREM	ENT)
MEAS3_AMB = 1'b1	(Ambient measurement selected)
MEAS3_DRVA= 2'b00	(Don't Care because MEAS3_AMB = 1)
MEAS3_DRVB= 2'b00	(Don't Care because MEAS3_AMB = 1)
MEAS3_DRVC= 2'b00	(Don't Care because MEAS3_AMB = 1)
MEAS3_PPG1_ADC_RGE[1:0]	(PPG1 Gain Range Control)
MEAS3_PPG2_ADC_RGE[1:0]	(PPG2 Gain Range Control)
MEAS3_PPG_TINT[1:0]	(LED Pulse Width Control)
MEAS3_PPG1_PDSEL = 1'b0	(Photodiode 1 selected on Optical Channel 1)
MEAS3_PPG2_PDSEL = 1'b0	(Photodiode 2 selected on Optical Channel 2)

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

With this configuration the sample sequence and the data format in the FIFO follows the following time/location sequence.

tag 1, PPG1 IR data tag 1, PPG2 IR data tag 2, PPG1 RED data tag 2, PPG2 RED data tag 3, PPG1 Ambient data tag 3, PPG2 Ambient data tag 1, PPG1 IR data tag 1, PPG2 IR data tag 2, PPG1 RED data tag 2, PPG2 RED data tag 3, PPG1 Ambient data tag 3, PPG2 Ambient data tag 1, PPG1 IR data tag 1, PPG2 IR data tag 2, PPG1 RED data tag 2, PPG2 RED data tag 3, PPG1 Ambient data tag 3, PPG2 Ambient data

where:

PPGm IR data = Ambient corrected exposure data from IR LED in Optical channel m

PPGm RED data = Ambient corrected exposure data from RED LED in Optical channel m

PPGm Ambient data = Direct ambient sample in Optical channel m

m = 1 for Optical Channel 1, and 2 for Optical Channel 2

For a second example, assume it is desired to pulse IR LED and RED LED simultaneously while also monitoring the ambient level.

### Table 10. SYSTEM CONFIGURATION

SYSTEM CONFIGURATION		
MEAS1_EN = 1'b1	(IR LED and RED LED exposure)	
MEAS2_EN = 1'b0	(NONE)	
MEAS3_EN = 1'b0	(NONE)	
MEAS4_EN = 1'b1	(DIRECT AMBIENT exposure)	
MEAS5_EN = 1'b0	(NONE)	
MEAS6_EN = 1'b0	(NONE)	
MEAS7_EN = 1'b0	(NONE)	
MEAS8_EN = 1'b0	(NONE)	
MEAS9_EN = 1'b0	(NONE)	
MEASUREMENT 1 Setup (IR LED ON LED DRVA ON PIN 1, RED LED ON LED DRVB ON PIN 3)		

### Table 10. SYSTEM CONFIGURATION (continued)

MEAS1_AMB = 1'b0	(Ambient measurement off)	
MEAS1_DRVA= 2'b00	(LED Driver A on pin 1 and Current is non-zero)	
MEAS1_DRVB= 2'b01	(LED Driver B on pin 3 and Current is non-zero)	
MEAS1_DRVC= 2'b00	(Don't Care because Current is 0)	
MEAS1_PPG1_ADC_RGE[1:0]	(PPG1 Gain Range Control)	
MEAS1_PPG2_ADC_RGE[1:0]	(PPG2 Gain Range Control)	
MEAS1_PPG_TINT[1:0]	(LED Pulse Width Control)LED Pulse Amplitude	
MEAS1_DRVA_PA[7:0] = 8'h0B	(LED Driver A Current)	
MEAS1_DRVB_PA[7:0] = 8'h0E	(LED Driver B Current)	
MEAS1_DRVC_PA[7:0] = 8'h00	(LED Driver C Current)	
MEASUREMENT 4 SETUP (AMBIENT MEASUREMENT)		
MEAS4_AMB = 1'b1	(Ambient measurement selected)	
MEAS4_DRVA= 2'b00	(Don't Care because MEAS4_AMB = 1)	
MEAS4_DRVB= 2'b00	(Don't Care because MEAS4_AMB = 1)	
MEAS4_DRVC= 2'b00	(Don't Care because MEAS4_AMB = 1)	
MEAS4_PPG1_ADC_RGE[1:0]	(PPG1 Gain Range Control)	
MEAS4_PPG2_ADC_RGE[1:0]	(PPG2 Gain Range Control)	
MEAS4_PPG_TINT[1:0]	(LED Pulse Width Control)	

In this case, the sequencing in the FIFO is,

tag 1, PPG1 IR+RED data tag 1, PPG2 IR+RED data tag 4, PPG1 Ambient data tag 4, PPG2 Ambient data tag 1, PPG1 IR+RED data tag 1, PPG2 IR+RED data tag 4, PPG1 Ambient data . . tag 1, PPG1 IR+RED data tag 1, PPG1 IR+RED data tag 4, PPG2 Ambient data tag 4, PPG2 Ambient data

where:

PPGm IR+RED data = Ambient corrected exposure data from IR and RED for optical channel m PPGm Ambient data = Direct ambient corrected sample for optical channel m m = 1 for Optical Channel 1, and 2 for Optical Channel 2

The number of bytes of data for the two Optical Channels in one frame is given by: 2 x 3 x N

where, N is the number of measurements enabled

To calculate the number of data items available in the FIFO the following pseudo-code can be performed:

read the OVF\_COUNTER register read the FIFO\_DATA\_COUNT registers if OVF\_COUNTER == 0 //no overflow occurred NUM\_AVAILABLE\_SAMPLES = FIFO\_DATA\_COUNT else NUM\_AVAILABLE\_SAMPLES = 256 // overflow occurred and data has been lost endif

#### FIFO\_A\_FULL (address 0x09)

The FIFO\_A\_FULL[7:0] field in the FIFO Configuration 1 register (0x09) sets the watermark for the FIFO and determines when the A\_FULL bit in the Status register (0x00) gets asserted. The A\_FULL bit sets when the number of data items in FIFO is equal to 256 minus FIFO\_A\_FULL[7:0]. The interrupt is routed to the INT1 if A\_FULL\_EN1 mask bit in the Interrupt 1 Enable 1 register (0x78) is set, and to the INT2 pin if the A\_FULL\_EN2 mask bit in Interrupt 2 Enable 1 register (0x7C) is set. This condition should prompt the applications processor to read samples from the FIFO immediately. The A\_FULL bit is cleared when the status register is read.

The application processor can read both the FIFO\_WR\_PTR[7:0] and FIFO\_RD\_PTR[7:0] to calculate the number of data items available in the FIFO, or just read the OVF\_COUNTER[6:0] and FIFO\_DATA\_COUNT[8:0] registers, and read as many data items as it needs to empty the FIFO. Alternatively, if the application always responds much faster than the selected sample rate, it could read 256 minus FIFO\_A\_FULL[7:0] number of data items every time it gets an A\_FULL interrupt and be assured that all data from the FIFO are read.

#### FIFO\_RO (address 0x0A)

The FIFO\_RO bit in the FIFO Configuration 2 register (0x0A) determines whether samples get pushed on to the FIFO when it is full. If FIFO\_RO is set to 1, push is enabled when FIFO is full, old samples are lost. Both FIFO\_WR\_PTR and FIFO\_RD\_PTR increment for each data item pushed to the FIFO after it is full. If FIFO\_RO is set to 0, the new sample is dropped and the FIFO is not updated. FIFO\_WR\_PTR and FIFO\_RD\_PTR do not increment until a data item is read from the FIFO.

#### A\_FULL\_TYPE (address 0x0A)

The A\_FULL\_TYPE bit defines the behavior of the A\_FULL interrupt. If the A\_FULL\_TYPE bit is set low, the A\_FULL interrupt gets asserted when the A\_FULL condition is detected and cleared by a status register read, but reasserts for every sample if the A\_FULL condition persists. If A\_FULL\_TYPE bit is set high, the A\_FULL interrupt gets asserted only when a new A\_FULL condition is detected. The interrupt gets cleared on the Interrupt Status 1 register read, and does not reassert for every sample until a new A\_FULL condition is detected.

#### FIFO\_STAT\_CLR (address 0x0A)

The FIFO\_STAT\_CLR bit defines whether the A\_FULL interrupt should get cleared by FIFO\_DATA[7:0] register read. If FIFO\_STAT\_CLR is set low, A\_FULL and FIFO\_DATA\_RDY interrupts do not get cleared by the FIFO\_DATA register read but get cleared by the status register read. If FIFO\_STAT\_CLR is set high, A\_FULL and FIFO\_DATA\_RDY interrupts get cleared by a FIFO\_DATA register read or a status register read.

#### FLUSH\_FIFO (address 0x0A)

The FIFO Flush bit is used for flushing the FIFO. The FIFO becomes empty and the FIFO\_WR\_PTR[7:0], FIFO\_RD\_PTR[7:0], FIFO\_DATA\_COUNT[8:0] and OVF\_COUNTER[6:0] get reset to zero. FLUSH\_FIFO is a self-clearing bit.

#### **Ambient Rejection**

The MAX86171 implements ambient light cancellation in two steps, a coarse cancellation and a fine cancellation. Each MEASx gets its own ambient light cancellation. The coarse cancellation is in the analog domain. It is enabled by default and can be disabled by setting register bit ALC\_DISABLE. The fine cancellation is a digital cancellation scheme and is configured as central difference method (CDM) or forward different method (FDM) (register bit MEASx\_FILT\_SEL).

### Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

ALC is an analog sample and hold which can cancel up to 200µA of DC photodiode current. Any drift or residual from ALC is cancelled by CDM/FDM cancellation.

CDM is comprised of 3 ADC conversions with 2 ambient and 1 exposure conversion. FDM is comprised of 2 ADC conversions with 1 ambient only and 1 exposure conversion.

The ambient and exposure samples are used for digital cancellation of any residual error (from ALC) or drift (in ambient signal). The final computed value is the effective exposure signal which is stored in the FIFO. See <u>Figure 7</u> for the timing diagram for CDM and <u>Figure 8</u> shows the timing diagram for FDM.


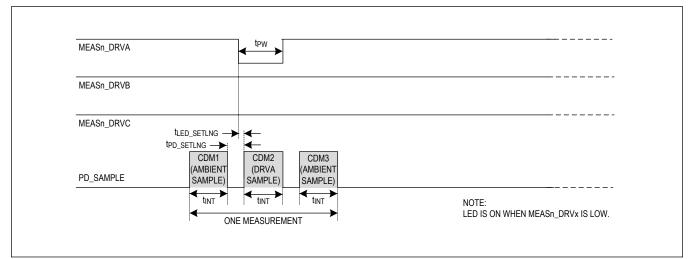


Figure 7. Central Difference Method (CDM)



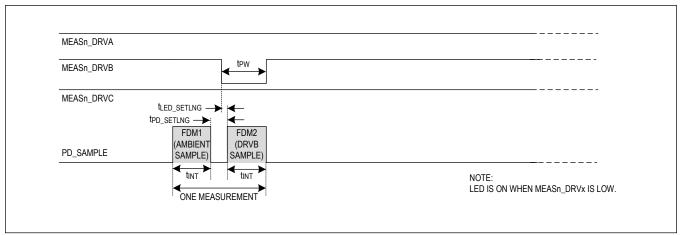

#### **Threshold Detect Function**

The MAX86171 includes a threshold detect function that significantly reduces energy consumption and extends battery life when the sensor is not in contact with skin. There are two thresholds available in MAX86171, THRESHOLD1 and THRESHOLD2. Both are disabled by default.

The Threshold function is enabled by setting THRESHx\_HILO\_EN1 (x = 1, 2) in register 0x78 and THRESHx\_HILO\_EN2(x = 1,2) in register 0x7C. The Threshold detect function can be set up for either PPG1 or PPG2 through THRESH2\_PPG\_SEL and THRESH1\_PPG\_SEL (register 0x69). In order to configure the threshold detect function, both an upper limit and a lower limit must be set. These can be configured in the THRESHOLD Interrupts

register block (0x68 to 0x6D).

In addition, two features are available to make the threshold detect function more adaptable for various system and application requirements. These are Time Hysteresis and Level Hysteresis (TIME\_HYST[1:0] and LEVEL\_HYST[2:0] bits) and are configurable through the THRESHOLD\_HYST register (0x69).

When enabled, the THRESHx\_HILO interrupt bit (register 0x00) is asserted and threshold mode is activated when the ADC counts of the assigned measurement on the specified PPG channel drops below the lower limit, or exceeds the upper limit (in consideration with LEVEL\_HYST and TIME\_HYST settings). The LED configuration during the threshold detect active mode is determined by the firmware settings as needed for each application. The LED current, ADC integration time, and frame rate can be reduced significantly; thereby reducing power consumption during situations when there is no reflective returned signal.

#### **Picket Fence Detect-and-Replace Function**

Under typical situations, the rate of change of ambient light is such that the ambient signal level during exposure can be accurately predicted and high levels of ambient rejection are obtained. However, it is possible to have situations where the ambient light level changes extremely rapidly, for example when in a car with direct sunlight exposure passes under a bridge and into a dark shadow. In these situations, it is possible for the MAX86171 ambient light correction (ALC) circuit to fail and produce an erroneous estimation of the ambient light during the exposure interval. The MAX86171 has a built-in algorithm called the picket fence function that corrects the final PPG results in case of the ALC circuit failure due to these extreme conditions.

The picket fence function works on the basis that the extreme conditions causing a failure of the ALC are rare events. These events result in a large deviation from the past sample history of a normal PPG signal, which normally would change relatively slowly with respect to the sampling interval. Under these conditions, the picket fence function enables the user to detect sample values that are well outside the normal sample-to-sample deviation and replace those samples with an extrapolated value based on the relatively recent history of samples.

The picket fence function is configured in the Picket Fence Measurement Select Register (address 0x70). Picket Fence can be enabled on any of the 9 measurements at any one time. Also, picket fence can be enabled on one or both PPG channels. The power-on-reset default of MAX86171 has the picket fence function disabled. The function begins with detecting a picket fence event. Detection is done by taking the absolute value of the difference between the present ADC converted value and a predicted point called an estimation error, and comparing this estimation error to a threshold. If the estimation error exceeds the threshold, then the present ADC converted point is considered a picket fence event.

The predicted point referred to above is computed in one of two ways, set by the value in the PF\_ORDER (address 0x71[6]) bit. If PF\_ORDER = 0 the predicted point is simply the previous ADC converted point. If PF\_ORDER = 1 the predicted point is a least square fit extrapolation based on the previous four picket fence outputs, which under normal circumstances is identical to the ADC converted inputs.

The threshold used in detecting a picket fence event is a low pass version of the running estimation error computed above times a multiplier. The multiplier used is set by the THRESHOLD\_SIGMA\_MULT (address 0x71[1:0]) bits and can be 4, 8, 16, or 32 times the running low-pass filter output of the estimation error.

The low pass filter function is controlled by two parameters, the IIR\_TC (address 0x71[5:4]) bits and IIR\_INIT\_VALUE (address 0x71[3:2]) bits. The IIR\_TC bits control the filter's time constant and are adjustable from 8 to 64 samples. The IIR\_INIT\_VALUE bits control the initial values for the IIR low pass filter when the algorithm is initialized.

Figure 9 below illustrates the function in block diagram form. If the picket fence algorithm is enabled (address 0x70), the input from the ADC, s(n) generates p(n) in a way that is dependent on the value of the PF\_ORDER bit. Value s(n) is subtracted from p(n) and turned into a positive number d(n) and fed into the IIR low pass filter producing value lpf(n). The output of the low pass filter lpf(n) is then multiplied by a user constant, THRESHOLD\_SIGMA\_MULT to produce the picket fence threshold, PFT(n). The value d(n) is then compared to this threshold and if greater than the PFT(n), the point s(n) is replaced with the point p(n).

This scheme essentially produces a threshold that tracks the past returned optical signal with a bandwidth based on the past historical change from sample to sample. Figure 10 below illustrates graphically how the threshold detection scheme works on a real PPG signal. Note that the black trace is the real ADC sample points, the red trace is the output of the low pass filter of the error estimation mirrored around the ADC points, and the blue traces are the threshold values.

The recommended settings for the picket fence algorithm are the default power on reset values for all registers except

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

the THRESHOLD\_SIGMA\_MULT bits. Here, it is recommended that the 32x value 0x3 be used so only large excursions are classified as picket fence events. Lower values of THRESHOLD\_SIGMA\_MULT can cause the algorithm to go off track in case of an extremely noisy waveform.

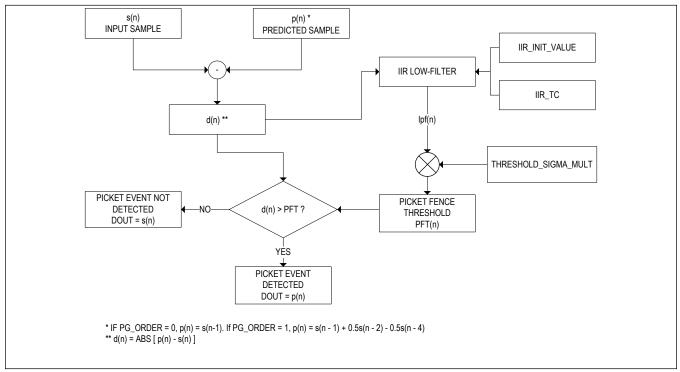


Figure 9. Picket Fence Function Flow

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

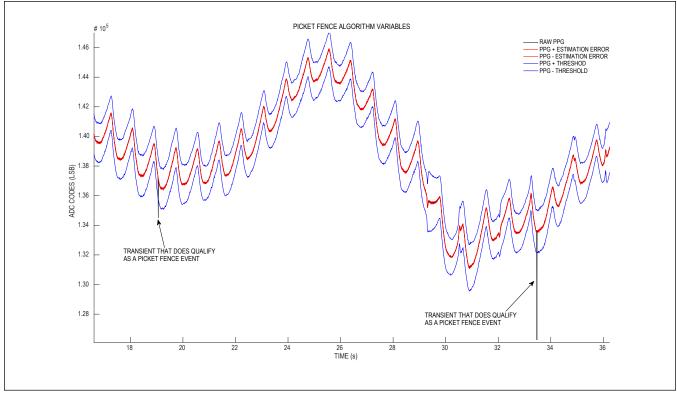


Figure 10. Picket Fences Variables In A PPG Waveform

#### **Digital Interface**

The MAX86171 has an I<sup>2</sup>C and SPI combination interface. The I2C\_SEL pin selects between the two interfaces. When I2C\_SEL is high, the interface is in the I<sup>2</sup>C mode and idles looking for a start bit to occur on the SCL and SDA pins, while the SPI interface is held in a reset state. When I2C\_SEL is low, the I<sup>2</sup>C interface is in a reset state, the SPI interface is activated and the SDO pin goes active. In the following sections, both interface timings and protocols are described.

#### **SPI** Timing

#### **Detailed SPI Timing**

The MAX86171 detailed SPI timing diagram is illustrated in <u>Figure 11</u>. The timings indicated are all specified in the <u>Electrical Characteristics</u> section.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

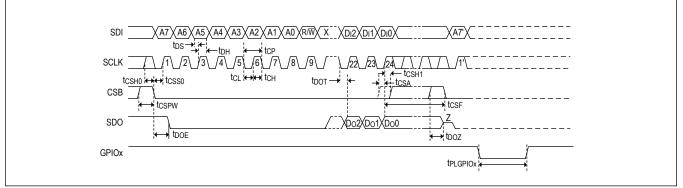


Figure 11. Detailed SPI Timing Diagram

#### Single-Word SPI Register Read/Write Transaction

The SPI interface on the MAX86171 is SPI/QSPI/Micro-wire/DSP compatible. The operation of the SPI interface is shown in <u>Figure 12</u>. Data is strobed into the MAX86171 on the SCLK rising edge while clocked out on the SCLK falling edge. All single-word SPI read and write operations are done in a three-byte, 24-clock-cycle SPI instruction framed by a CSB low interval. The content of the SPI operation consists of a one-byte register address, A[7:0], followed by a one byte command word which defines the transaction as write or read, followed by a single-byte data word either written to or read from the register location provided in the first byte.

Write mode operations are executed on the 24<sup>th</sup> SCLK rising edge using the first three bytes of data available. In write mode, any data supplied after the 24th SCLK rising edge is ignored. Subsequent writes require CSB to deassert high and then assert low for the next write command. A rising CSB edge preceding the 24th rising edge of SCLK (Figure 11), results in the transaction being aborted.

Read mode operations access the requested data on the 16th SCLK rising edge, and present the MSB of the requested data on the following SCLK falling edge, allowing the SPI master to latch the data MSB on the 17th SCLK rising edge. Configuration and status registers are available via normal mode read-back sequences. FIFO reads must be done with a burst mode FIFO read (see <u>SPI FIFO Burst Mode Read Transaction</u> section). If more than 24 SCLK rising edges are provided in a normal read sequence then the excess edges are ignored and the device reads back zeros.

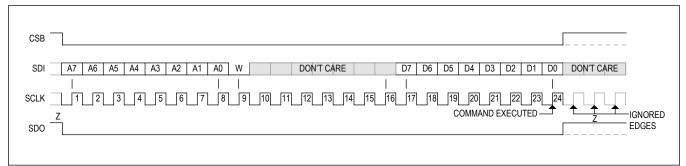


Figure 12. SPI Write Transaction

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

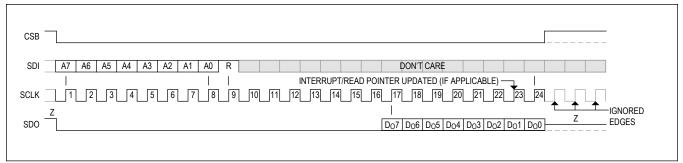


Figure 13. SPI Read Transaction

#### SPI FIFO Burst Mode Read Transaction

The MAX86171 provides a FIFO burst read mode to increase data transfer efficiency. The first 16 SCLK cycles operate exactly as described for the normal read mode, the first byte being the register address, the second being a read command. The subsequent SCLKs consist of FIFO data, 24 SCLKs per word. All words in the FIFO should be read with a single FIFO burst read command.

Each FIFO sample consists of three bytes per sample ([[FIFO Data Format]]); thus, requires 24 SCLKs per sample to read out. The first byte (SCLK 17 to 24) consists of a tag indicating the data type of the subsequent bits. Following the tag is the MSBs of the subsequent data (MSB, MSB1, MSB2, and MSB3). The next byte (SCLK 25 to 32) consists of data bits MSB4 to MSB11. The final byte of each sample (SCLK 33 to 40) consists of the data LSB bits. The number of words in the FIFO depends on the FIFO configuration. See the FIFO\_A\_FULL (0x09) section for more details.

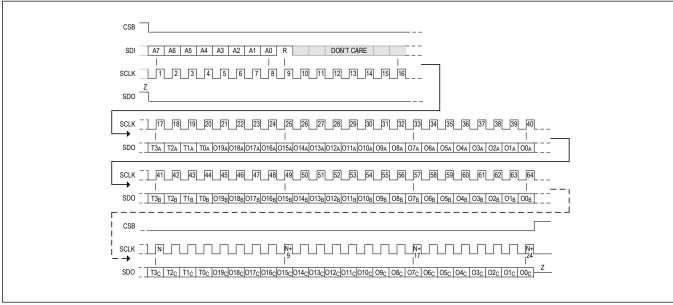


Figure 14. SPI FIFO Burst Mode Read Transaction

#### I<sup>2</sup>C/SMBus-Compatible Serial Interface

The I<sup>2</sup>C interface on the MAX86171 is an I<sup>2</sup>C/SMBus-compatible, 2-wire serial interface consisting of a serial data line (SDA) and a serial clock line (SCL). SDA and SCL facilitate communication between the MAX86171 and the master at clock rates up to 400kHz.

Figure 15 shows the 2-wire interface timing diagram. The master generates SCL and initiates data transfer on the bus. The master device writes data to the MAX86171 by transmitting the proper slave address followed by the register address and then the data word. Each transmit sequence is framed by a START (S) or REPEATED START (Sr) condition and a

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

STOP (P) condition. Each word transmitted to the MAX86171 is eight-bits long and is followed by an acknowledge clock pulse. A master reading data from the MAX86171 transmits the proper slave address followed by a series of nine SCL pulses. The MAX86171 transmits data on SDA in sync with the master-generated SCL pulses. The master acknowledges receipt of each byte of data. Each read sequence is framed by a START (S) or REPEATED START (Sr) condition, a not acknowledge, and a STOP (P) condition. SDA operates as both an input and an open-drain output. A pullup resistor is required on SDA. SCL operates only as an input. A pullup resistor is required on SCL if there are multiple masters on the bus, or if the single master has an open-drain SCL output. Series resistors in line with SDA and SCL are optional. Series resistors protect the digital inputs of the MAX86171 from high voltage spikes on the bus lines, and minimize crosstalk and undershoot of the bus signals.

#### Detailed I<sup>2</sup>C Timing Diagram

The detailed timing diagram of various electrical characteristics is shown in Figure 15.

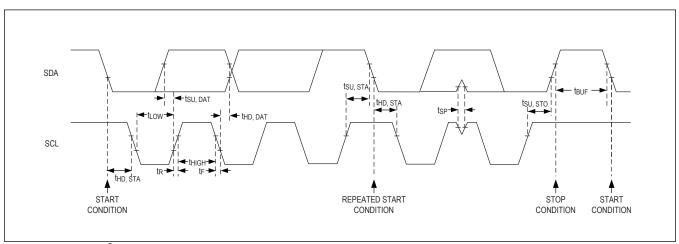


Figure 15. Detailed I<sup>2</sup>C Timing Diagram

#### Bit Transfer

One data bit is transferred during each SCL cycle. The data on SDA must remain stable during the high period of the SCL pulse. Changes in SDA while SCL is high are control signals (see the <u>START and STOP Conditions</u> section).

#### **START and STOP Conditions**

SDA and SCL idle high when the bus is not in use. A master initiates communication by issuing a START condition. A START condition is a high-to-low transition on SDA with SCL high. A STOP condition is a low-to-high transition on SDA while SCL is high (Figure 16). A START condition from the master signals the beginning of a transmission to the MAX86171. The master terminates transmission and frees the bus by issuing a STOP condition. The bus remains active if a REPEATED START condition is generated instead of a STOP condition.

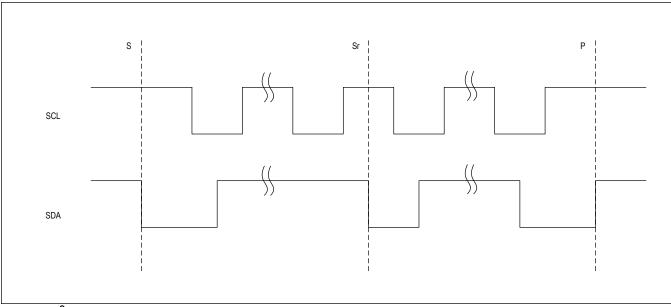


Figure 16. I<sup>2</sup>C START, STOP, and REPEATED START Conditions

#### Early STOP Conditions

The MAX86171 recognizes a STOP condition at any point during data transmission except if the STOP condition occurs in the same high pulse as a START condition. For proper operation, do not send a STOP condition during the same SCL high pulse as the START condition.

#### Slave Address

The slave address is defined as the seven most significant bits (MSBs) followed by the read/write bit. For the MAX86171 the seven most significant bits are 0b110010X, where X is determined by the CSB/ADDR pin. For read mode, set the read/write bit to 1. For write mode, set the read/write bit to 0. The address is the first byte of information sent to the IC after the START condition. See <u>Table 11</u>.

### Table 11. I<sup>2</sup>C Slave Address

ADDR PIN	WRITE	READ
High	0xCA	0xCB
Low	0xC8	0xC9

#### Acknowledge Bit

The acknowledge bit (ACK) is a clocked 9<sup>th</sup> bit that the MAX86171 uses to handshake receipt of each byte of data when in write mode (Figure 17). The MAX86171 pulls down SDA during the entire master-generated 9<sup>th</sup> clock pulse if the previous byte is successfully received. Monitoring ACK allows for detection of unsuccessful data transfers. An unsuccessful data transfer occurs if a receiving device is busy or if a system fault has occurred. In the event of an unsuccessful data transfer, the bus master retries communication. The master pulls down SDA during the 9<sup>th</sup> clock cycle to acknowledge receipt of data when the MAX86171 is in read mode. An acknowledge is sent by the master after each read byte to allow data transfer to continue. A not-acknowledge (NACK) is sent when the master reads the final byte of data from the MAX86171 followed by a STOP condition.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

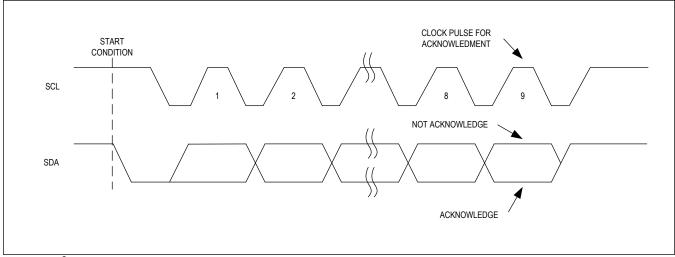


Figure 17. I<sup>2</sup>C Acknowledge Bit

### I<sup>2</sup>C Write Data Format

A write to the MAX86171 includes transmission of a START condition, the slave address with the R/W bit set to 0, one byte of data to configure the internal register address pointer, one or more bytes of data, and a STOP condition. Figure <u>18</u> illustrates the proper frame format for writing one byte of data to the MAX86171. Figure <u>19</u> illustrates the frame format for writing n-bytes of data to the MAX86171.

The slave address with the R/W bit set to 0 indicates that the master intends to write data to the MAX86171. The MAX86171 acknowledges receipt of the address byte during the master-generated 9<sup>th</sup> SCL pulse.

The second byte transmitted from the master configures the MAX86171 internal register address pointer. The pointer tells the MAX86171 where to write the next byte of data. An acknowledge pulse is sent by the MAX86171 upon receipt of the address pointer data.

The third byte sent to the MAX86171 contains the data that is written to the chosen register. An acknowledge pulse from the MAX86171 signals receipt of the data byte. The address pointer autoincrements to the next register address after each received data byte. This autoincrement feature allows a master to write to sequential registers within one continuous frame. The master signals the end of transmission by issuing a STOP condition. The autoincrement feature is disabled when there is an attempt to write to the FIFO\_DATA register.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

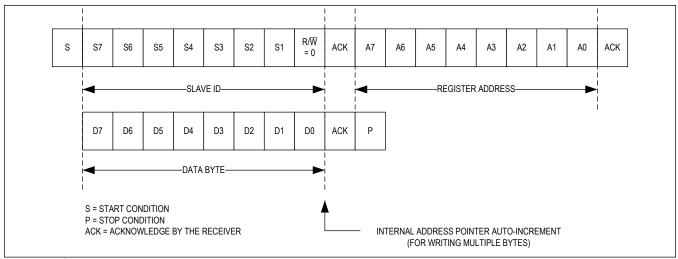


Figure 18. I<sup>2</sup>C Single Byte Write Transaction

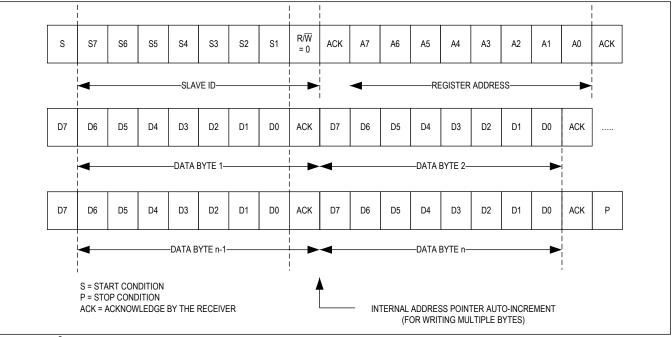


Figure 19. I<sup>2</sup>C Multi-Byte Write Transaction

## I<sup>2</sup>C Read Data Format

Send the slave address with the  $R/\overline{W}$  bit set to 1 to initiate a read operation. The MAX86171 acknowledges receipt of its slave address by pulling SDA low during the 9th SCL clock pulse. A START command followed by a read command resets the address pointer to register 0x00.

The first byte transmitted from the MAX86171 is the contents of register 0x00. Transmitted data is valid on the rising edge of SCL. The address pointer auto-increments after each read data byte. This auto-increment feature allows all registers to be read sequentially within one continuous frame. The auto\_increment feature is disabled when there is an attempt to read from the FIFO\_DATA register. A STOP condition can be issued after any number of read data bytes. If a STOP condition is issued followed by another read operation, the first data byte to be read is from register 0x00.

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

The address pointer can be preset to a specific register before a read command is issued. The master presets the address pointer by first sending the MAX86171 slave address with the R/W bit set to 0 followed by the register address. A REPEATED START condition is then sent followed by the slave address with the R/W bit set to 1. The MAX86171 then transmits the contents of the specified register. The address pointer auto-increments after transmitting the first byte.

The master acknowledges receipt of each read byte during the acknowledge clock pulse. The master must acknowledge all correctly received bytes except the last byte. The final byte must be followed by a NACK from the master and then a STOP condition.

Figure 20 illustrates the frame format for reading one byte from the MAX86171. Figure 21 illustrates the frame format for reading multiple bytes from the MAX86171.

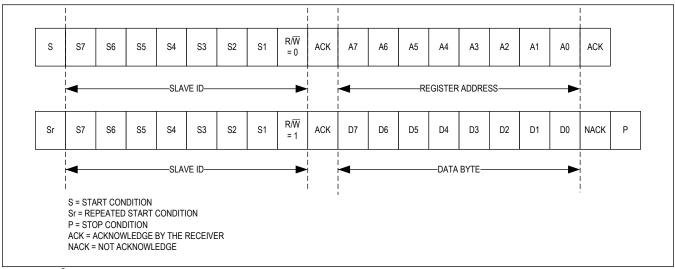


Figure 20. I<sup>2</sup>C Single Byte Read Transaction

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

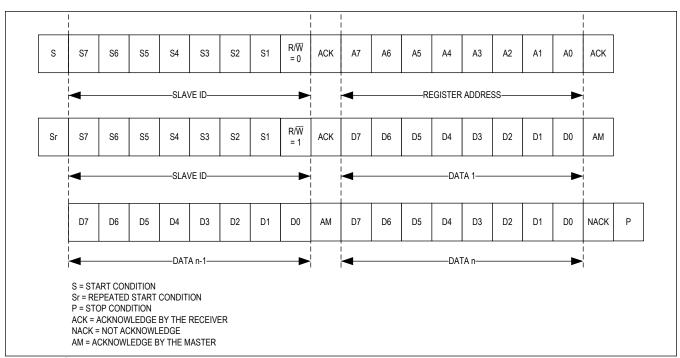


Figure 21. I<sup>2</sup>C Multi-Byte Read Transaction

## **PCB Layout Guidelines**

MAX86171 is a high dynamic range analog front-end (AFE) and its performance can be adversely impacted by the physical printed circuit board (PCB) layout. It is important that all bypass recommendation in the pin table be followed. Specifically, it is recommended that the  $V_{DD\_ANA}$  and  $V_{DD\_DIG}$  pins be shorted at the PCB. It is also recommended that GND, and PGND be shorted to a single PCB ground plane.

The combined V<sub>DD\_ANA</sub> and V<sub>DD\_DIG</sub> pins should then be decoupled with a  $0.1\mu$ F and a larger ceramic chip capacitor around  $10\mu$ F to the PCB Ground plane. In addition, the VREF pin should be decoupled to the PCB Ground plane with a  $1.0\mu$ F ceramic capacitor. The voltage on the VREF pin is nominally 1.21V, so a 6.3V-rated ceramic capacitor should be adequate for this purpose. It is recommended that all decoupling caps use individual vias to the PCB Ground plane to avoid mutual impedance coupling between decoupled supplies when sharing vias.

The most critical aspect of the PCB layout of MAX86171 is the handling of the PD\_IN and PD\_GND nodes. Parasitic capacitive coupling to the PD\_IN can result in additional noise being injected into the MAX86171 front-end. To minimize external interference coupling to PD\_IN, it is recommended that the PD\_IN node be fully shielded by the PD\_GND node. An example of this recommendation is in Figure 22. The PD\_IN node is shielded with a coplanar PD\_GND trace. The photodiode cathode should be entirely shielded with the PD\_GND shield, which is also the photodiode anode. The PD\_GND pin should only be attached to the PCB Ground in only one point.

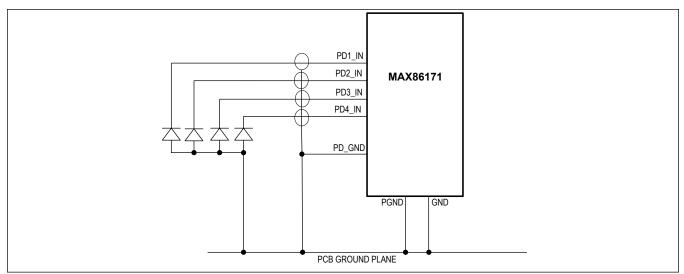


Figure 22. PCB Layout Recommendation

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

# **Register Map**

## **User Register Map**

ADDRESS	NAME	MSB							LSB
Status			I	1	I	1	<u> </u>	I	
0x00	Status 1[7:0]	A_FULL	FRAME_ RDY	FIFO_D ATA_RD Y	ALC_OV F	EXP_OV F	THRESH 2_HILO	THRESH 1_HILO	PWR_R DY
0x01	Status 2[7:0]	LED9_C OMPB	VDD_O OR	_	_	_	INVALID _CFG	_	_
0x02	<u>Status 3[7:0]</u>	LED8_C OMPB	LED7_C OMPB	LED6_C OMPB	LED5_C OMPB	LED4_C OMPB	LED3_C OMPB	LED2_C OMPB	LED1_C OMPB
FIFO									
0x04	FIFO Write Pointer[7:0]				FIFO_WR	_PTR[7:0]			
0x05	FIFO Read Pointer[7:0]				FIFO_RD	_PTR[7:0]			
0x06	FIFO Counter 1[7:0]	FIFO_D ATA_CO UNT_MS B			OVF	_COUNTEF	R[6:0]		
0x07	FIFO Counter 2[7:0]			FIF	D_DATA_C	OUNT_LSB	[7:0]		
0x08	FIFO Data Register[7:0]				FIFO_D	ATA[7:0]			
0x09	FIFO Configuration 1[7:0]				FIFO_A_	FULL[7:0]			
0x0A	FIFO Configuration 2[7:0]	_	_	_	FLUSH_ FIFO	FIFO_ST AT_CLR	A_FULL _TYPE	FIFO_R O	_
System Co	ntrol								
0x0C	System Configuration 1[7:0]	MEAS9_ EN	SW_FO RCE_SY NC	SYNC_M	IODE[1:0]	PPG2_P WRDN	PPG1_P WRDN	SHDN	RESET
0x0D	System Configuration 2[7:0]	MEAS8_ EN	MEAS7_ EN	MEAS6_ EN	MEAS5_ EN	MEAS4_ EN	MEAS3_ EN	MEAS2_ EN	MEAS1_ EN
0x0E	System Configuration 3[7:0]	-	_	-	ALC_DIS ABLE	-	-	COLLEC T_RAW_ DATA	MEAS1_ CONFIG _SEL
0x0F	Photodiode Bias[7:0]	PD4_B	AS[1:0]	PD3_B	AS[1:0]	PD2_B	AS[1:0]	PD1_B	AS[1:0]
0x10	Pin Functional Configuration[7:0]	_	-	-	INT2_F	CFG[1:0]	_	-	TRIG_IC FG
0x11	Output Pin Configuration[7:0]	INT2_OCFG[1:0] INT1_OCFG[1:0] -					_		
Frame Rate	Clock								
0x15	FR Clock Frequency Select[7:0]	FR_CLK FINE_TUNE[4:0]							
0x16	FR Clock Divider MSB[7:0]	- FR_CLK_DIV_H[6:0]							
0x17	FR Clock Divider LSB[7:0]		·		FR_CLK_	DIV_L[7:0]			

ADDRESS	NAME	MSB							LSB	
MEAS1 Set	up									
0x18	MEAS1 Selects[7:0]	-	MEAS1_ AMB	MEAS1_[	DRVC[1:0]	MEAS1_[	DRVB[1:0]	MEAS1_I	DRVA[1:0]	
0x19	MEAS1 Configuration 1[7:0]	_	MEAS1_ PPG2_P DSEL	MEAS1_ PPG1_P DSEL	MEAS1_	TINT[1:0]	TINT[1:0] MEAS1_AVER[2:0]			
0x1A	MEAS1 Configuration 2[7:0]	MEAS1_ SINC3_S EL	MEAS1_ FILT_SE L	_	.ED_RGE[ :0]	MEAS1_P _RGI	PG2_ADC E[1:0]		MEAS1_PPG1_ADC _RGE[1:0]	
0x1B	MEAS1 Configuration 3[7:0]		D_SETLN 1:0]		.ED_SETL [1:0]	MEAS1_P OFF	PG2_DAC [1:0]		PG1_DAC [1:0]	
0x1C	MEAS1 DRVA Current[7:0]				MEAS1_DF	RVA_PA[7:0]				
0x1D	MEAS1 DRVB Current[7:0]				MEAS1_DF	RVB_PA[7:0]				
0x1E	MEAS1 DRVC Current[7:0]				MEAS1_DF	RVC_PA[7:0]	]			
MEAS2 Set	up									
0x20	MEAS2 Selects[7:0]	-	MEAS2_ AMB	MEAS2_[	DRVC[1:0]	MEAS2_[	DRVB[1:0]	MEAS2_I	DRVA[1:0]	
0x21	MEAS2 Configuration 1[7:0]	-	MEAS2_ PPG2_P DSEL	MEAS2_ PPG1_P DSEL	MEAS2_	TINT[1:0]	TINT[1:0] MEAS2_AVER[2:0]			
0x22	MEAS2 Configuration 2[7:0]	MEAS2_ SINC3_S EL	MEAS2_ FILT_SE L	_	.ED_RGE[ :0]	MEAS2_P _RGI	PG2_ADC E[1:0]		PG1_ADC E[1:0]	
0x23	MEAS2 Configuration 3[7:0]		D_SETLN 1:0]		.ED_SETL [1:0]	MEAS2_P OFF	PG1_DAC [1:0]		PG1_DAC [1:0]	
0x24	MEAS2 DRVA Current[7:0]				MEAS2_DF	RVA_PA[7:0]	]			
0x25	MEAS2 DRVB Current[7:0]				MEAS2_DF	RVB_PA[7:0]				
0x26	MEAS2 DRVC Current[7:0]				MEAS2_DF	RVC_PA[7:0]	]			
MEAS3 Set	ир									
0x28	MEAS3 Selects[7:0]	-	MEAS3_ AMB	MEAS3_[	DRVC[1:0]	MEAS3_[	DRVB[1:0]	MEAS3_I	DRVA[1:0]	
0x29	MEAS3 Configuration 1[7:0]	-	MEAS3_ PPG2_P DSEL	MEAS3_ PPG1_P DSEL	MEAS3_	TINT[1:0]	ME	AS3_AVER	[2:0]	
0x2A	MEAS3 Configuration 2[7:0]	MEAS3_ SINC3_S EL	MEAS3_ FILT_SE L		.ED_RGE[ :0]	MEAS3_PPG2_ADC _RGE[1:0]			PG1_ADC E[1:0]	
0x2B	MEAS3 Configuration 3[7:0]		D_SETLN 1:0]		.ED_SETL [1:0]		PG2_DAC [1:0]		PG1_DAC [1:0]	
0x2C	MEAS3 DRVA Current[7:0]	MEAS3_DRVA_PA[7:0]								
0x2D	MEAS3 DRVB Current[7:0]		MEAS3_DRVB_PA[7:0]							

ADDRESS	NAME	MSB							LSB	
0x2E	MEAS3 DRVC Current[7:0]		1		MEAS3_DF	RVC_PA[7:0]			1	
MEAS4 Set	ир									
0x30	MEAS4 Selects[7:0]	-	MEAS4_ AMB	MEAS4_D	DRVC[1:0]	/C[1:0] MEAS4_DRVB[1:0]		MEAS4_	MEAS4_DRVA[1:0]	
0x31	MEAS4 Configuration 1[7:0]	_	MEAS4_ PPG2_P DSEL	MEAS4_ PPG1_P DSEL	MEAS4_	TINT[1:0]	ME	AS4_AVER	[2:0]	
0x32	MEAS4 Configuration 2[7:0]	MEAS4_ SINC3_S EL	MEAS4_ FILT_SE L		ED_RGE[ 0]	MEAS4_P _RGI	PG2_ADC =[1:0]		PG1_ADC E[1:0]	
0x33	MEAS4 Configuration 3[7:0]		PD_SETLN 1:0]	MEAS4_L NG[			PG2_DAC [1:0]		PG1_DAC [1:0]	
0x34	MEAS4 DRVA Current[7:0]				MEAS4_DF	RVA_PA[7:0]				
0x35	MEAS4 DRVB Current[7:0]				MEAS4_DF	RVB_PA[7:0]				
0x36	MEAS4 DRVC Current[7:0]				MEAS4_DF	RVC_PA[7:0]				
MEAS5 Set	up									
0x38	MEAS5 Selects[7:0]	-	MEAS5_ AMB	MEAS5_D	DRVC[1:0]	MEAS5_D	DRVB[1:0]	MEAS5_	DRVA[1:0]	
0x39	MEAS5 Configuration 1[7:0]	_	MEAS5_ PPG2_P DSEL	MEAS5_ PPPG1_ PDSEL	MEAS5_	TINT[1:0]	ME	AS5_AVER	[2:0]	
0x3A	MEAS5 Configuration 2[7:0]	MEAS5_ SINC3_S EL	MEAS5_ FILT_SE L		ED_RGE[ 0]	MEAS5_P _RGE	PG2_ADC E[1:0]		PG1_ADC E[1:0]	
0x3B	MEAS5 Configuration 3[7:0]		PD_SETLN 1:0]	MEAS5_L NG[			PG2_DAC [1:0]		PG1_DAC [1:0]	
0x3C	MEAS5 DRVA Current[7:0]				MEAS5_DF	RVA_PA[7:0]				
0x3D	MEAS5 DRVB Current[7:0]				MEAS5_DF	RVB_PA[7:0]				
0x3E	MEAS5 DRVC Current[7:0]				MEAS5_DF	RVC_PA[7:0]				
MEAS6 Set	up									
0x40	MEAS6 Selects[7:0]	-	MEAS6_ AMB	MEAS6_E	DRVC[1:0]	MEAS6_[	DRVB[1:0]	MEAS6_	DRVA[1:0]	
0x41	MEAS6 Configuration 1[7:0]	_	MEAS6_ PPG2_P DSEL	MEAS6_ PPG1_P DSEL	MEAS6_	_TINT[1:0] MEAS6_AVER[2:0]		[2:0]		
0x42	MEAS6 Configuration 2[7:0]	MEAS6_ SINC3_S EL	MEAS6_ FILT_SE L		ED_RGE[ 0]				PG1_ADC E[1:0]	
0x43	MEAS6 Configuration 3[7:0]		PD_SETLN 1:0]			PG1_DAC [1:0]				
0x44	MEAS6 DRVA Current[7:0]				MEAS6_DF	RVA_PA[7:0]				

ADDRESS	NAME	MSB							LSB
0x45	MEAS6 DRVB Current[7:0]				MEAS6_DF	RVB_PA[7:0]			
0x46	MEAS6 DRVC Current[7:0]		MEAS6_DRVC_PA[7:0]						
MEAS7 Set	up								
0x48	MEAS7 Selects[7:0]	-	MEAS7_ AMB	MEAS7_D	0RVC[1:0]	MEAS7_D	DRVB[1:0]	MEAS7_I	DRVA[1:0]
0x49	MEAS7 Configuration 1[7:0]	-	MEAS7_ PPG2_P DSEL	MEAS7_ PPG1_P DSEL	MEAS7_	TINT[1:0]	ME	AS7_AVER	[2:0]
0x4A	MEAS7 Configuration 2[7:0]	MEAS7_ SINC3_S EL	MEAS7_ FILT_SE L	MEAS7_L 1:	ED_RGE[ 0]	MEAS7_P _RGE	PG2_ADC E[1:0]		PG1_ADC E[1:0]
0x4B	MEAS7 Configuration 3[7:0]		PD_SETLN 1:0]	MEAS7_L NG[		MEAS7_P OFF	PG2_DAC [1:0]		PG1_DAC [1:0]
0x4C	MEAS7 DRVA Current[7:0]				MEAS7_DF	RVA_PA[7:0]			
0x4D	MEAS7 DRVB Current[7:0]				MEAS7_DF	RVB_PA[7:0]			
0x4E	MEAS7 DRVC Current[7:0]				MEAS7_DF	RVC_PA[7:0]			
MEAS8 Set	up								
0x50	MEAS8 Selects[7:0]	-	MEAS8_ AMB	MEAS8_D	DRVC[1:0]	MEAS8_[	DRVB[1:0]	MEAS8_I	DRVA[1:0]
0x51	MEAS8 Configuration 1[7:0]	_	MEAS8_ PPG2_P DSEL	MEAS8_ PPG1_P DSEL	MEAS8_	TINT[1:0]	ME	AS8_AVER[2:0]	
0x52	MEAS8 Configuration 2[7:0]	MEAS8_ SINC3_S EL	MEAS8_ FILT_SE L	MEAS8_L 1:	ED_RGE[ 0]	MEAS8_P _RGE			PG1_ADC E[1:0]
0x53	MEAS8 Configuration 3[7:0]		D_SETLN 1:0]	MEAS8_L NG[			PG2_DAC [1:0]		PG1_DAC [1:0]
0x54	MEAS8 DRVA Current[7:0]				MEAS8_DF			·	
0x55	MEAS8 DRVB Current[7:0]				MEAS8_DF	RVB_PA[7:0]			
0x56	MEAS8 DRVC Current[7:0]				MEAS8_DF	RVC_PA[7:0]			
MEAS9 Set	up							F	
0x58	MEAS9 Selects[7:0]	-	MEAS9_ AMB	MEAS9_DRVC[1:0] MEAS9_DRVB[1:0]		DRVB[1:0]	MEAS9_I	DRVA[1:0]	
0x59	MEAS9 Configuration 1[7:0]	-	MEAS9_ PPG2_P DSEL	MEAS9_ PPG1_P MEAS9_TINT[1:0] MEAS9_AVER[2:0] DSEL			[2:0]		
0x5A	MEAS9 Configuration 2[7:0]	MEAS9_ SINC3_S EL	MEAS9_ FILT_SE L				PG1_ADC E[1:0]		
0x5B	MEAS9 Configuration 3[7:0]		PD_SETLN 1:0]	MEAS9_L NG[			PG2_DAC [1:0]		PG1_DAC [1:0]

ADDRESS	NAME	MSB							LSB
0x5C	MEAS9 DRVA Current[7:0]		1	1	MEAS9_DF	VA_PA[7:0]		1	
0x5D	MEAS9 DRVB Current[7:0]				MEAS9_DF	RVB_PA[7:0]			
0x5E	MEAS9 DRVC Current[7:0]				MEAS9_DF	RVC_PA[7:0]	]		
Threshold I									
0x68	THRESHOLD MEAS SEL[7:0]	TH	HRESH2_M	EAS_SEL[3	:0]	TH	HRESH1_M	EAS_SEL[3	:0]
0x69	THRESHOLD HYST[7:0]	THRESH 2_PPG_ SEL	THRESH 1_PPG_ SEL	_	TIME_H	YST[1:0]	LEV	/EL_HYST[	2:0]
0x6A	PPG HI THRESHOLD1[7:0]			Tŀ	IRESHOLD	1_UPPER[7	:0]		
0x6B	PPG LO THRESHOLD1[7:0]			TH	IRESHOLD	1_LOWER[7	<b>'</b> :0]		
0x6C	PPG HI THRESHOLD2[7:0]			Tŀ	IRESHOLD	2_UPPER[7	:0]		
0x6D	PPG LO THRESHOLD2[7:0]			TH	IRESHOLD	2_LOWER[7	<b>'</b> :0]		
Picket Fend	e								
0x70	Picket Fence Measurement Select[7:0]	PI	PG2_PF_MI	EAS_SEL[3	:0]	PI	PG1_PF_MI	EAS_SEL[3	:0]
0x71	Picket Fence Configuration[7:0]	-	PF_ORD ER	IIR_T	C[1:0]	IIR_INIT_	/ALUE[1:0 ]		DLD_SIGM LT[1:0]
Interrupt Er	hables								
0x78	Interrupt1 Enable 1[7:0]	A_FULL _EN1	FRAME_ RDY_EN 1	FIFO_D ATA_RD Y_EN1	ALC_OV F_EN1	EXP_OV F_EN1	THRESH 2_HILO_ EN1	THRESH 1_HILO_ EN1	LED_TX _EN1
0x79	Interrupt1 Enable 2[7:0]	LED9_C OMPB_E N1	VDD_O OR_EN1	_	_	-	INVALID _CFG_E N1	-	-
0x7A	Interrupt1 Enable 3[7:0]	LED8_C OMPB_E N1	LED7_C OMPB_E N1	LED6_C OMPB_E N1	LED5_C OMPB_E N1	LED4_C OMPB_E N1	LED3_C OMPB_E N1	LED2_C OMPB_E N1	LED1_C OMPB_E N1
0x7C	Interrupt2 Enable 1[7:0]	A_FULL _EN2	FRAME_ RDY_EN 2	FIFO_D ATA_RD Y_EN2	ALC_OV F_EN2	EXP_OV F_EN2	THRESH 2_HILO_ EN2	THRESH 1_HILO_ EN2	LED_TX _EN2
0x7D	Interrupt2 Enable 2[7:0]	LED9_C OMPB_E N2	VDD_O OR_EN2	_	_	_	INVALID _CFG_E N2	_	-
0x7E	Interrupt2 Enable 3[7:0]	LED8_C OMPB_E N2	LED7_C OMPB_E N2	LED6_C OMPB_E N2	LED5_C OMPB_E N2	LED4_C OMPB_E N2	LED3_C OMPB_E N2	LED2_C OMPB_E N2	LED1_C OMPB_E N2
Part ID	·	·	·	·	·	·	·	·	
0xFF	Part ID[7:0]				PART	_ID[7:0]			

## **Register Details**

### Status 1 (0x00)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL	FRAME_RD Y	FIFO_DATA _RDY	ALC_OVF	EXP_OVF	THRESH2_ HILO	THRESH1_ HILO	PWR_RDY
Reset	0b0	0b0	0b0	0b0	0b0	0b0	0b0	0b1
Access Type	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only

## A\_FULL

The A\_FULL bit is set to 1 when the FIFO has reached the threshold programmed in the FIFO\_A\_FULL register. This is a read-only bit. This bit is cleared when the Status 1 Register is read. It is also cleared when the FIFO Data Register (0x08) is read if FIFO\_STAT\_CLR = 1.

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	Indicates that the FIFO buffer has reached the threshold set by FIFO_A_FULL[7:0].

### FRAME\_RDY

A frame consists of FIFO data for all the PPG ADC conversions for the sequence programmed in the MEASn (n = 1 to 9) enable registers. FRAME\_RDY bit is set to 1 when a full frame conversion has completed. This is a read-only bit and is cleared by reading the Status 1 Register (0x00). It is also cleared by reading the FIFO Data Register if FIFO STAT CLR = 1.

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	This interrupt triggers when a complete sample is available in the FIFO.

## FIFO\_DATA\_RDY

The FIFO\_DATA\_RDY bit is set to 1 when new data is available in the FIFO. This is a read-only bit and is cleared by reading the Status 1 register (0x00). It is also cleared by reading the FIFO Data Register if FIFO\_STAT\_CLR = 1

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	There is new data in the FIFO

## ALC\_OVF

The ALC\_OVF bit is set to 1 when a dark current measurement is either underranged or overranged for any of the assigned measurements. This is a read-only bit, and is cleared by reading the Status 1 register (0x00). A measurement is overranged if it is positive full-scale (0x7FFFF, 524287), and underranged if it is less than negative full-scale/4 (< 0xE0000, -131072).

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	This interrupt triggers when the ambient light cancellation function of the photodiode has reached its maximum limit due to overflow, and therefore, ambient light is affecting the output of the ADC.

## EXP\_OVF

The EXP\_OVF bit is set to 1 when an exposure current measurement is either underranged or overranged. It is also set

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

to 1 if a photodiode forward bias is detected. This is a read-only bit, and is cleared by reading the Status 1 register (0x00). A measurement is overranged if it is positive full-scale (0x7FFFF, 524287), and underrange if it is less than negative full-scale/4 (< 0xE0000, -131072).

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	This interrupt triggers when the exposure signal has reached its maximum limit due to overflow.

### THRESH2\_HILO

The THRESH2\_HILO bit is set to 1 when the THRESH2\_MEAS instance as defined qualifies as above THRESHOLD2\_UPPER or below THRESHOLD2\_LOWER. This is a read-only bit and is cleared by reading the Status 1 register (0x00).

See the Threshold Detect Function section for a complete explanation of how the two threshold instances operate.

VALUE	ENUMERATION	DECODE
0	NORMAL	ADC reading is below the defined THRESHOLD2_UPPER level AND above THRESHOLD2_LOWER level.
1	ASSERTED	ADC reading is above the defined THRESHOLD2_UPPER level OR below THRESHOLD2_LOWER level.

### THRESH1\_HILO

The THRESH1\_HILO bit is set to 1 when the THRESH1\_MEAS instance as defined qualifies as above THRESHOLD1\_UPPER or below THRESHOLD1\_LOWER. This is a read-only bit and is cleared by reading the Status 1 register (0x00).

See the Threshold Detect Function section for a complete explanation of how the two threshold instances operate.

VALUE	ENUMERATION	DECODE
0	NORMAL	ADC reading is below the defined THRESHOLD1_UPPER level AND above THRESHOLD1_LOWER level.
1	ASSERTED	ADC reading is above the defined THRESHOLD1_UPPER level OR below THRESHOLD1_LOWER level.

#### PWR\_RDY

The PWR\_RDY bit is set to 1 when  $V_{DD}$  goes below the undervoltage lockout (UVLO) threshold, which is approximately 1.3V. If this condition occurs, all registers within the MAX86171 are reset to their PORb state. This bit is not triggered by a soft-reset. This is a read-only bit and is cleared when the Status 1 register is read, or by setting the SHDN bit to 1.

PWR\_RDY is a non-maskable interrupt. So it gets asserted on both INT1 and INT2.

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	Indicates that V <sub>DD_DIG</sub> or V <sub>DD_ANA</sub> went below the UVLO threshold.

## Status 2 (0x01)

BIT	7	6	5	4	3	2	1	0
Field	LED9_COM PB	VDD_OOR	-	-	-	INVALID_C FG	_	_
Reset	0b0	0b0	-	-	-	0b0	_	-
Access Type	Read Only	Read Only	_	_	-	Read Only	_	_

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### LED9\_COMPB

LEDx (x = 1 to 9) is not compliant. If the LEDx\_DRV pin voltage drops below the compliance voltage threshold at the end of each exposure interval, the LEDx\_COMPB status bit is asserted. LEDx\_COMPB is a read-only bit. It is cleared when the corresponding status register is read.

VALUE	IE ENUMERATION DECODE						
0	NORMAL	ED9_DRV pin has sufficient voltage for the driver					
1	ASSERTED	LEDx_DRV pin voltage is below compliance. Power supply rejection on LEDx is degraded and LEDx current is inaccurate.					

### VDD\_OOR

VDD\_OOR bit is set to 1 when VDD\_DIG is out of range  $1.65V < V_{DD_DIG} < 2.05V$ . The detection circuitry has a 10ms time delay and continues to trigger as long as the  $V_{DD_DIG}$  is out of range. VDD\_OOR is a read-only bit and is cleared when the Status 2 register is read.

VALUE	ENUMERATION	DECODE
0	NORMAL	Normal Operation
1	ASSERTED	Indicates that $V_{DD_DIG}$ is greater than 2.05V or less than 1.65V.

### INVALID\_CFG

INVALID\_CFG is set to 1 when the Frame Rate programmed using the clock dividers FR\_CLK\_DIV\_H[6:0] and FR\_CLK\_DIV\_L[7:0] is too fast to accommodate the measurement sequences enabled in a frame. This is a read-only bit and it gets cleared when the Status 2 register is read.

VALUE	ENUMERATION	DECODE
0	NORMAL	Configuration timing is valid.
1	ASSERTED	Configuration timing is not valid.

#### Status 3 (0x02)

BIT	7	6	5	4	3	2	1	0
Field	LED8_COM PB	LED7_COM PB	LED6_COM PB	LED5_COM PB	LED4_COM PB	LED3_COM PB	LED2_COM PB	LED1_COM PB
Reset	0x0							
Access Type	Read Only							

#### LED8\_COMPB

See LED9\_COMPB for details.

#### LED7\_COMPB

See LED9\_COMPB for details.

### LED6\_COMPB

See LED9\_COMPB for details.

#### LED5\_COMPB

See LED9\_COMPB for details.

#### LED4\_COMPB

See LED9\_COMPB for details.

### LED3\_COMPB

See LED9\_COMPB for details.

#### LED2\_COMPB

See LED9\_COMPB for details.

#### LED1\_COMPB

See LED9\_COMPB for details.

#### FIFO Write Pointer (0x04)

BIT	7	6	5	4	3	2	1	0		
Field		FIFO_WR_PTR[7:0]								
Reset		0x0								
Access Type				Read	Only					

#### FIFO\_WR\_PTR

FIFO\_WR\_PTR[7:0] points to the location where the next sample will be written. This pointer advances for each sample pushed on to the circular FIFO.

Refer to the FIFO Description section for details.

#### FIFO Read Pointer (0x05)

BIT	7	6	5	4	3	2	1	0		
Field		FIFO_RD_PTR[7:0]								
Reset		0x0								
Access Type				Write, Re	ead, Dual					

#### FIFO\_RD\_PTR

FIFO\_RD\_PTR[7:0] points to the location from where the processor gets the next sample from the FIFO using the serial interface. This advances each time a sample is popped from the circular FIFO. The processor can also write to this pointer after reading the samples. This allows rereading (or retrying) samples from the FIFO. However, writing to FIFO\_RD\_PTR[7:0] can have adverse effects if it results in the FIFO being almost full.

Refer to the FIFO Description section for details.

#### FIFO Counter 1 (0x06)

BIT	7	6	5	4	3	2	1	0	
Field	FIFO_DATA _COUNT_M _SB		OVF_COUNTER[6:0]						
Reset	0x0				0x0				
Access Type	Read Only				Read Only				

#### FIFO\_DATA\_COUNT\_MSB

FIFO\_DATA\_COUNT\_MSB is a read-only register that holds the most significant bit of the number of data items

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

available in the FIFO for the host to read. The lower 8 bits are in the FIFO\_DATA\_COUNT\_LSB[7:0] register.

The 9-bit FIFO\_DATA\_COUNT[8:0] register is comprised of FIFO\_DATA\_COUNT\_MSB and FIFO\_DATA\_COUNT\_LSB[7:0] registers. FIFO\_DATA\_COUNT[8:0] increments when a new data item is pushed to the FIFO, and decrements when the host reads a data item from the FIFO.

Refer to the FIFO Description section for details.

### OVF\_COUNTER

When FIFO is full any new samples result in new or old samples getting lost depending on FIFO\_RO. OVF\_COUNTER[6:0] counts the number of samples lost. It saturates at 0x7F. This is a read-only register.

Refer to the FIFO Description section for details.

#### FIFO Counter 2 (0x07)

BIT	7	6	5	4	3	2	1	0		
Field		FIFO_DATA_COUNT_LSB[7:0]								
Reset		0x0								
Access Type				Read	Only					

### FIFO\_DATA\_COUNT\_LSB

FIFO\_DATA\_COUNT\_LSB[7:0] is a read-only register that holds the lower 8 bits of the number of data items available in the FIFO for the host to read.

See the FIFO\_DATA\_COUNT\_MSB register description for details.

#### FIFO Data Register (0x08)

BIT	7	6	5	4	3	2	1	0		
Field		FIFO_DATA[7:0]								
Reset		0x0								
Access Type				Read	Only					

### FIFO\_DATA

FIFO\_DATA[7:0] is a read-only register and is used to get data from the FIFO. Refer to the FIFO Description section for details.

#### FIFO Configuration 1 (0x09)

BIT	7	6	5	4	3	2	1	0
Field		FIFO_A_FULL[7:0]						
Reset		0x7F						
Access Type	Write, Read							

#### FIFO\_A\_FULL

FIFO\_A\_FULL[7:0] indicates how many new samples can be written to the FIFO before the interrupt is asserted. For example, if set to 0x0F, the interrupt triggers when there are 15 empty spaces left (241 entries).

Refer to the FIFO Description section for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

FIFO_A_FULL[7:0]	FREE SPACE BEFORE INTERRUPT	# OF SAMPLES IN FIFO
0	0	256
1	1	255
2	2	254
3	3	253
254	254	2
255	255	1

## FIFO Configuration 2 (0x0A)

BIT	7	6	5	4	3	2	1	0
Field	-	-	-	FLUSH_FIF O	FIFO_STAT _CLR	A_FULL_TY PE	FIFO_RO	_
Reset	-	-	-	0b0	0b1	0b0	0b0	_
Access Type	_	-	-	Write, Read	Write, Read	Write, Read	Write, Read	_

### FLUSH\_FIFO

When FLUSH\_FIFO bit is set to '1', the FIFO gets flushed, FIFO\_WR\_PTR[7:0] and FIFO\_RD\_PTR[7:0] are reset to zero and FIFO\_DATA\_COUNT[8:0] becomes 0. The contents of the FIFO are lost. FIFO\_FLUSH is a self-clearing bit. Refer to the FIFO Description section for details.

#### FIFO\_STAT\_CLR

When FIFO\_STAT\_CLR is set to 0, A-FULL, FRAME\_RDY and FIFO\_DATA\_RDY bits and the corresponding interrupts get cleared when Status 1 register is read. When FIFO\_STAT\_CLR is set to 1, A-FULL, FRAME\_RDY and FIFO\_DATA\_RDY bits and the corresponding interrupts get cleared when the Status 1 register is read or when FIFO\_DATA\_RDY bits and the corresponding interrupts get cleared when the Status 1 register is read or when FIFO\_DATA\_RDY bits and the corresponding interrupts get cleared when the Status 1 register is read or when FIFO\_DATA\_RDY bits and the corresponding interrupts get cleared when the Status 1 register is read or when FIFO\_DATA[7:0] register is read.

Refer to the FIFO Description section for details.

VALUE	ENUMERATION	DECODE			
0	RD_DATA_NOCLR	A_FULL, FRAME_RDY and FIFO_DATA_RDY status and interrupts do not get cleared by FIFO_DATA[7:0] register read. They get cleared by a status register read.			
1	RD_DATA_CLR	A_FULL, FRAME_RDY and FIFO_DATA_RDY status and interrupts get cleared by FIFO_DATA[7:0] register read or status register read (Default)			

## A\_FULL\_TYPE

A\_FULL\_TYPE defines the behavior of the A\_FULL interrupt. When A\_FULL\_TYPE is set to 0, A\_FULL is asserted everytime the FIFO Almost Full condition is detected. When A\_FULL\_TYPE is set to 1, A\_FULL is asserted only for any new A\_FULL condition.

Refer to the FIFO Description section for details.

VALUE	ENUMERATION	DECODE
0	AFULL_RPT	A_FULL interrupt gets asserted when the A_FULL condition is detected. It is cleared by status register read, but reasserts for every sample if the A_FULL condition persists.
1	AFULL_ONCE	A_FULL interrupt gets asserted only when the A_FULL condition is detected. The interrupt gets cleared on status register read, and does not reassert for every sample until a new A_FULL condition is detected.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## FIFO\_RO

The FIFO\_RO bit controls the behavior of the FIFO when the FIFO becomes completely filled with data. Push to FIFO is enabled when FIFO is full if FIFO\_RO = 1 and old samples are lost. Both FIFO\_WR\_PTR and FIFO\_RD\_PTR increment for each sample after the FIFO is full. Push to FIFO is disabled when FIFO is full if FIFO\_RO = 0 and new samples are lost. FIFO\_WR\_PTR and FIFO\_RD\_PTR do not increment until a sample is read from the FIFO.

Refer to the FIFO Description section for details.

VALUE	ENUMERATION	DECODE
0	STOP	The FIFO stops on full.
1	PUSH	The FIFO automatically rolls over on full.

#### System Configuration 1 (0x0C)

BIT	7	6	5	4	3	2	1	0
Field	MEAS9_EN	SW_FORC E_SYNC	SYNC_M	ODE[1:0]	PPG2_PW RDN	PPG1_PW RDN	SHDN	RESET
Reset	0b0	0b0	0>	к0	0b0	0b0	0b0	0b0
Access Type	Write, Read	Write, Read	Write, Read		Write, Read	Write, Read	Write, Read	Write, Read

### MEAS9\_EN

Set MEASn\_EN (n = 1 to 9) to 0 to disable measurement programmed in MEASn\_SETUP registers in the measurement sequence. Set MEASn\_EN to 1 to enable measurement programmed in MEASn\_SETUP registers in the measurement sequence. The sequence consists of all the enabled measurements starting from MEAS1\_EN to MEAS9\_EN.

MEASn_EN (n = 1 to 9)	ENUMERATION	DECODE	
0	DISABLE	Disable Measurement n	
1	ENABLE	Enable Measurement n	

## SW\_FORCE\_SYNC

Writing a 1 to this bit aborts the current Frame and starts a new Frame. This is a self-clearing bit.

## SYNC\_MODE

SYNC\_MODE[1:0] bits are used for programming the frame synchronization modes as described in the table below. Modes of operation:

SYNC_MODE[1:0]	OPERATING MODES	TRIG INPUT	DESCRIPTION
0, 3	Internal Frame Sync	Not Used	The device is in free-running mode. Frame-sync pulses are generated internally using the internal 32kHz/32.768kHz frame clock and the frame rate divider set by FR_CLK_DIV. The ADC Sync signals are generated internally using the 10MHz ADC clock.
1	External Frame Sync	Frame Sync	The device is in one-shot mode. A frame cycle begins upon receipt of an active edge on the TRIG input. A frame cycle consists of a power-up cycle and the execution of each enabled measurement. The ADC Sync signals are generated internally using the10MHz ADC clock. The internal 32kHz/32.768kHz frame clock is disabled.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

2	External Clock	EXT_CLK, External Frame Rate Clock	The internal 32kHz/32.768kHz frame clock is disabled and the internal frame clock is driven by the TRIG pin. Frame-sync pulses are generated internally using the external TRIG input 32kHz/32.768kHz frame clock and the frame rate divider set by FR_CLK_DIV. The ADC Sync signals are generated internally using the 10MHz ADC clock. Start of sampling process can be controlled by an SPI software sync command, which zeros out the frame rate divider and restarts the frame counting process.The device then advances with the external TRIG input clock. Subsequent software Sync commands abort the current frame and restart a new Frame.
---	-------------------	--	---

### PPG2\_PWRDN

When PPG2\_PWRDN is set 0, the optical channel 2 is enabled. When PPG2\_PWRDN is set to 1, this channel is powered down to save power.

PPG2_PD	ENUMERATION	DECODE
0	ON	Optical Channel 2 is enabled.
1	OFF	Optical Channel 2 is powered down.

### PPG1\_PWRDN

When PPG1\_PWRDN is set 0, the optical channel 1 is enabled. When PPG1\_PWRDN is set to 1, this channel is powered down to save power.

PPG1_PD	ENUMERATION	DECODE
0	ON	Optical Channel 1 is enabled
1	OFF	Optical Channel 1 is powered down

#### SHDN

The part can be put into a power-save mode by setting SHDN bit to 1. While in power-save mode, all configuration registers retain their values and write/read operations function as normal. All interrupts are cleared to zero in this mode. Set SHDN to 0 to put the part in normal mode.

VALUE	ENUMERATION	DECODE			
0	NORMAL	The part is in normal operation. No action is taken.			
1	SHUTDOWN	The part can be put into power-save mode by writing a '1' to this bit. While in this mode all configuration registers remain accessible and retain their data. ADC conversion data contained in the registers are previous values. Writeable registers also remain accessible in shutdown. All interrupts are cleared. In this mode, the oscillator is shut down and the part draws minimum current. If this bit is asserted during an active conversion then the conversion is aborted.			

## RESET

When the RESET bit is set to 1, the MAX86171 undergoes a forced power-on-reset sequence. All configuration, threshold, and data registers are reset to their power-on state. This bit then automatically becomes '0' after the reset sequence is completed.

VALUE	ENUMERATION	DECODE
0	NORMAL	The part is in normal operation. No action is taken.
1	RESET	The MAX86171 undergoes a forced power-on-reset sequence. All configuration, threshold, and data registers are reset to their power-on state. This bit then automatically becomes '0' after the reset sequence is completed.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## System Configuration 2 (0x0D)

BIT	7	6	5	4	3	2	1	0
Field	MEAS8_EN	MEAS7_EN	MEAS6_EN	MEAS5_EN	MEAS4_EN	MEAS3_EN	MEAS2_EN	MEAS1_EN
Reset	0b0							
Access Type	Write, Read							

#### MEAS8\_EN

See MEAS9\_EN for details.

MEAS7\_EN See MEAS9\_EN for details.

MEAS6\_EN See MEAS9\_EN for details.

MEAS5\_EN See MEAS9\_EN for details.

MEAS4\_EN See MEAS9\_EN for details.

MEAS3\_EN See MEAS9\_EN for details.

MEAS2\_EN See MEAS9\_EN for details.

### MEAS1\_EN

See MEAS9\_EN for details.

#### System Configuration 3 (0x0E)

BIT	7	6	5	4	3	2	1	0
Field	-	-	-	ALC_DISAB LE	-	_	COLLECT_ RAW_DAT A	MEAS1_CO NFIG_SEL
Reset	-	-	-	0b0	-	-	0b0	0b0
Access Type	_	_	_	Write, Read	_	_	Write, Read	Write, Read

#### ALC\_DISABLE

The ALC\_DISABLE bit inhibits the front-end analog ambient light cancellation circuit. This bit does not alter the backend ambient subtraction.

VALUE	DECODE				
0	Front-end ambient light cancelation is enabled.				
1	Front-end ambient light cancelation is disabled.				

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## COLLECT\_RAW\_DATA

Each measurement consists of an interleaved of N+1 DARK conversions and N exposure conversions, where N =  $2^{\text{SMP}_{AVE}}$ . If COLLECT\_RAW\_DATA = 0, the weighted average of all ambient corrected exposures is computed and the results pushed to the FIFO. When COLLECT\_RAW\_DATA = 1, the weighted average is not computed and each raw conversion is pushed to the FIFO. This mode inhibits the back-end ambient cancellation as well as the weighted averaging. This allows for the use of a customized ambient rejection algorithm in a host microcontroller.

When COLLECT\_RAW\_DATA = 1, Picket Fence detect is disabled.

COLLECT_RAW_DATA	ENUMERATION	DECODE
0	COMPUTED	Capture computed data for each burst in the FIFO.
1	RAW	Capture raw data for each DARK and LED conversion in the FIFO.

### MEAS1\_CONFIG\_SEL

When the MEAS1\_CONFIG\_SEL bit is set to 0, all enabled measurements use the unique configuration defined in each MEASn setup.

When the MEAS1\_CONFIG\_SEL bit is set to 1, all enabled measurements use the following configuration settings defined in MEAS1 setup. This allows for a reduced setup configuration.

MEAS1\_FILT\_SEL MEAS1\_TINT MEAS1\_AVER MEAS1\_PD\_SETLNG MEAS1\_LED\_SETLNG MEAS1\_PPG1\_PDSEL MEAS1\_PPG2\_PDSEL MEAS1\_LED\_RGE MEAS1\_PPG1\_ADC\_RGE MEAS1\_PPG2\_ADC\_RGE

VALUE	ENUMERATION	DECODE
0	SPECIFIC_CFG	Use measurement specific configuration defined in each measurement register.
1	MEAS1_CFG	Use MEAS1 configuration for all enabled measurements.

## Photodiode Bias (0x0F)

BIT	7	6	5	4	3	2	1	0
Field	PD4_B	IAS[1:0]	PD3_BIAS[1:0]		PD2_BIAS[1:0]		PD1_BIAS[1:0]	
Reset	0x1		0x1		0x1		0x1	
Access Type	Write,	Read	Write, Read		Write, Read		Write, Read	

#### PD4\_BIAS

See the Photodiode Biasing section for more information.

PDx_BIAS[1:0] (x = 1 TO 4)	PHOTODIODE CAPACITANCE
0	Not recommended
1	0pF to 125pF (POR default)
2	125pF to 250pF

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

PDx_BIAS[1:0] (x = 1 TO 4)	PHOTODIODE CAPACITANCE			
3	250pF to 500pF			

#### PD3\_BIAS

See PD4\_BIAS[1:0] for details.

### PD2\_BIAS

See PD4\_BIAS[1:0] for details.

#### PD1\_BIAS

See PD4\_BIAS[1:0] for details.

#### **Pin Functional Configuration (0x10)**

BIT	7	6	5	4	3	2	1	0
Field	_	-	-	INT2_FCFG[1:0]		-	-	TRIG_ICFG
Reset	_	_	_	0x0		_	_	0b0
Access Type	-	-	-	Write, Read		-	-	Write, Read

### INT2\_FCFG

The INT2\_FCFG[1:0] bit sets the functional configuration of the INT2 pin. This interrupt can be configured to be disabled, cleared on status byte read or to self-clear after two optional prescribed times.

VALUE	DECODE				
0	Disabled				
1	INT2 is enabled and is cleared upon reading of any status register or FIFO				
2	INT2 is enabled and is self-clearing after 30.5µs				
3	INT2 is enabled and is self-clearing after 244µs				

## TRIG\_ICFG

The TRIG\_ICFG bit sets the input active edge of the TRIG pin. Active edge is the edge for which the TRIG input responds.

VALUE	DECODE			
0	TRIG active edge is falling (PORb default).			
1	TRIG active edge is rising.			

## Output Pin Configuration (0x11)

BIT	7	6	5	4	3	2	1	0
Field	_	-	_	INT2_O	CFG[1:0]	INT1_O	CFG[1:0]	-
Reset	-	-	-	0x0		0>	<b>‹</b> 0	-
Access Type	-	-	-	Write, Read		Write,	Read	-

## INT2\_OCFG

See INT1\_OCFG[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## INT1\_OCFG

INTx\_OCFG[1:0] (x = 1, 2) selects the output drive type for the INTx pin, as shown in the table below.

VALUE	DECODE
0	Open drain, V <sub>DD</sub> compliant, active-low output (PORb default).
1	Active drive to VDD_DIG and GND, the active level is high-output.
2	Active drive to VDD_DIG and GND, the active level is low-output.
3	Not defined

### FR Clock Frequency Select (0x15)

BIT	7	6	5	4	3	2	1	0
Field	-	-	FR_CLK_S EL		FR_C	LK_FINE_TUN	IE[4:0]	
Reset	-	-	0b1	0x0				
Access Type	-	-	Write, Read			Write, Read		

## FR\_CLK\_SEL

When FR\_CLK\_SEL is set to 0, the internal frame-rate primary clock is trimmed to 32.0kHz. When FR\_CLK\_SEL is set to 1, the internal frame rate primary clock is trimmed to 32.768kHz. The measurement frame rate is the primary clock rate divided by the program divider ratio (FR\_CLK\_DIV).

FR_CLK_SEL	ENUMERATION	DECODE
0	CLK32000Hz	The internal frame-rate primary clock is 32000Hz.
1	CLK32768Hz	The internal frame-rate primary clock is 32768Hz.

## FR\_CLK\_FINE\_TUNE

FR\_CLK\_FINE\_TUNE4:0] is used to fine-tune the internal 32kHz/32.768kHz frame rate clock. This register can be used to compensate the internal oscillator for thermal drift. This can be accomplished by measuring the time between interrupts using a microcontroller crystal based real-time oscillator as a reference and computing the error in the time between interrupts. FR\_CLK\_FINE\_TUNE[4:0] is a 2s complement code with a resolution of 0.2%/LSB. The total range is +3.0% to -3.2% around the factory trimmed value. See the FR\_CLK\_FINE\_TUNE table for the shift in internal primary frame-rate clock vs. trim code.

FR_CLK_FINE_TUNE[4:0]	SHIFT IN OSC FREQUENCY (%)
0x10	-3.2
0x11	-3.0
0x12	-2.8
0x13	-2.6
0x14	-2.4
0x15	-2.2
0x16	-2.0
0x17	-1.8
0x18	-1.6
0x19	-1.4
0x1A	-1.2
0x1B	-1.0
0x1C	-0.8

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

0x1D	-0.6
0x1E	-0.4
0x1F	-0.2
0x00	0.0
0x01	0.2
0x02	0.4
0x03	0.6
0x04	0.8
0x05	1.0
0x06	1.2
0x07	1.4
0x08	1.6
0x09	1.8
0x0A	2.0
0x0B	2.2
0x0C	2.4
0x0D	2.6
0x0E	2.8
0x0F	3.0

## FR Clock Divider MSB (0x16)

BIT	7	6	5	4	3	2	1	0
Field	_		FR_CLK_DIV_H[6:0]					
Reset	_		0x01					
Access Type	-		Write, Read					

## FR\_CLK\_DIV\_H

FR\_CLK\_DIV\_H[6:0] is the upper 7 bits of the 15-bit FR\_CLK\_DIV[14:0] clock divider, which defines the frame rate at which every enabled measurement is made.

The FR\_CLK\_DIV[14:0] should be programmed such that all the conversions selected in the MEASn\_EN (n = 1 to 9) bits in the System Configuration 1 and 2 registers can be completed within the frame period. In the event that the number of enabled measurements as well as the integration time and number of averages of each enabled measurement results in a frame measurement time that is longer than the primary frame clock period divided by FR\_CLK\_DIV, a timing error occurs. This timing error sets the INVALID\_CFG bit in the Status register 2.

The time for each measurement to complete is given by:

<sup>t</sup>MEASUREMENT = <sup>t</sup>INIT1 + <sup>t</sup>MEAS1 + <sup>t</sup>MEAS2 + <sup>t</sup>MEAS3 + ... + <sup>t</sup>MEAS9 where:

if the MEASn\_SINC3 = 1 or MEASn\_FILT = 0, then:

t<sub>MEASn</sub> = [ t<sub>INIT</sub> + MEASn\_TINT x (2 x MEASn\_AVER+1) + 2 x MEASn\_AVER x MEASn\_PD\_SETLNG ] x MEASn\_EN if MEASn\_SINC3 = 0 and MEASn\_FILT = 1 then:

t<sub>MEASn</sub> = [ t<sub>INIT</sub> + 2 x MEASn\_TINT + MEASn\_PD\_SETLNG ] x MEASn\_EN

t<sub>INIT1</sub> = 7 x t<sub>CLOCK</sub>

t<sub>INIT</sub> = 3 x t<sub>CLOCK</sub>

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

MEASn\_TINT = Integration time defined in measurement n = 1 to 9

MEASn\_EN = 1 if the measurement is enabled and 0 if it is not for measurement n = 1 to 9

MEASn\_AVER = Number of averages defined in measurement n = 1 to 9

MEASn\_PD\_SETLNG = Photodiode settling time defined in measurement n = 1 to 9

t<sub>CLOCK</sub> = Frame clock period, which can be 1/32768 sec or 1/32000 sec depending on the FR\_CLK\_SEL bit

In SYNC\_MODE = 0 and 2 a valid measurement requires:

t<sub>MEASUREMENT</sub> < FR\_CLK\_DIV/F<sub>Primary\_Frame\_Clock</sub> where:

F<sub>Primary\_Frame\_Clock</sub> = Either the internal primary frame clock (SYNC\_MODE = 0) or the external frame clock inputed through the TRIG input (SYNC\_MODE = 2)

In SYNC\_MODE = 1 a valid measurement requires:

<sup>t</sup>MEASUREMENT < <sup>t</sup>TRIG\_PERIOD where:

t<sub>TRIG\_PERIOD</sub> = Period of the TRIG input signal

#### FR Clock Divider LSB (0x17)

BIT	7	6	5	4	3	2	1	0
Field		FR_CLK_DIV_L[7:0]						
Reset	0x00							
Access Type	Write, Read							

## FR\_CLK\_DIV\_L

FR\_CLK\_DIV\_L[7:0] is the lower byte of the 15-bit FR\_CLK\_DIV[14:0] clock divider that defines the frame rate. See FR\_CLK\_DIV\_H for more details.

#### MEAS1 Selects (0x18)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS1_AM B	MEAS1_DRVC[1:0]		MEAS1_DRVB[1:0]		MEAS1_DRVA[1:0]	
Reset	-	0b0	0x1		0x0		0x0	
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

#### MEAS1\_AMB

Set MEASn\_AMB (n = 1 to 9) to 1 to enable a direct ambient measurement. Set MEASn\_AMB to 0 to allow normal exposure measurements to be made. When MEASn\_AMB is set to 1, MEASn\_DRVA[1:0], MEASn\_DRVB[1:0], and MEASn\_DRVC[1:0] are ignored.

When a MEASn\_AMB is set to 1, it should always be the last enabled measurement in the frame.

MEASn_AMB (n = 1 to 9)	DECODE
0	Enable normal exposure measurements for MEASn.
1	Enable direct ambient conversion for MEASn.

### MEAS1\_DRVC

Program MEASn\_DRVC (n = 1 to 9) measurement to select the LEDx\_DRV pin (x = 1, 3, 6, 9) for LED Driver C as shown in the table below.

MEASn_DRVC[1:0] (n = 1 to 9)	DECODE
0	LED Driver C drives pin 1
1	LED Driver C drives pin 3
2	LED Driver C drives pin 6
3	LED Driver C drives pin 9

#### MEAS1\_DRVB

Program MEASn\_DRVB (n = 1 to 9) measurement to select the LEDx\_DRV pin (x = 2, 3, 5, 8) for LED Driver B as shown in the table below.

MEASn_DRVB[1:0] (n = 1 to 9)	DECODE
0	LED Driver B drives pin 2
1	LED Driver B drives pin 3
2	LED Driver B drives pin 5
3	LED Driver B drives pin 8

#### MEAS1\_DRVA

Program MEASn\_DRVA (n = 1 to 9) measurement to select the LEDx\_DRV pin (x = 1, 2, 4, 7) for LED Driver A as shown in the table below.

MEASn_DRVA[1:0] (n = 1 to 9)	DECODE
0	LED Driver A drives pin 1
1	LED Driver A drives pin 2
2	LED Driver A drives pin 4
3	LED Driver A drives pin 7

#### MEAS1 Configuration 1 (0x19)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS1_PP G2_PDSEL	MEAS1_PP G1_PDSEL	MEAS1_	TINT[1:0]	M	EAS1_AVER[2	:0]
Reset	_	0b0	0b0	0:	<b>‹</b> 3		0x0	
Access Type	_	Write, Read	Write, Read	Write,	Read		Write, Read	

## MEAS1\_PPG2\_PDSEL

MEASn\_PPG2\_PDSEL (n = 1 to 9) selects which PDx\_IN (x = 2, 4) is connected to optical channel 2 for measurement n. Set MEASn\_PPG2\_PDSEL to 0 to select PD2\_IN and 1 to select PD4\_IN as input to optical channel 2 as shown below.

MEASn_PPG2_PDSEL (n = 1 to 9)	DECODE			
0	Select PD2_IN as input to optical channel 2 for measurement n.			
1	Select PD4_IN as input to optical channel 2 for measurement n.			

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### MEAS1\_PPG1\_PDSEL

MEASn\_PPG1\_PDSEL (n = 1 to 9) selects which PDx\_IN (x = 1, 3) is connected to optical channel 1 for measurement n. Set MEASn\_PPG1\_PDSEL to 0 to select PD1\_IN and 1 to select PD3\_IN as input to optical channel 1 as shown below.

MEASn_PPG1_PDSEL (n = 1 to 9)	DECODE	
0	Select PD1_IN as input to PPG1 for measurement n.	
1	Select PD3_IN as input to PPG1 for measurement n.	

#### MEAS1\_TINT

MEASn TINT[1:0] (n = 1 to 9) bits set the integration time of PPG ADC as shown in the table below.

MEASn_TINT[1:0] (n = 1 to 9)	INTEGRATION TIME (µs)
00	14.6
01	29.2
10	58.6
11	117.1

#### MEAS1\_AVER

MEASn\_AVER[2:0] (n = 1 to 9) sets the number of exposures that are averaged in order to improve the exposure SNR and improve ambient light cancelation. MEASn\_AVER works only with MEASn\_FILT\_SEL = 0 or when COLLECT\_RAW\_DATA = 1. When MEASn\_FILT\_SEL = 0, ( $2 \times 2^{MEASn}_{AVER} + 1$ ) ADC conversions of interleaved dark and exposure measurements are made and a weighted computed average loaded into the FIFO.

MEASn_AVER[2:0] (n = 1 to 9)	NUMBER OF LED PULSES
000	1
001	2
010	4
011	8
100	16
101	32
110	64
111	128

### MEAS1 Configuration 2 (0x1A)

BIT	7	6	5	4	3	2	1	0
Field	MEAS1_SI NC3_SEL	MEAS1_FIL T_SEL	MEAS1_LED_RGE[1:0]		MEAS1_PPG2_ADC_RGE [1:0]		MEAS1_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0x3		0x2		0x2	
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

#### MEAS1\_SINC3\_SEL

MEASx\_SINC3\_SEL (x = 1 to 9) enables the SINC3 decimation filter for the delta-sigma ADC for measurement x. This filter provides improved high-frequency roll-off, which also improves high-frequency ambient light rejection and  $V_{LED}$  power-supply rejection. MAX86171 by default, uses a third order cascade of integrators (COI3) decimation filter. This

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

filter provides excellent quantization, but only a 20dB/dec roll-off at higher frequencies. The SINC3 filter is only available on the longest integration time, MEASx\_TINT = 0x3 (117.1 $\mu$ s). However, the SINC3 filter provides a 60dB/dec roll-off at out of band frequencies; thus, providing improved ambient and V<sub>LED</sub> rejection.

Set MEASx\_SINC3 low to use the COI3 decimation filter.

Set MEASx\_SINC3 high to select the SINC3 decimation filter, which is only used if the MEASx\_TINT = 0x3 (integration time set to  $117.1\mu$ s) for this measurement.

VALUE	DECODE
0x0	SINC3 filter is not used.
0x1	SINC3 decimation filter is used only if MEASx_TINT = 0x3 (115.2µs)

#### MEAS1\_FILT\_SEL

MEASn\_FILT\_SEL (n = 1 to 9) sets the backend ambient light rejection method to be used. Set MEASn\_FILT\_SEL to 0 to use the central difference method where ambient light estimation is made from dark measurements before and after the exposure measurement. Set MEASn\_FILT\_SEL to 1 to use the forward difference method where the ambient light is estimated by a dark measurement before the exposure measurement.

When MEASn\_FILT\_SEL is set to 0, (2 x 2<sup>MEASn\_AVER</sup> + 1) ADC conversions of interleaved dark and exposure measurements are made and a weighted computed average loaded into the FIFO. When MEASn\_FILT\_SEL is set to 1, only one dark and exposure ADC conversion is made, regardless of the value of MEASn\_AVER.

VALUE	DECODE	
0	Ambient light correction is done using the central difference method.	
1 Ambient light correction is done using the forward difference method.		

#### MEAS1\_LED\_RGE

MEASn\_LED\_RGE (n = 1 to 9) sets the range of all three LED current drivers DRVA, DRVB, DRVC for the nth measurement.

MEASn_LED_RGE[1:0]	LED FULL-SCALE RANGE (mA)
00	32
01	64
10	96
11	128

#### MEAS1\_PPG2\_ADC\_RGE

MEASn\_PPGx\_ADC\_RGE[1:0] (n = 1 to 9, x = 1, 2) bits set the ADC positive full-scale range of the optical channel x in measurement n, as shown in the table below.

MEASn_PPGX_ADC_RGE[1:0] (N = 1 TO 9, X = 1, 2)	LSB (pA)	FULL SCALE (µA)
00	7.6	4.0
01	15.3	8.0
10	30.5	16.0
11	61.0	32.0

### MEAS1\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS1 Configuration 3 (0x1B)

BIT	7	6	5	4	3	2	1	0
Field	MEAS1_PD_SETLNG[1:0]		MEAS1_LED_SETLNG[1: 0]		MEAS1_PPG2_DACOFF[ 1:0]		MEAS1_PPG1_DACOFF[ 1:0]	
Reset	0:	0x1		x1	0x0 0x0		k0	
Access Type	Write, Read		Write,	Read	Write, Read		Write, Read	

### MEAS1\_PD\_SETLNG

MEASn\_PD\_SETLNG[1:0] sets the time between dark and exposure samples as shown in the table below. This time can be used to allow for longer photodiode settling.

MEASn_PD_SETLNG[1:0] (n = 1 to 9)	TIME BETWEEN SAMPLES (µs)
0	6.1
1	12.1 (Default)
2	18.1
3	24.1

### MEAS1\_LED\_SETLNG

Program MEASn\_LED\_SETLNG[1:0] to select the delay from the rising edge of LED to start of the exposure ADC integration. This allows for the LED current to settle before the start of ADC integration. LED settling time must always be less than the PD settling time for the same measurement.

MEASn_LED_SETLNG[1:0] (n = 1 to 9)	SETTLING TIME (µs)
00	6.0
01	12.0 (default)
10	18.0
11	24.0

#### MEAS1\_PPG2\_DACOFF

MEASn\_PPGx\_DACOFF[1:0] sets the value of the offset DAC during the exposure interval. This allow for a larger convertible exposure range by sourcing some of the exposure current from the offset DAC. Set MEASn\_PPGx\_DACOFF[1:0] to select the desired offset current as shown in the table below.

MEASN_PPGX_DACOFF[1:0] (N = 1 TO 9, X = 1, 2)	INJECTED OFFSET CURRENT (μΑ)				
0	Offset DAC current is 0				
1	Offset DAC current is 8				
2	Offset DAC current is 16				
3	Offset DAC current is 24				

## MEAS1\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### MEAS1 DRVA Current (0x1C)

BIT	7	6	5	4	3	2	1	0			
Field		MEAS1_DRVA_PA[7:0]									
Reset		0x00									
Access Type				Write,	Read						

#### MEAS1\_DRVA\_PA

MEASn\_DRVx\_PA[7:0] (n = 1 to 9, x = A, B, C) sets the LED drive current on each of the three LED drivers DRVA, DRVB, and DRVC for the measurement. Each of the three LED drivers is routed to the LEDy\_DRV (y = 1 to 9) as set by the MEASn\_DRVA, MEASn\_DRVB, and MEASn\_DRVC multiplexer setting. The full-scale range of all three LED drivers is set by the MEASn\_LED\_RGE[1:0] bits.

Set MEASn\_DRVx\_PA[7:0] (n = 1 to 9, x = A, B, C) code to set the desired current according to the table below. If MEASn\_DRVx\_PA[7:0] is set to 0x00, LED Driver x is disabled for measurement n.

MEASn_LED_RGE[1:0] (n = 1 to 9)	00	01	10	11	
MEASn_DRVx_PA[7:0] (n = 1 to 9, x = A, B, C)	LED CURRENT (mA)	LED CURRENT (mA)	LED CURRENT (mA)	LED CURRENT (mA)	
0	0.000	0.000	0.000	0.000	
1	0.125	0.250	0.375	0.500	
10	0.250	0.500	0.750	1.000	
11	0.375	0.750	1.125	1.500	
1111100	31.500	63.000	94.500	126.000	
1111101	31.625	63.250	94.875	126.500	
1111110	31.750	63.500	95.250	127.000	
1111111	31.875	63.750	95.625	127.500	
LSB	0.125	0.250	0.375	0.500	

#### MEAS1 DRVB Current (0x1D)

BIT	7	6	5	4	3	2	1	0			
Field		MEAS1_DRVB_PA[7:0]									
Reset	0x00										
Access Type				Write,	Read						

## MEAS1\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS1 DRVC Current (0x1E)

BIT	7	6	5	4	3	2	1	0			
Field		MEAS1_DRVC_PA[7:0]									
Reset		0x00									
Access Type				Write,	Read						

#### MEAS1\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### MEAS2 Selects (0x20)

BIT	7	6	5	4	3	2	1	0	
Field	-	MEAS2_AM B	MEAS2_DRVC[1:0]		MEAS2_DRVB[1:0]		MEAS2_DRVA[1:0]		
Reset	-	0b0	0x0		0x0		0x0		
Access Type	-	Write, Read	Write,	Write, Read		Write, Read		Write, Read	

### MEAS2\_AMB

See MEAS1\_AMB for details.

#### MEAS2\_DRVC

See MEAS1\_DRVC[1:0] for details.

#### MEAS2\_DRVB

See MEAS1\_DRVB[1:0] for details.

#### MEAS2\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS2 Configuration 1 (0x21)

BIT	7	6	5	4	3	2	1	0	
Field	-	MEAS2_PP G2_PDSEL	MEAS2_PP G1_PDSEL	MEAS2_TINT[1:0]		MEAS2_AVER[2:0]			
Reset	-	0b0	0b0	0x3		0x0			
Access Type	-	Write, Read	Write, Read	Write, Read Write, Read		Write, Read			

#### MEAS2\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

### MEAS2\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

#### MEAS2\_TINT

See MEAS1\_TINT for details.

### MEAS2\_AVER

See MEAS1\_AVER[2:0] for details.

### MEAS2 Configuration 2 (0x22)

BIT	7	6	5	4	3	2	1	0	
Field	MEAS2_SI NC3_SEL	MEAS2_FIL T_SEL	MEAS2_LED_RGE[1:0]		MEAS2_PPG2_ADC_RGE [1:0]		MEAS2_PPG1_ADC_RGE [1:0]		
Reset	0b0	0b0	0x3		0x2		0x2		
Access Type	Write, Read	Write, Read	Write,	Write, Read		Write, Read		Write, Read	

#### MEAS2\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

### MEAS2\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS2\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS2\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS2\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

#### MEAS2 Configuration 3 (0x23)

BIT	7	6	5	4	3	2	1	0
Field	MEAS2_PD_SETLNG[1:0]		MEAS2_LED_SETLNG[1: 0]		MEAS2_PPG1_DACOFF[ 1:0]		MEAS2_PPG1_DACOFF[ 1:0]	
Reset	0	0x1		<b>k</b> 1	0x0 0x0		<b>(</b> 0	
Access Type	Write, Read		Write,	Read	Write, Read		Write, Read	

#### MEAS2\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

#### MEAS2\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

#### MEAS2\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

#### MEAS2\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

### MEAS2 DRVA Current (0x24)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS2_DRVA_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

#### MEAS2\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### MEAS2 DRVB Current (0x25)

BIT	7	6	5	4	3	2	1	0
Field				MEAS2_DR	VB_PA[7:0]			
Reset				0x	00			
Access Type				Write,	Read			

#### MEAS2\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### MEAS2 DRVC Current (0x26)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS2_DRVC_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

#### MEAS2\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS3 Selects (0x28)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS3_AM B	MEAS3_DRVC[1:0]		MEAS3_DRVB[1:0]		MEAS3_DRVA[1:0]	
Reset	-	0b0	0x1		0x0		0>	<b>(</b> 0
Access Type	_	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS3\_AMB

See MEAS1\_AMB for details.

#### MEAS3\_DRVC

See MEAS1\_DRVC[1:0] for details.

#### MEAS3\_DRVB

See MEAS1\_DRVB[1:0] for details.

#### MEAS3\_DRVA

See MEAS1\_DRVA[1:0] for details.

#### MEAS3 Configuration 1 (0x29)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS3_PP G2_PDSEL	MEAS3_PP G1_PDSEL	MEAS3_TINT[1:0] MEAS3_AVER[2:0]		:0]		
Reset	-	0b0	0b0	0:	0x3		0x0	
Access Type	-	Write, Read	Write, Read	Write, Read		Write, Read		

#### MEAS3\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

## MEAS3\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

#### MEAS3\_TINT

See MEAS1\_TINT for details.

#### MEAS3\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS3 Configuration 2 (0x2A)

BIT	7	6	5	4	3	2	1	0
Field	MEAS3_SI NC3_SEL	MEAS3_FIL T_SEL	MEAS3_LED_RGE[1:0]		MEAS3_PPG2_ADC_RGE [1:0]		MEAS3_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0>	k3	0>	<2	0x2	
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

#### MEAS3\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

#### MEAS3\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

### MEAS3\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

#### MEAS3\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

### MEAS3\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS3 Configuration 3 (0x2B)

BIT	7	6	5	4	3	2	1	0	
Field	MEAS3_PD_	SETLNG[1:0]	MEAS3_LED_SETLNG[1: 0]		MEAS3_PPG2_DACOFF[ 1:0]		MEAS3_PPG1_DACOFF[ 1:0]		
Reset	0)	0x1		x1	0x0		0>	<b>(</b> 0	
Access Type	Write,	Write, Read		Write, Read		Write, Read		Write, Read	

#### MEAS3\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

#### MEAS3\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

#### MEAS3\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

#### MEAS3\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

#### MEAS3 DRVA Current (0x2C)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS3_DRVA_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

### MEAS3\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS3 DRVB Current (0x2D)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS3_DRVB_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

#### MEAS3\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS3 DRVC Current (0x2E)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS3_DRVC_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

#### MEAS3\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

### MEAS4 Selects (0x30)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS4_AM B	MEAS4_DRVC[1:0]		MEAS4_DRVB[1:0]		MEAS4_DRVA[1:0]	
Reset	-	0b0	0x1		0:	<b>k</b> 0	0>	<b>(</b> 0
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

### MEAS4\_AMB

See MEAS1\_AMB for details.

#### MEAS4\_DRVC

See MEAS1\_DRVC[1:0] for details.

#### MEAS4\_DRVB

See MEAS1\_DRVB[1:0] for details.

#### MEAS4\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS4 Configuration 1 (0x31)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS4_PP G2_PDSEL	MEAS4_PP G1_PDSEL	MEAS4_TINT[1:0] MEAS4_AVER[2:0]			:0]	
Reset	-	0b0	0b0	0x3		0x0		
Access Type	-	Write, Read	Write, Read	Write, Read		Write, Read		

#### MEAS4\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

### MEAS4\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

#### MEAS4\_TINT

See MEAS1\_TINT for details.

### MEAS4\_AVER

See MEAS1\_AVER[2:0] for details.

### MEAS4 Configuration 2 (0x32)

BIT	7	6	5	4	3	2	1	0
Field	MEAS4_SI NC3_SEL	MEAS4_FIL T_SEL	MEAS4_LED_RGE[1:0]		MEAS4_PPG2_ADC_RGE [1:0]		MEAS4_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0x3		0x2		0x2	
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

#### MEAS4\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

### MEAS4\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS4\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS4\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS4\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

#### MEAS4 Configuration 3 (0x33)

BIT	7	6	5	4	3	2	1	0
Field	MEAS4_PD_SETLNG[1:0]		MEAS4_LED_SETLNG[1: 0]		MEAS4_PPG2_DACOFF[ 1:0]		MEAS4_PPG1_DACOFF[ 1:0]	
Reset	0x1		0x1		0x0		0x0	
Access Type	Write, Read		Write, Read		Write, Read		Write, Read	

#### MEAS4\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

#### MEAS4\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

#### MEAS4\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

#### MEAS4\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS4 DRVA Current (0x34)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS4_DRVA_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

## MEAS4\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS4 DRVB Current (0x35)

BIT	7	6	5	4	3	2	1	0	
Field				MEAS4_DR	VB_PA[7:0]				
Reset		0x00							
Access Type				Write,	Read				

## MEAS4\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### **MEAS4 DRVC Current (0x36)**

BIT	7	6	5	4	3	2	1	0	
Field		MEAS4_DRVC_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

## MEAS4\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS5 Selects (0x38)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS5_AM B	MEAS5_DRVC[1:0]		MEAS5_DRVB[1:0]		MEAS5_DRVA[1:0]	
Reset	-	0b0	0x1		0:	<b>k</b> 0	0>	<b>(</b> 0
Access Type	_	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS5\_AMB

See MEAS1\_AMB for details.

## MEAS5\_DRVC

See MEAS1\_DRVC[1:0] for details.

## MEAS5\_DRVB

See MEAS1\_DRVB[1:0] for details.

## MEAS5\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS5 Configuration 1 (0x39)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS5_PP G2_PDSEL	MEAS5_PP PG1_PDSE L	MEAS5_TINT[1:0] MEAS5_AVER[2:0]		:0]		
Reset	-	0b0	0b0	0:	0x3 0x0		0x0	
Access Type	-	Write, Read	Write, Read	Write, Read Write, Read				

## MEAS5\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

#### MEAS5\_PPPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

#### MEAS5\_TINT

See MEAS1\_TINT for details.

## MEAS5\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS5 Configuration 2 (0x3A)

BIT	7	6	5	4	3	2	1	0
Field	MEAS5_SI NC3_SEL	MEAS5_FIL T_SEL	MEAS5_LED_RGE[1:0]		MEAS5_PPG2_ADC_RGE [1:0]		MEAS5_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0>	k3	0)	<b>k</b> 2	0>	(2
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS5\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

## MEAS5\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

#### MEAS5\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS5\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS5\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS5 Configuration 3 (0x3B)

BIT	7	6	5	4	3	2	1	0
Field	MEAS5_PD_	SETLNG[1:0]	MEAS5_LED_SETLNG[1: 0]		MEAS5_PPG2_DACOFF[ 1:0]		MEAS5_PPG1_DACOFF[ 1:0]	
Reset	0)	0x1		x1	0x0		0>	<b>(</b> 0
Access Type	Write,	Read	Write, Read		Write, Read		Write, Read	

## MEAS5\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

## MEAS5\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

## MEAS5\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS5\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

#### MEAS5 DRVA Current (0x3C)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS5_DRVA_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

## MEAS5\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS5 DRVB Current (0x3D)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS5_DRVB_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

### MEAS5\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS5 DRVC Current (0x3E)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS5_DRVC_PA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

## MEAS5\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS6 Selects (0x40)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS6_AM B	MEAS6_DRVC[1:0]		MEAS6_DRVB[1:0]		MEAS6_DRVA[1:0]	
Reset	-	0b0	0x1		0:	к0	0>	<b>(</b> 0
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS6\_AMB

See MEAS1\_AMB for details.

## MEAS6\_DRVC

See MEAS1\_DRVC[1:0] for details.

## MEAS6\_DRVB

See MEAS1\_DRVB[1:0] for details.

## MEAS6\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS6 Configuration 1 (0x41)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS6_PP G2_PDSEL	MEAS6_PP G1_PDSEL	MEAS6_TINT[1:0] MEAS6			EAS6_AVER[2	:0]
Reset	-	0b0	0b0	0)	0x3		0x0	
Access Type	-	Write, Read	Write, Read	Write, Read		Write, Read		

## MEAS6\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

## MEAS6\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

## MEAS6\_TINT

See MEAS1\_TINT for details.

## MEAS6\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS6 Configuration 2 (0x42)

BIT	7	6	5	4	3	2	1	0
Field	MEAS6_SI NC3_SEL	MEAS6_FIL T_SEL	MEAS6_LED_RGE[1:0]		MEAS6_PPG2_ADC_RGE [1:0]		MEAS6_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0>	0x3		x2	0>	<2
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS6\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

## MEAS6\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS6\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS6\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS6\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS6 Configuration 3 (0x43)

BIT	7	6	5	4	3	2	1	0
Field	MEAS6_PD_SETLNG[1:0]		MEAS6_LED_SETLNG[1: 0]		MEAS6_PPG2_DACOFF[ 1:0]		MEAS6_PPG1_DACOFF[ 1:0]	
Reset	0	0x1		0x1		<b>(</b> 0	0x0	
Access Type	Write, Read		Write, Read		Write, Read		Write, Read	

## MEAS6\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

## MEAS6\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

## MEAS6\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS6\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS6 DRVA Current (0x44)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS6_DRVA_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

## MEAS6\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### MEAS6 DRVB Current (0x45)

BIT	7	6	5	4	3	2	1	0		
Field	MEAS6_DRVB_PA[7:0]									
Reset		0x00								
Access Type				Write,	Read					

#### MEAS6\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### **MEAS6 DRVC Current (0x46)**

BIT	7	6	5	4	3	2	1	0		
Field		MEAS6_DRVC_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

## MEAS6\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS7 Selects (0x48)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS7_AM B	MEAS7_DRVC[1:0]		MEAS7_DRVB[1:0]		MEAS7_DRVA[1:0]	
Reset	-	0b0	0x1		0x0		0>	<b>(</b> 0
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS7\_AMB

See MEAS1\_AMB for details.

## MEAS7\_DRVC

See MEAS1\_DRVC[1:0] for details.

## MEAS7\_DRVB

See MEAS1\_DRVB[1:0] for details.

## MEAS7\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS7 Configuration 1 (0x49)

BIT	7	6	5	4	3	2	1	0	
Field	-	MEAS7_PP G2_PDSEL	MEAS7_PP G1_PDSEL	MEAS7_TINT[1:0]		MEAS7_AVER[2:0]			
Reset	-	0b0	0b0	0:	0x3		0x0		
Access Type	-	Write, Read	Write, Read	Write, Read		Write, Read			

## MEAS7\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

## MEAS7\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

## MEAS7\_TINT

See MEAS1\_TINT for details.

## MEAS7\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS7 Configuration 2 (0x4A)

BIT	7	6	5	4	3	2	1	0
Field	MEAS7_SI NC3_SEL	MEAS7_FIL T_SEL	MEAS7_LED_RGE[1:0]		MEAS7_PPG2_ADC_RGE [1:0]		MEAS7_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0>	x3	0x2		0>	<2
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS7\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

## MEAS7\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS7\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS7\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS7\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS7 Configuration 3 (0x4B)

BIT	7	6	5	4	3	2	1	0
Field	MEAS7_PD_SETLNG[1:0]		MEAS7_LED_SETLNG[1: 0]		MEAS7_PPG2_DACOFF[ 1:0]		MEAS7_PPG1_DACOFF[ 1:0]	
Reset	0)	0x1		x1	0x0		0>	<b>(</b> 0
Access Type	Write, Read		Write,	Read	Write, Read		Write, Read	

## MEAS7\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

## MEAS7\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

## MEAS7\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS7\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS7 DRVA Current (0x4C)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS7_DRVA_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

## MEAS7\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS7 DRVB Current (0x4D)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS7_DRVB_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

## MEAS7\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS7 DRVC Current (0x4E)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS7_DRVC_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

## MEAS7\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS8 Selects (0x50)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS8_AM B	MEAS8_DRVC[1:0]		MEAS8_DRVB[1:0]		MEAS8_DRVA[1:0]	
Reset	-	0b0	0x1		0:	к0	0>	<b>(</b> 0
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS8\_AMB

See MEAS1\_AMB for details.

## MEAS8\_DRVC

See MEAS1\_DRVC[1:0] for details.

## MEAS8\_DRVB

See MEAS1\_DRVB[1:0] for details.

## MEAS8\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS8 Configuration 1 (0x51)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS8_PP G2_PDSEL	MEAS8_PP G1_PDSEL	MEAS8_TINT[1:0] MEAS8_AVER[2:0]		:0]		
Reset	-	0b0	0b0	0)	0x3		0x0	
Access Type	-	Write, Read	Write, Read	Write, Read		Write, Read		

## MEAS8\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

## MEAS8\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

## MEAS8\_TINT

See MEAS1\_TINT for details.

## MEAS8\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS8 Configuration 2 (0x52)

BIT	7	6	5	4	3	2	1	0
Field	MEAS8_SI NC3_SEL	MEAS8_FIL T_SEL	MEAS8_LED_RGE[1:0]		MEAS8_PPG2_ADC_RGE [1:0]		MEAS8_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0:	0x3		x2	0	k2
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS8\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

## MEAS8\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS8\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

## MEAS8\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS8\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS8 Configuration 3 (0x53)

BIT	7	6	5	4	3	2	1	0
Field	MEAS8_PD_SETLNG[1:0]		MEAS8_LED_SETLNG[1: 0]		MEAS8_PPG2_DACOFF[ 1:0]		MEAS8_PPG1_DACOFF[ 1:0]	
Reset	0	0x1		<b>k</b> 1	0x0		0x0	
Access Type	Write, Read		Write, Read		Write, Read		Write, Read	

## MEAS8\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

## MEAS8\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

## MEAS8\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS8\_PPG1\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS8 DRVA Current (0x54)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS8_DRVA_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

## MEAS8\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### MEAS8 DRVB Current (0x55)

BIT	7	6	5	4	3	2	1	0
Field				MEAS8_DR	VB_PA[7:0]			
Reset				0x	00			
Access Type				Write,	Read			

#### MEAS8\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

#### **MEAS8 DRVC Current (0x56)**

BIT	7	6	5	4	3	2	1	0	
Field		MEAS8_DRVC_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

## MEAS8\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS9 Selects (0x58)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS9_AM B	MEAS9_DRVC[1:0]		MEAS9_DRVB[1:0]		MEAS9_DRVA[1:0]	
Reset	-	0b0	0x1		0x0		0>	<b>(</b> 0
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS9\_AMB

See MEAS1\_AMB for details.

## MEAS9\_DRVC

See MEAS1\_DRVC[1:0] for details.

## MEAS9\_DRVB

See MEAS1\_DRVB[1:0] for details.

## MEAS9\_DRVA

See MEAS1\_DRVA[1:0] for details.

## MEAS9 Configuration 1 (0x59)

BIT	7	6	5	4	3	2	1	0
Field	-	MEAS9_PP G2_PDSEL	MEAS9_PP G1_PDSEL	MEAS9_TINT[1:0] MEAS9_AVER[2:0]		:0]		
Reset	-	0b0	0b0	0x3 0x0				
Access Type	-	Write, Read	Write, Read	Write, Read Write, Read				

#### MEAS9\_PPG2\_PDSEL

See MEAS1\_PPG2\_PDSEL for details.

## MEAS9\_PPG1\_PDSEL

See MEAS1\_PPG1\_PDSEL for details.

## **MEAS9\_TINT**

See MEAS1\_TINT for details.

#### MEAS9\_AVER

See MEAS1\_AVER[2:0] for details.

## MEAS9 Configuration 2 (0x5A)

BIT	7	6	5	4	3	2	1	0
Field	MEAS9_SI NC3_SEL	MEAS9_FIL T_SEL	MEAS9_LED_RGE[1:0]		MEAS9_PPG2_ADC_RGE [1:0]		MEAS9_PPG1_ADC_RGE [1:0]	
Reset	0b0	0b0	0>	0x3		<2	0>	<2
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

## MEAS9\_SINC3\_SEL

See MEAS1\_SINC3\_SEL for details.

## MEAS9\_FILT\_SEL

See MEAS1\_FILT\_SEL for details.

## MEAS9\_LED\_RGE

See MEAS1\_LED\_RGE[1:0] for details.

#### MEAS9\_PPG2\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_RGE[1:0] for details.

## MEAS9\_PPG1\_ADC\_RGE

See MEAS1\_PPG2\_ADC\_REG[1:0] for details.

## MEAS9 Configuration 3 (0x5B)

BIT	7	6	5	4	3	2	1	0	
Field	MEAS9_PD_	SETLNG[1:0]	MEAS9_LED	MEAS9_LED_SETLNG[1: 0]		MEAS9_PPG2_DACOFF[ 1:0]		61_DACOFF[ 0]	
Reset	0)	0x1		x1	0x0		0>	<b>(</b> 0	
Access Type	Write, Read		Write,	Write, Read		Write, Read		Write, Read	

## MEAS9\_PD\_SETLNG

See MEAS1\_PD\_SETLNG[1:0] for details.

## MEAS9\_LED\_SETLNG

See MEAS1\_LED\_SETLNG[1:0] for details.

## MEAS9\_PPG2\_DACOFF

See MEAS1\_PPG2\_DACOFF[1:0] for details.

## MEAS9\_PPG1\_DACOFF

See MEAS1\_PPG1\_DACOFF[1:0] for details.

## MEAS9 DRVA Current (0x5C)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS9_DRVA_PA[7:0]								
Reset		0x00								
Access Type				Write,	Read					

## MEAS9\_DRVA\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## MEAS9 DRVB Current (0x5D)

BIT	7	6	5	4	3	2	1	0		
Field		MEAS9_DRVB_PA[7:0]								
Reset		0x00								
Access Type		Write, Read								

### MEAS9\_DRVB\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## MEAS9 DRVC Current (0x5E)

BIT	7	6	5	4	3	2	1	0	
Field		MEAS9_DRVC_PA[7:0]							
Reset		0x00							
Access Type		Write, Read							

## MEAS9\_DRVC\_PA

See MEAS1\_DRVA\_PA[7:0] for details.

## THRESHOLD MEAS SEL (0x68)

BIT	7	6	5	4	3	2	1	0	
Field	THRESH2_MEAS_SEL[3:0]				THRESH1_MEAS_SEL[3:0]				
Reset	0x0				0x0				
Access Type	Write, Read				Write, Read				

#### THRESH2\_MEAS\_SEL

This field enables THRESH2 and assigns one of the nine measurements to the second instance of the threshold feature. THRESH2\_MEAS\_SEL[3:0] selects which of the MEASn (n = 1 to 9) is used for THRESH2\_HILO detect.

THRESH2_MEAS_SEL[3:0]	DECODE
0x0	THRESH2_HILO detect is disabled
0x1	MEAS1 selected
0x2	MEAS2 selected
0x3	MEAS3 selected
0x4	MEAS4 selected
0x5	MEAS5 selected
0x6	MEAS6 selected
0x7	MEAS7 selected
0x8	MEAS8 selected
0x9	MEAS9 selected
0xA to 0xF	RESERVED, THRESH2_HILO detect is disabled

## THRESH1\_MEAS\_SEL

This field enables THRESH1 and assigns one of the nine measurements to the first instance of the threshold feature. THRESH1\_MEAS\_SEL[3:0] selects which of the MEASn (n = 1 to 9) is used for THRESH1\_HILO detect.

THRESH1_MEAS_SEL[3:0]	DECODE
0x0	THRESH1_HILO detect is disabled
0x1	MEAS1 selected
0x2	MEAS2 selected
0x3	MEAS3 selected
0x4	MEAS4 selected
0x5	MEAS5 selected
0x6	MEAS6 selected

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

0x7	MEAS7 selected
0x8	MEAS8 selected
0x9	MEAS9 selected
0xA to 0xF	RESERVED, THRESH1_HILO detect is disabled

## **THRESHOLD HYST (0x69)**

BIT	7	6	5	4	3	2	1	0	
Field	THRESH2_ PPG_SEL	THRESH1_ PPG_SEL	_	TIME_HYST[1:0]		LEVEL_HYST[2:0]			
Reset	0b0	0b0	_	0x0		0x0			
Access Type	Write, Read	Write, Read	_	Write, Read		Write, Read			

## THRESH2\_PPG\_SEL

THRESH2\_PPG\_SEL sets which optical channel the threshold measurement 2 is applied. If THRESH2\_PPG\_SEL is set to 0 then the threshold measurement 2 is applied to optical channel 1. If THRESH2\_PPG\_SEL is set to 1 then threshold measurement 2 is applied to optical channel 2.

THRESH2_PPG_SEL	CHANNEL THAT THRESHOLD2 IS APPLIED			
0b0	Optical Channel 1			
0b1	Optical Channel 2			

## THRESH1\_PPG\_SEL

THRESH1\_PPG\_SEL sets which optical channel the threshold measurement 1 is applied. If THRESH1\_PPG\_SEL is set to 0 then the threshold measurement 1 is applied to optical channel 1. If THRESH1\_PPG\_SEL is set to 1 then threshold measurement 1 is applied to optical channel 2.

THRESH2_PPG_SEL	CHANNEL THAT THRESHOLD2 IS APPLIED
0b0	Optical Channel 1
0b1	Optical Channel 2

## TIME\_HYST

Time hysteresis sets the number of samples that the ambient light corrected exposure signal exceeds the THRESHOLDx\_UPPER or below THRESHOLDx\_LOWER before the threshold interrupt is set. The value of the ADC counts is applied at  $\pm 0.5 \times LEVEL_HYST$  around the THRESHOLDx\_UPPER and THRESHOLDx\_LOWER. Specifically, in order for an interrupt to be generated from the thresholding function, an ambient light corrected exposure must transition above the THRESHOLDx\_UPPER + 0.5  $\times LEVEL_HYST$  and stay above THRESHOLDx\_UPPER - 0.5  $\times LEVEL_HYST$  for TIME\_HYST samples or transition below THRESHOLDx\_LOWER - 0.5  $\times LEVEL_HYST$  and stay below THRESHOLDx\_LOWER + 0.5  $\times LEVEL_HYST$  for TIME\_HYST and stay below THRESHOLDx\_LOWER + 0.5  $\times LEVEL_HYST$  for TIME\_HYST samples to both instances of threshold interrupts.

TIME_HYST	NUMBER OF SAMPLES BEFORE INTERRUPT IS SET			
0b00	0, time hysteresis disabled			
0b01	2 samples			
0b10	4 samples			
0b11	8 samples			

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## LEVEL\_HYST

Level hysteresis sets the amount of ambient light corrected exposure hysteresis to apply to both instances of the threshold function. This value is in ADC counts and is applied at ±0.5 x LEVEL\_HYST around the THRESHOLDx\_UPPER and THRESHOLDx\_LOWER. Specifically, in order for an interrupt to be generated from the thresholding function, an ambient light corrected exposure must transition above the THRESHOLDx\_UPPER + 0.5 x LEVEL\_HYST and stay above THRESHOLDx\_UPPER - 0.5 x LEVEL\_HYST for TIME\_HYST samples or transition below THRESHOLDx\_LOWER - 0.5 x LEVEL\_HYST and stay below THRESHOLDx\_LOWER + 0.5 x LEVEL\_HYST for TIME\_HYST samples. LEVEL\_HYST parameter applies to both instances of threshold interrupts.

LEVEL_HYST	MAGNITUDE OF HYSTERESIS (LSBs)
0b000	0, Disable Level Hysteresis
0b001	2
0b010	4
0b011	8
0b100	16
0b101	32
0b110	64
0b111	128

#### PPG HI THRESHOLD1 (0x6A)

BIT	7	6	5	4	3	2	1	0	
Field		THRESHOLD1_UPPER[7:0]							
Reset	0xFF								
Access Type		Write, Read							

## THRESHOLD1\_UPPER

Upper threshold for instance 1. Each LSB of the threshold represents 2048 LSBs the ambient light exposure code.

It is important to program the THRESHOLD1\_UPPER to be greater than the THRESHOLD1\_LOWER. Otherwise, the interrupt behavior is undefined.

THRESHOLD1_UPPER	AMBIENT LIGHT CORRECTED EXPOSURE SIGNAL
0x0	0, upper threshold is disabled
0x1	2048
0x2	4096
0x3	6144
•	•
•	•
•	•
0xFD	518144
0xFE	520192
0xFF	522240

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## PPG LO THRESHOLD1 (0x6B)

BIT	7	6	5	4	3	2	1	0	
Field		THRESHOLD1_LOWER[7:0]							
Reset	0x00								
Access Type		Write, Read							

## THRESHOLD1\_LOWER

Lower threshold for instance 1. Each LSB of the threshold represents 2048 LSBs the ambient light exposure code. It is important to program the THRESHOLD1\_UPPER to be greater than the THRESHOLD1\_LOWER. Otherwise, the interrupt behavior is undefined.

THRESHOLD1_LOWER	AMBIENT LIGHT CORRECTED EXPOSURE SIGNAL
0x0	0, lower threshold is disabled
0x1	2048
0x2	4096
0x3	6144
•	•
•	•
•	•
0xFD	518144
0xFE	520192
0xFF	522240

## PPG HI THRESHOLD2 (0x6C)

BIT	7	6	5	4	3	2	1	0	
Field		THRESHOLD2_UPPER[7:0]							
Reset	0xFF								
Access Type		Write, Read							

## THRESHOLD2\_UPPER

Upper threshold for instance 2. Each LSB of the threshold represents 2048 LSBs the ambient light exposure code.

It is important to program the THRESHOLD2\_UPPER to be greater than the THRESHOLD2\_LOWER. Otherwise, the interrupt behavior is undefined.

THRESHOLD2_UPPER	AMBIENT LIGHT CORRECTED EXPOSURE SIGNAL
0x0	0, upper threshold is disabled
0x1	2048
0x2	4096
0x3	6144
•	•
•	•
•	•
0xFD	518144

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

0xFE	520192
0xFF	522240

## PPG LO THRESHOLD2 (0x6D)

BIT	7	6	5	4	3	2	1	0	
Field		THRESHOLD2_LOWER[7:0]							
Reset	0x00								
Access Type		Write, Read							

## THRESHOLD2\_LOWER

Lower threshold for instance 2. Each LSB of the threshold represents 2048 LSBs the ambient light exposure code. It is important to program the THRESHOLD2\_UPPER to be greater than the THRESHOLD2\_LOWER. Otherwise, the interrupt behavior is undefined.

THRESHOLD2_LOWER	AMBIENT LIGHT CORRECTED EXPOSURE SIGNAL
0x0	0, lower threshold is disabled
0x1	2048
0x2	4096
0x3	6144
•	•
•	•
•	•
0xFD	518144
0xFE	520192
0xFF	522240

## Picket Fence Measurement Select (0x70)

BIT	7	6	5	4	3	2	1	0	
Field		PPG2_PF_M	EAS_SEL[3:0]		PPG1_PF_MEAS_SEL[3:0]				
Reset		0)	<b>k</b> 0		0x0				
Access Type	Write, Read					Write,	Read		

## PPG2\_PF\_MEAS\_SEL

PPG2\_PF\_MEAS\_SEL[3:0] selects LED measurement for optical channel 2 for picket fence detect-and-replace.

PPGX_PF_SEL[3:0] (X= 1, 2)	ENUMERATION	DECODE
0x0	DISABLE	Picket fence detect disabled
0x1	MEAS1	Picket Fence detect and replace is done on measurement programmed in MEAS1 Setup registers for Optical Channel x

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

0x2	MEAS2	Picket Fence detect and replace is done on measurement programmed in MEAS2 Setup registers for Optical Channel x
0x3	MEAS3	Picket Fence detect and replace is done on measurement programmed in MEAS3 Setup registers for Optical Channel x
0x4	MEAS4	Picket Fence detect and replace is done on measurement programmed in MEAS4 Setup registers for Optical Channel x
0x5	MEAS5	Picket Fence detect and replace is done on measurement programmed in MEAS5 Setup registers for Optical Channel x
0x6	MEAS6	Picket Fence detect and replace is done on measurement programmed in MEAS6 Setup registers for Optical Channel x
0x7	MEAS7	Picket Fence detect and replace is done on measurement programmed in MEAS7 Setup registers for Optical Channel x
0x8	MEAS8	Picket Fence detect and replace is done on measurement programmed in MEAS8 Setup registers for Optical Channel x
0x9	MEAS9	Picket Fence detect and replace is done on measurement programmed in MEAS9 Setup registers for Optical Channel x
0xA to 0xF	RESERVED	Picket Fence detect disabled

## PPG1\_PF\_MEAS\_SEL

See PPG2\_PF\_MEAS\_SEL[3:0] for details.

## Picket Fence Configuration (0x71)

BIT	7	6	5	4	3	2	1	0
Field	-	PF_ORDER	IIR_TC[1:0]		IIR_INIT_VALUE[1:0]		THRESHOLD_SIGMA_M ULT[1:0]	
Reset	-	0x1	0x00		0x00		0x00	
Access Type	-	Write, Read	Write, Read		Write, Read		Write, Read	

## PF\_ORDER

PF\_ORDER determines which prediction method is used: the last sample or a linear fit to the previous four samples. Refer to the Picket Fence Detect-and-Replace Function section for details.

VALUE	ENUMERATION	DECODE			
0	OFF	Last Sample (1 point)			
1	ON	Fit 4 points to a line for prediction (default)			

## Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## IIR\_TC

IIR\_TC[1:0] determines the IIR filter bandwidth where the lowest setting has the narrowest bandwidth of a first-order filter.

Refer to the Picket Fence Detect-and-Replace Function section for details.

IIR_TC[1:0]	COEFFICIENT	SAMPLES TO 90%
00	1/64	146
01	1/32	72
10	1/16	35
11	1/8	17

## IIR\_INIT\_VALUE

This IIR filter estimates the true standard deviation between the actual and predicted sample and tracks the ADC Range setting.

Refer to the Picket Fence Detect-and-Replace Function section for details.

IIR_INIT_VALUE[1:0]	CODE
00	64
01	48
10	32
11	24

## THRESHOLD\_SIGMA\_MULT

GAIN resulting from the SIGMA\_MULT[1:0] setting determines the number of standard deviations of the delta between the actual and predicted sample beyond which a picket-fence event is triggered.

Refer to the Picket Fence Detect-and-Replace Function section for details.

THRESHOLD_SIGMA_MULT[1:0]	GAIN
00	4
01	8
10	16
11	32

## Interrupt1 Enable 1 (0x78)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL_E N1	FRAME_RD Y_EN1	FIFO_DATA _RDY_EN1	ALC_OVF_ EN1	EXP_OVF_ EN1	THRESH2_ HILO_EN1	THRESH1_ HILO_EN1	LED_TX_E N1
Reset	0b0	0b0	0b0	0b0	0b0	0x0	0b0	0b0
Access Type	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read

## A\_FULL\_EN1

If this bit is set to 1, INT1 is activated when the A\_FULL bit in the Status 1 Register is asserted.

## FRAME\_RDY\_EN1

If this bit is set to 1, INT1 is activated when the FRAME\_RDY bit in the Status 1 Register is asserted.

## FIFO\_DATA\_RDY\_EN1

If this bit is set to 1, INT1 is activated when the FIFO\_DATA\_RDY bit in the Status 1 Register is asserted.

## ALC\_OVF\_EN1

If this bit is set to 1, INT1 is activated when the ALC\_OVF bit in the Status 1 Register is asserted.

## EXP\_OVF\_EN1

If this bit is set to 1, INT1 is activated when the EXP\_OVF bit in the Status 1 Register is asserted.

## THRESH2\_HILO\_EN1

If this bit is set to 1, INT1 is activated when the THRESH2\_HILO bit in the Status 1 Register is asserted.

## THRESH1\_HILO\_EN1

If this bit is set to 1, INT1 is activated when the THRESH1\_HILO bit in the Status 1 Register is asserted.

## LED\_TX\_EN1

If this bit is set to 1, INT1 is activated 500ns before any of the nine LED Driver pins, LEDn\_DRV (n = 1 to 9) gets asserted. This feature can be used in combination with the MAX20345 boost converter to switch it from a fully "off" state to a fully "on" state; thus, reducing the boost quiescent power and the effects of boost ripple on the MAX86171.

The application should not set any of the other bits in the Interrupt 1 Enable Registers when LED\_TX\_EN1 is set to 1.

## Interrupt1 Enable 2 (0x79)

BIT	7	6	5	4	3	2	1	0
Field	LED9_COM PB_EN1	VDD_OOR_ EN1	-	-	-	INVALID_C FG_EN1	_	-
Reset	0b0	0b0	-	—	—	0b0	—	-
Access Type	Write, Read	Write, Read	-	-	-	Write, Read	-	_

## LED9\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED9\_COMPB bit in the Status 2 Register is asserted.

## VDD\_OOR\_EN1

If this bit is set to 1, INT1 is activated when the VDD\_OOR bit in the Status 2 Register is asserted. If both VDD\_OOR\_EN1 and VDD\_OOR\_EN2 are set to 0 then the OOR circuit is shutdown.

## INVALID\_CFG\_EN1

If this bit is set to 1, INT1 is activated when the INVALID\_CFG bit in the Status 2 Register is asserted.

## Interrupt1 Enable 3 (0x7A)

BIT	7	6	5	4	3	2	1	0
Field	LED8_COM PB_EN1	LED7_COM PB_EN1	LED6_COM PB_EN1	LED5_COM PB_EN1	LED4_COM PB_EN1	LED3_COM PB_EN1	LED2_COM PB_EN1	LED1_COM PB_EN1
Reset	0b0							
Access Type	Write, Read							

## LED8\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED8\_COMPB bit in the Status 3 Register is asserted.

## LED7\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED7\_COMPB bit in the Status 3 Register is asserted.

## LED6\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED6\_COMPB bit in the Status 3 Register is asserted.

## LED5\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED5\_COMPB bit in the Status 3 Register is asserted.

## LED4\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED4\_COMPB bit in the Status 3 Register is asserted.

## LED3\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED3\_COMPB bit in the Status 3 Register is asserted.

## LED2\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED2\_COMPB bit in the Status 3 Register is asserted.

## LED1\_COMPB\_EN1

If this bit is set to 1, INT1 is activated when the LED1\_COMPB bit in the Status 3 Register is asserted.

## Interrupt2 Enable 1 (0x7C)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL_E N2	FRAME_RD Y_EN2	FIFO_DATA _RDY_EN2	ALC_OVF_ EN2	EXP_OVF_ EN2	THRESH2_ HILO_EN2	THRESH1_ HILO_EN2	LED_TX_E N2
Reset	0b0	0b0	0b0	0b0	0b0	0b0	0b0	0b0
Access Type	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read

## A\_FULL\_EN2

If this bit is set to 1, INT2 is activated when the A\_FULL bit in the Status 1 Register is asserted

## FRAME\_RDY\_EN2

If this bit is set to 1, INT2 is activated when the FRAME\_RDY bit in the Status 1 Register is asserted.

## FIFO\_DATA\_RDY\_EN2

If this bit is set to 1, INT2 is activated when the FIFO\_DATA\_RDY bit in the Status 1 Register is asserted.

## ALC\_OVF\_EN2

If this bit is set to 1, INT2 is activated when the ALC\_OVF bit in the Status 1 Register is asserted

## EXP\_OVF\_EN2

If this bit is set to 1, INT2 is activated when the EXP\_OVF bit in the Status 1 Register is asserted.

## THRESH2\_HILO\_EN2

If this bit is set to 1, INT2 is activated when the THRESH2\_HILO bit in the Status 1 Register is asserted.

## THRESH1\_HILO\_EN2

If this bit is set to 1, INT2 is activated when the THRESH1\_HILO bit in the Status 1 Register is asserted.

#### LED\_TX\_EN2

If this bit is set to 1, INT2 is activated 500ns before any of the nine LED Driver pins, LEDn\_DRV (n = 1 to 9) gets asserted. This feature can be used in combination with MAX20345 boost converter to switch it from a fully "off" state to a fully "on" state; thus, reducing the boost quiescent power and the effects of boost ripple on the MAX86171.

The application should not set any of the other bits in the Interrupt 2 Enable Registers when LED\_TX\_EN2 is set to 1.

#### Interrupt2 Enable 2 (0x7D)

BIT	7	6	5	4	3	2	1	0
Field	LED9_COM PB_EN2	VDD_OOR_ EN2	-	-	-	INVALID_C FG_EN2	_	_
Reset	0b0	0b0	-	-	-	0b0	—	-
Access Type	Write, Read	Write, Read	-	_	-	Write, Read	_	_

#### LED9\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED9\_COMPB bit in the Status 2 Register is asserted.

#### VDD\_OOR\_EN2

If this bit is set to 1, INT2 is activated when the VDD\_OOR bit in the Status 2 Register is asserted. If both VDD\_OOR\_EN1 and VDD\_OOR\_EN2 are set to 0 then the OOR circuit is shutdown

## INVALID\_CFG\_EN2

If this bit is set to 1, INT2 is activated when the INVALID\_CFG bit in the Status 2 Register is asserted.

#### Interrupt2 Enable 3 (0x7E)

BIT	7	6	5	4	3	2	1	0
Field	LED8_COM PB_EN2	LED7_COM PB_EN2	LED6_COM PB_EN2	LED5_COM PB_EN2	LED4_COM PB_EN2	LED3_COM PB_EN2	LED2_COM PB_EN2	LED1_COM PB_EN2
Reset	0b0							
Access Type	Write, Read							

## LED8\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED8\_COMPB bit in the Status 3 Register is asserted.

## LED7\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED7\_COMPB bit in the Status 3 Register is asserted.

#### LED6\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED6\_COMPB bit in the Status 3 Register is asserted.

## LED5\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED5\_COMPB bit in the Status 3 Register is asserted.

## LED4\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED4\_COMPB bit in the Status 3 Register is asserted.

## LED3\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED3\_COMPB bit in the Status 3 Register is asserted.

## LED2\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED2\_COMPB bit in the Status 3 Register is asserted.

## LED1\_COMPB\_EN2

If this bit is set to 1, INT2 is activated when the LED1\_COMPB bit in the Status 3 Register is asserted.

#### Part ID (0xFF)

BIT	7	6	5	4	3	2	1	0	
Field		PART_ID[7:0]							
Reset		0x2C							
Access Type				Read	Only				


## PART\_ID

This register stores the part identifier for the chip.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## **Typical Application Circuits**




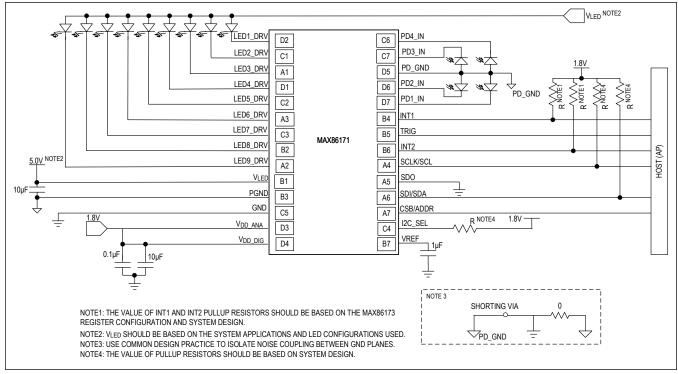

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## **Typical Application Circuits (continued)**



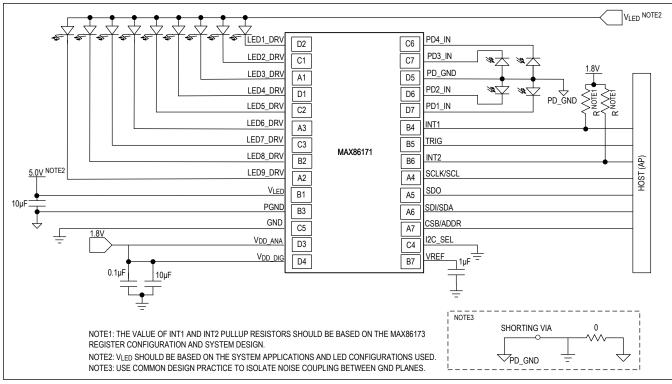

## **Ordering Information**

PART NUMBER	TEMP.RANGE	BUMP
MAX86171ENI+	-40°C to +85°C	28 WLP
MAX86171ENI+T	-40°C to +85°C	28 WLP

+Denotes a lead(Pb)-free/RoHS-compliant package.

T = Tape and reel.

# Low-Noise AFE for Pulse Oximeter and Heart Rate Monitor

## **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	5/19	Initial release	_
1	2/21	Updated the Benefits and Features, Simplified Block Diagram, Pin Description, Detailed Description, Optical Receiver Overview, Scan Modes, Scan_Mode_, Measurement Sequence Control (address 0x0C to address 0x0D), Picket Fence Detect-and-Replace Function, and Typical Application Circuits sections; replaced Figures 18–21; updated Register Bits FR_CLK_DIV_H	1, 7, 18–21, 27, 34, 40–42, 65, 102–103
2	10/21	Updated title, Simplified Block Diagram, Absolute Maximum Ratings, replaced Figure 4, 18–21, updated FiFO_A_FULL (address 0x09), Slave Address, Typical Application Circuits I <sup>2</sup> C Mode, Typical Application Circuits SPI Mode, and PWR_RDY	1, 3, 20, 28, 36, 38–40, 48, 97, 98
3	12/21	Updated Ordering Information	98
4	06/22	Updated Ordering Information	98



Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.